



Upgrade · The Home Creator Way

UNIVERSAL TV STAND


MODEL:TC10

VEVOR Support Center



TC10

MODEL:TC10

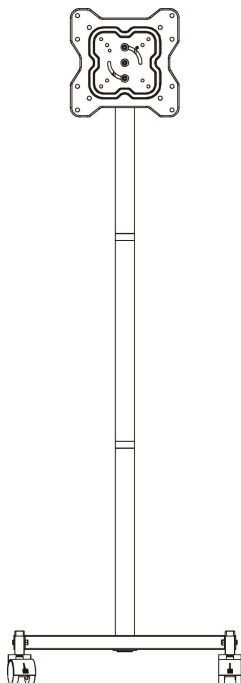

75*75
100*100
150*150
200*100
200*200



CAUTION: DO NOT EXCEED
RATED LISTED WEIGHT. SERIOUS
INJURY OR PROPERTY DAMAGE
MAY OCCUR!

TC10

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Before installation, please ensure that your TV stand mounting holes, dimensions, and weight can meet the specifications and standards of the TV stand. If you have any questions or questions about the instructions and warnings, please contact us for help..



Important:

1. When installing the support, please use professional safety devices and tools in accordance with the requirements of the assembly instructions. Improper installation may cause the TV to fall or serious injury.
2. Before installation, ensure that the support surface can safely support the weight of the device and all accessories.
3. Please do not exceed the intended load capacity, otherwise it may cause serious injury or property damage.
4. This product contains small parts, swallowing them may cause choking hazards. Please keep out of reach of children.
5. This product is only suitable for indoor use, outdoor use may cause product damage and personal injury risk.
6. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Children shall not play with the appliance.
9. This appliance shall not be used by children. Keep the appliance out of reach of children.


10. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
11. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
12. Please use the product according to the intended use, warn of potential injury from misuse.

Maintenance:


Please check the connection between the bracket and the TV periodically to ensure it remains stable, and verify that the screws have not loosened or fallen off due to long-term use (at least once every three months). If any security risks are identified, replace or reinforce the parts promptly.

SAVE THIS MANUAL

PARTS LIST



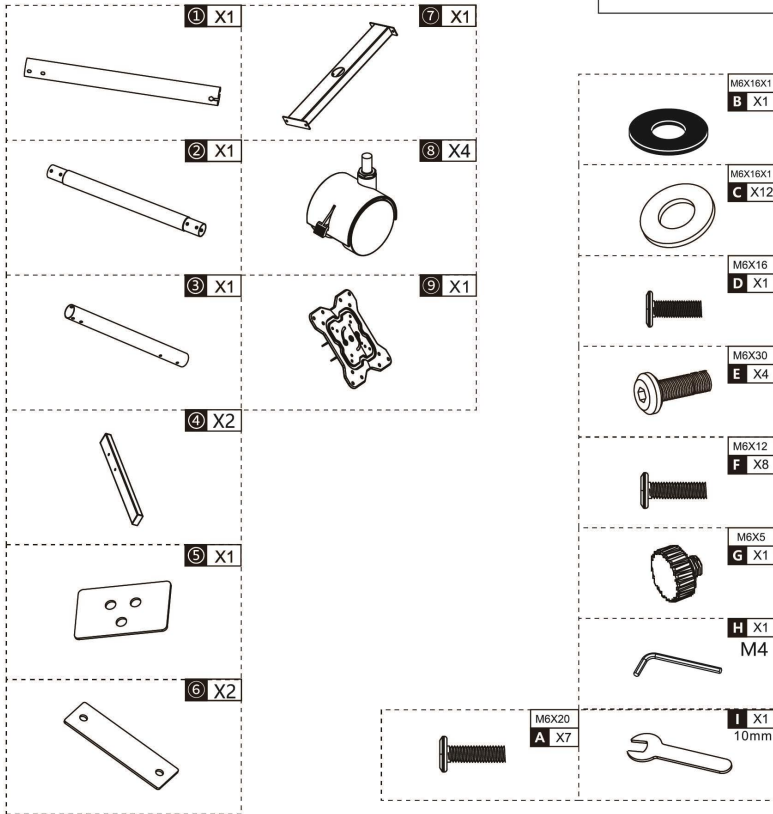


FOR TV INSTALLATION





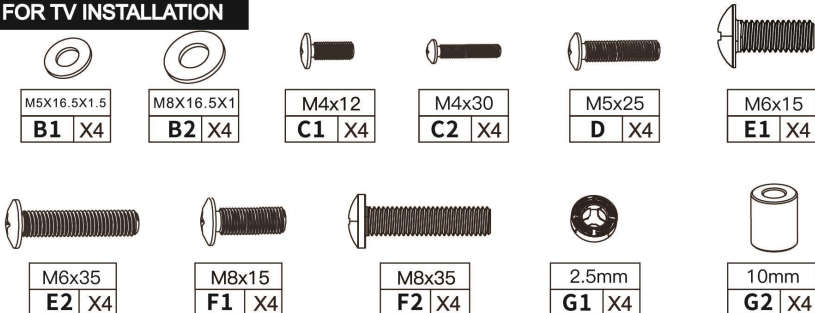


ASSEMBLY STEP




1

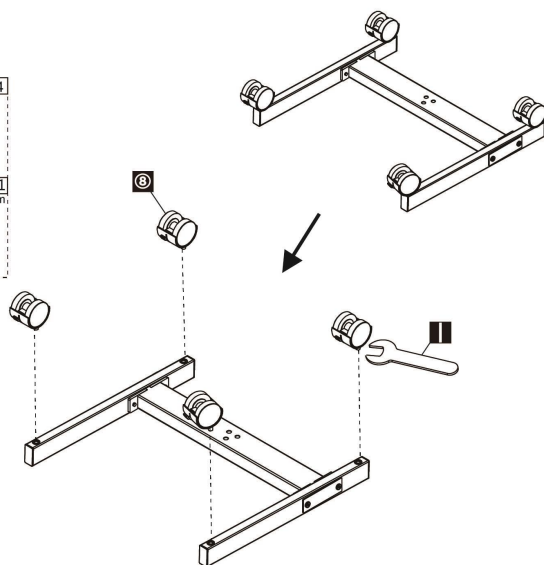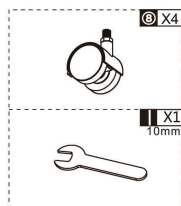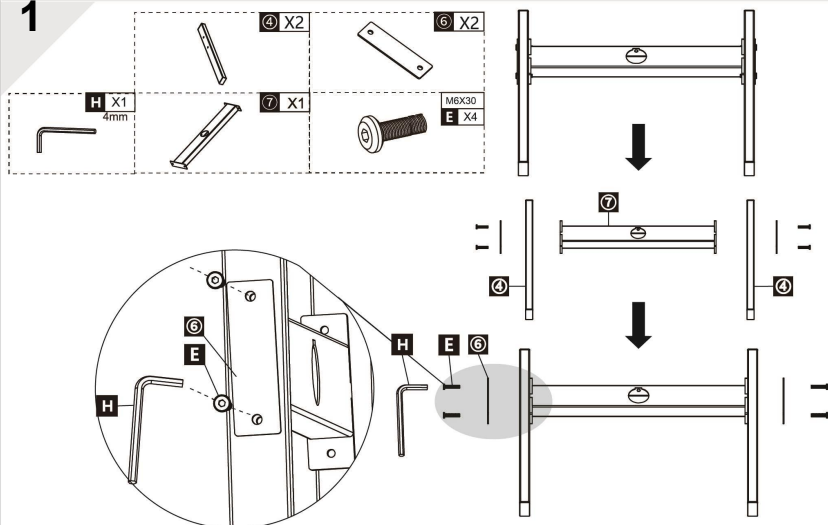

2

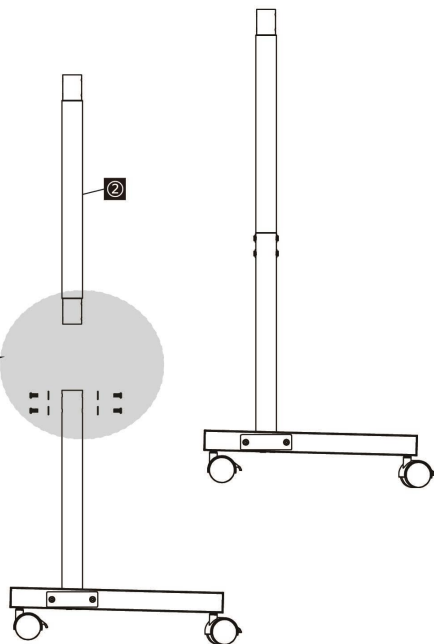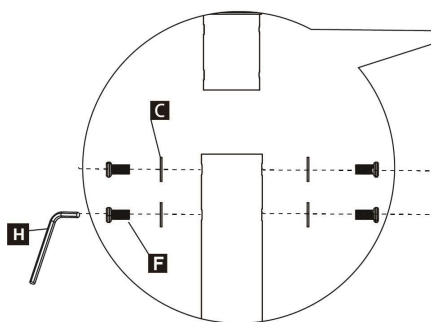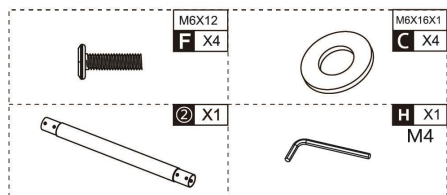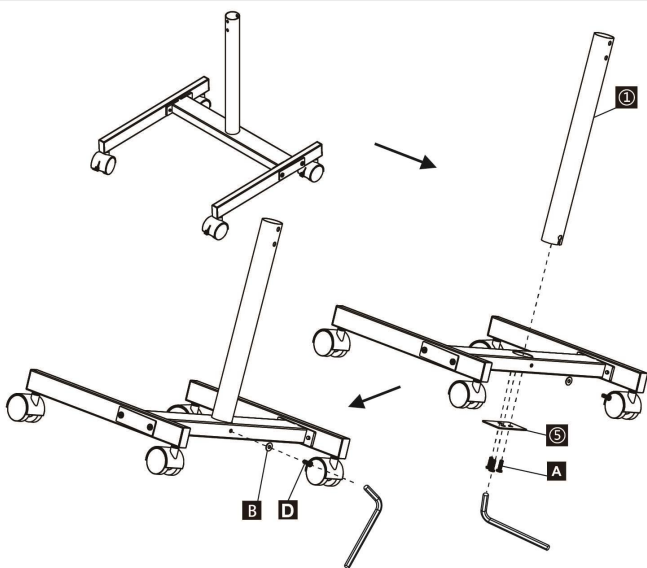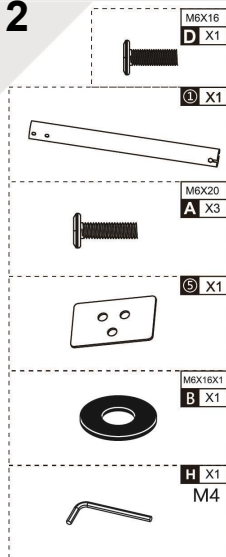


3

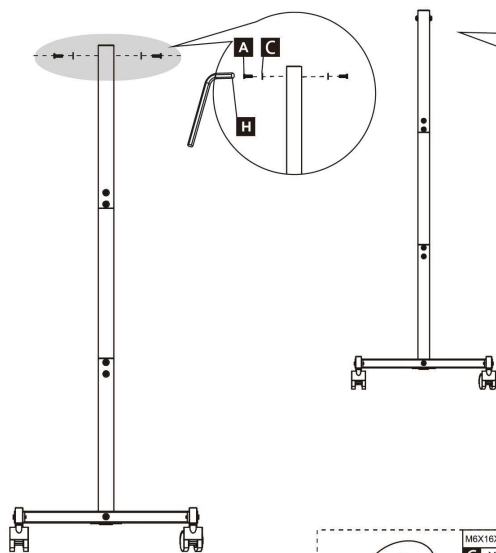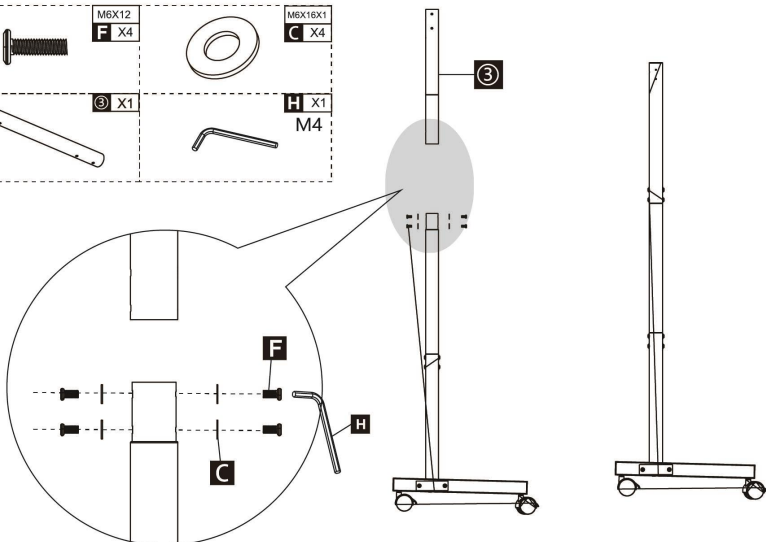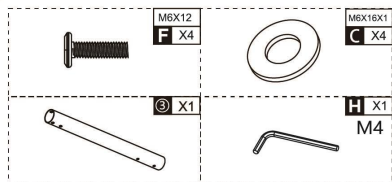


4

Measure the TV fixing holes Width and Height

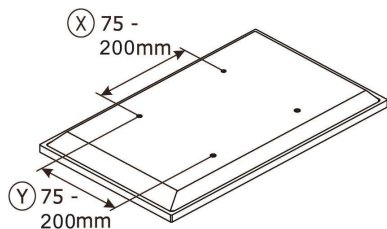

If width (X) is greater than 200mm or height (Y) greater than 200mm STOP installation now and contact the customer help line

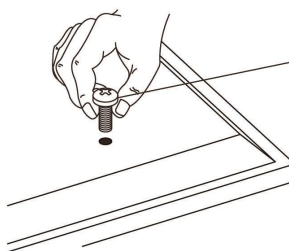

C1-2

D

E1-E2




F1-2

You are provided with 4 diameters of TV fixing screws, **M4, M5, M6** and **M8**. Determine the screw diameter that fits.

Spacers


SP

For TVs with irregular/obstructed back

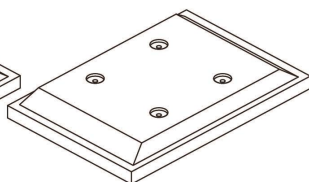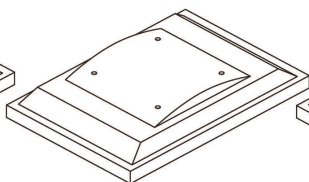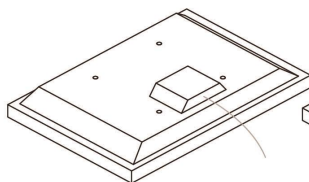





No Spacers

For TVs with flat/unobstructed back

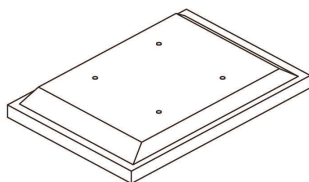

WARNING

 please keep for future reference.

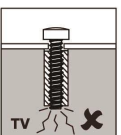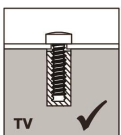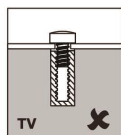


5



C1-2
D
E1-2
F1-2

NOT INCLUDED

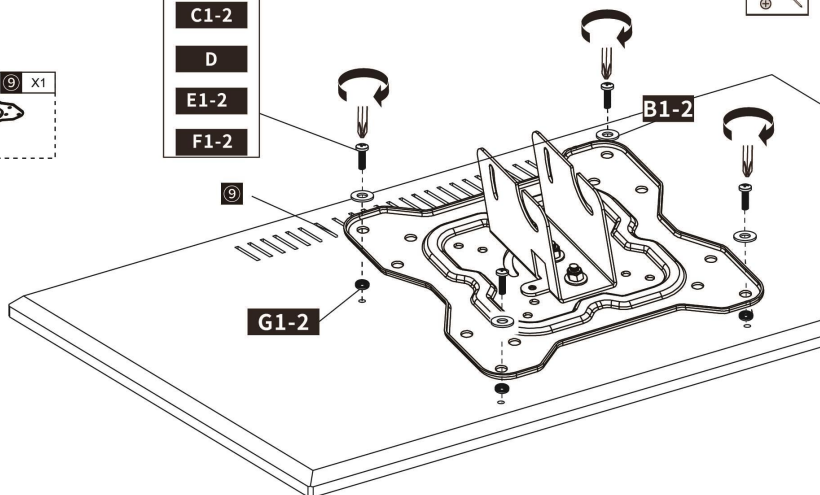

M4/M5
C1-2, D X4

+



D5 Washer
B1 X4

+



+



G1-2
X4



M6
E1-2 X4

+



D8 Washer
B2 X4

+



+



G1-2
X4



M8
F1-2 X4

+



D8 Washer
B2 X4

+




+



G1-2
X4

Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

6

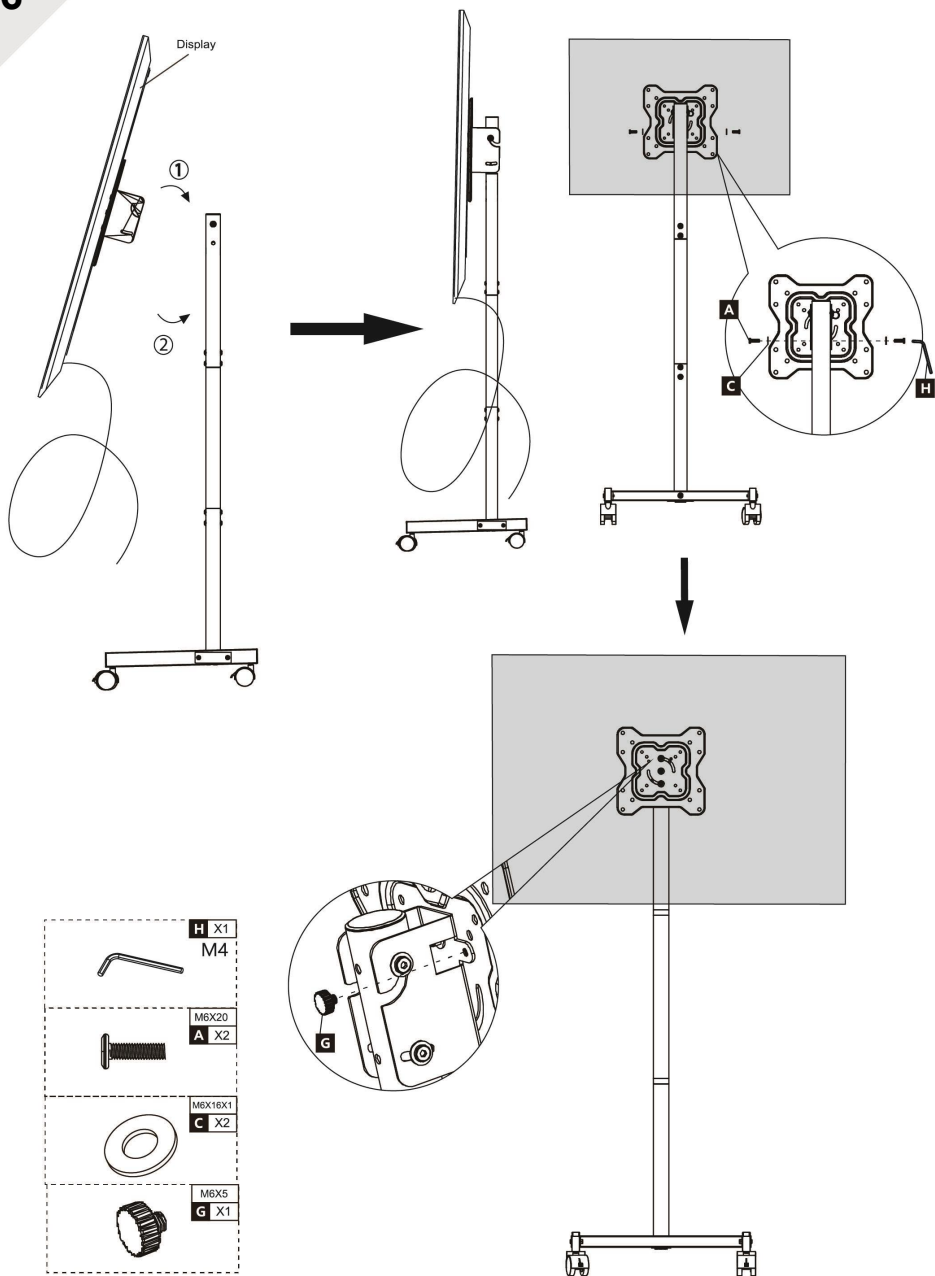

PRODUCT PARAMETER

Model	TC10
Safe Loading Weight	44 LBS
Product Size	470*420*1365mm

