



Upgrade · The Home Creator Way

CHIMINEAS

MODEL:81034

VEVOR Support Center



81034

MODEL:81034



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Warning-To reduce the risk of injury, user must read instructions manual carefully.



The product complies with relevant standards and regulations.



Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.


PARAMETER LIST

model	81034
product size	φ500*1100mm
net weight(kg)	9.4

PART LIST

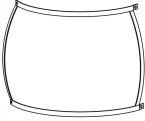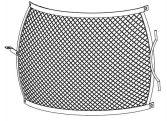No	Components	Picture	QTY
A	Lid		1
B	Top fule		1
C1	Mesh body (L)		1
C2	Mesh body (R)		1
D	Mesh door frame		1
E	Mesh door		1

  F	Legs		3
G	Log grate		1
H	BBQ grate		1
I	Ash tray		1
M	Base fule		1
N	Steel pan		1
J	Pin		1
T	Bolts (M6*15mm)		15
U	Washer		15
V	Nut		15
W	Rain cover		1
X	Poker		1

 Y	Wrench		1
Z	Allen wrench		1

SECURITY & WARNINGS

Outdoor Chimenea & Fire Pit User Guide

Please be careful and cautious when using this product. This product is for outdoor use and will become very hot during use.

Before Setting Up

This product should only be used outdoors. If setting up on a patio, the area should be cleared, and the roof should be open so any smoke can escape. Set up on a flat surface, away from anything that could pose a fire threat. As this item is low to the ground, always keep an eye on the fire.

Warning

1. DO NOT use if you suffer from heart and lung conditions because smoke inhalation may exacerbate existing conditions.
2. DO NOT move the product when it is burning.
3. DO NOT sit too close to the burning product.
4. DO NOT overfill the fire pit during use.
5. DO NOT use accelerants to light the fire.
6. DO NOT use in inclement weather.
7. Keep flammable liquid well away from the product as some flammable liquids can catch fire from the emitting heat.
8. Only handle the product with the poker if you had to.
9. Keep a considerable distance away from the product. Keep kids and pets away from the product.

10. Only adults can set up and maintain products.

11. Keep the set-up area clear from any combustible materials. Dry leaves, paper, dry grass or pine needles can catch fire easily from the embers that come out of the product.

12. Once lit, approach the product with caution to avoid slipping and falling into it.

"WARNING: HIGH TEMPERATURE – Glass and metal parts become extremely hot during use. Do not touch without protection.

KEEP CHILDREN AND PETS AWAY – This is not a toy. Risk of burns or breakage.

FOR OUTDOOR USE ONLY – Do not use indoors or in enclosed spaces.

DO NOT COVER WITH FLAMMABLE MATERIALS – Risk of fire.

USE ON A STABLE, NON-FLAMMABLE SURFACE – Avoid uneven or combustible grounds

GLASS MAY BREAK IF IMPACTED – Handle with care. Wear gloves during assembly."

Considerations Before Use

Check with your fire department for information on burning bans and chimenea & fire pit regulations in your area. Chimenea & Fire pits can remain hot and smoulder for few hours after the visible fire has been extinguished. Smouldering chimenea or fire pits are a common cause of injuries and burns, especially for children.

The surface of this product will discolour when placed outdoors and from first use, due to the nature of the product and the heat/naked flames.

Choosing a Location For Setup

Chimenea or Fire pits need to be placed in a safe location. Do not place them near buildings,walls,outdoor furniture,inflatable pools or other flammable items. Or nearby items could catch fire from heat

or flames. Position on a non flammable surface, clear of overhanging objects.

Using The Chimenea Or Fire Pits

The product is for outdoor use only, and will become very hot during use. To maintain the coating color, cover the bottom of the fire bowl with small stones or sandstone before each use

Using the wrong materials inside a fire pit can be dangerous. Make sure to use only coal or wood.

Do not use highly flammable items such as clothing, rags, paper towels, tissues or other items that could burn uncontrollably.

Do not use petrol, lighter fuel, alcohol or similar substances to light a fire. Never leave the product unattended.

Wind

Chimenea or Fire pits should be protected from wind and not used when winds are high or gusty. Wind causes the smoke and fire to blow around, which could spread burning embers. When using Chimenea or Fire pits during light breezes, keep an eye on it to ensure no small embers escape. Do not place Chimenea or Fire pits near anything that could catch fire.

People & Pets

Supervised Children and Pets when the fire pit is in use.

Ensure that everyone near the Chimenea or Fire pits understands it is an active fire and can produce smoke and embers. Do not allow children or animals to get close to Chimenea or Fire pits to avoid smoke inhalation and burns.

The Chimenea or Fire pits will get very hot and could burn someone if they get too close.

Extinguishing The Fire Properly

Chimenea or Fire pits are dangerous if the fire is not extinguished properly. Do not extinguish the fire by pouring water into a hot fire bowl because this

may cause distortion, rust or flaking paint. Fire should be allowed to die out on its own, or extinguished with a fire extinguisher. Its important to note that fire can continue to smoulder and embers remain hot even if there is no visible flame. Make sure to stay near the fire pit after the flame is out to check for burning embers or smoke, which could indicate that a live fire still exists. When in doubt, after the bowl has been allowed plenty of time to cool down, fill the inside of the fire pit with water to make sure all the fire is out. The fire pit could still be hot for hours after use.


DO NOT USE A CHEMICAL BASED CLEANER as this may ignite a flame on next use.

Storage


It is best to keep the Chimenea or Fire pits out of the rain. After you are sure the fire is completely extinguished, clean it out and store it away so it does not get wet from outdoor conditions.

OPERATION


1.Assemble Legs (F) to Base fule (M) with 6 x Bolts (T), 6 x Washers (U), 6 x Nuts (V).

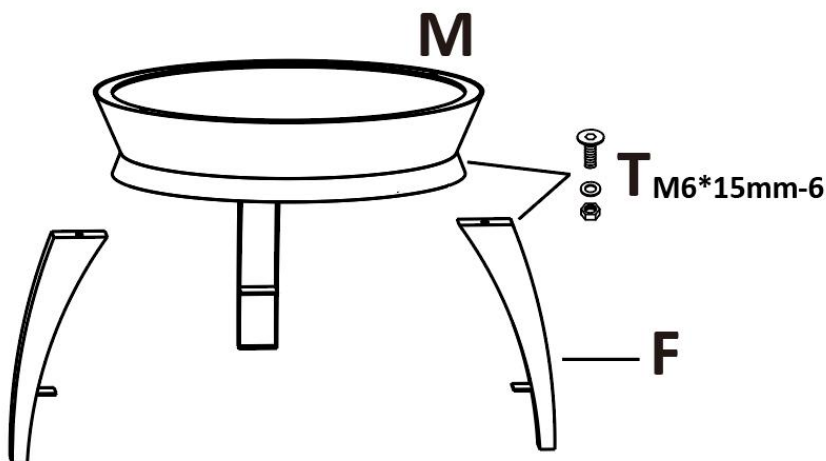


2.Assemble Steel pan (N) with legs with 3 x Bolts (T), 3 x Washers (U), 3 x Nuts (V).

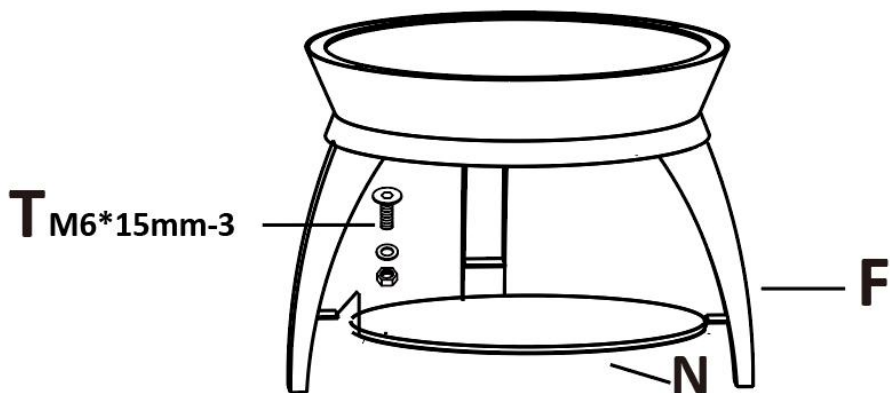


3.Assemble Mesh body (C1, C2) and Mesh door frame (D) together with Base fule (M) with 3 x Bolts (T), 3 x Washers (U), 3 x Nuts (V).

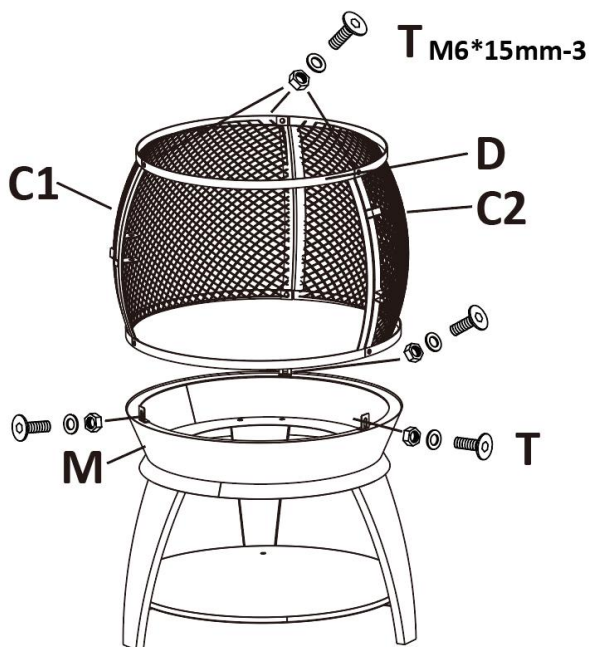


4. Assemble the Top fule (B) with Mesh Body with 3 x Bolts (T), 3 x Washers (U), 3 x Nuts (V).

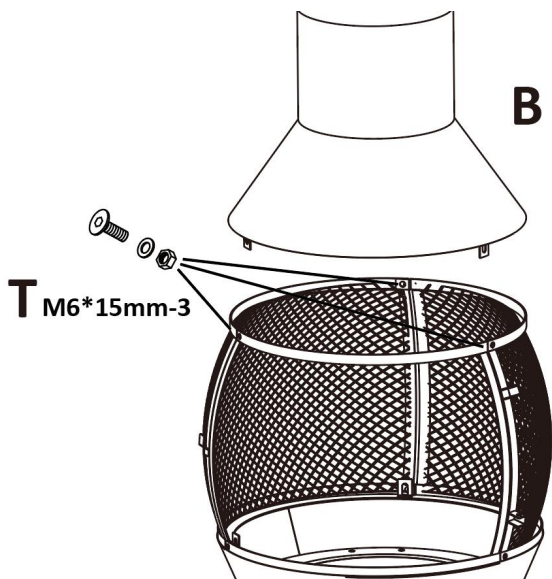


5. Assembly BBQ grate (H) to Mesh body (C1) use Pin (J).

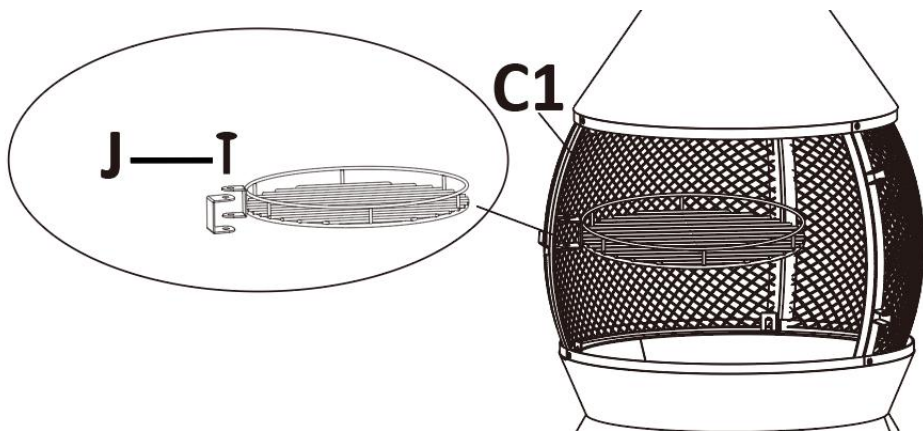


6. Place Mesh door (E) together with the Mesh Body (C2).

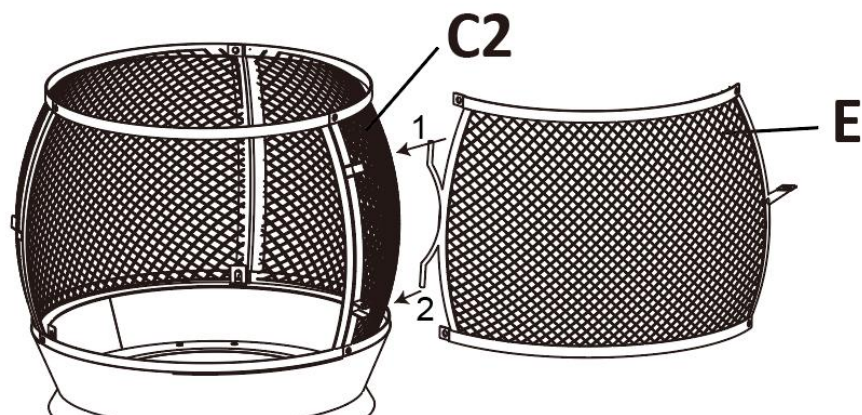

7. Put Ash tray (I) into the center of Base fule (M).

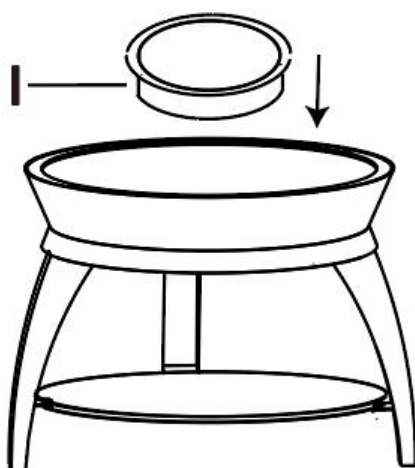

8.Put Lid (A) onto the Top fule (B).

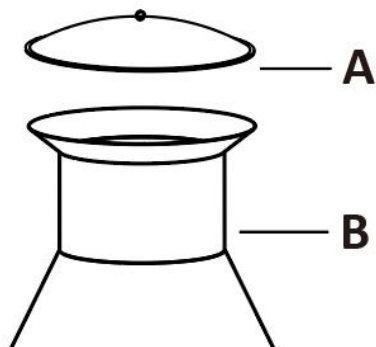


Now assembly is completed.

Set up on a flat surface, away from anything that could pose a fire threat.

As this item is low to the ground, always keep an eye on the fire.

Use Rain cover (W) to protect your chimenea when not in use.

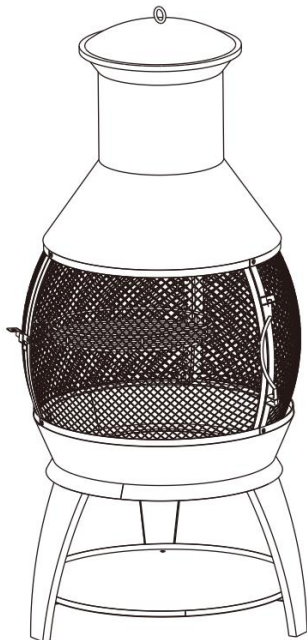

Assemble on a soft, clean surface to avoid scratching the glass.
Do not overtighten screws to prevent glass breakage.
Use only with approved fire pits or burners.
Do not move during use. Allow to cool completely before handling.
Clean with a soft cloth and mild glass cleaner. Do not use abrasive materials.
Store in a dry place when not in use.

