

VEVOR

Upgrade · The Home Creator Way

Lifting Ramps

Model: CR02

VEVOR Support Center



Model: CR02



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Thank you very much for choosing this product, it should always be handled with care. Please read all of the instructions before using it. The information will help you achieve the best possible results.

SPECIFICATION

Model	Number of sets	Maximum height of support surface (in)	Minimum height of support surface (in)	GVW (Gross Vehicle Weight)	Dimension of each ramp (in)
CR02	2	14.2 (360mm)	9.25 (235mm)	4T (8800lbs)	15×12.6× 11.6 (1140×320×295mm)

PACKAGE LIST

NO.	Part	Picture	QTY
1	Ramp (include the lifting jack)		2
2	Handle		2
3	Manual		1

SECURITY&WARNINGS

For safety, the use of this product shall not exceed the maximum load under the vehicle. Do not abuse this product!

Attention! Before using the product, please read the instructions carefully. To avoid the risk of injury to persons and damage to the goods themselves. If the warning content in the instruction manual is not followed and vehicle damage or personal injury occurs, no loss will be borne.

1. For safety, this product is limited to use for vehicles of less than 4 tons.
2. Each ramp is limited to use for less than 1 ton.

3. Before using the ramp, measure the front or tail of the car clearance is bigger than the height of the ramp.
4. Use only on hard level surface, generally used outdoors. Do not use on
5. smooth ground to avoid slipping.
6. After driving to the top of the vehicle, be sure to tighten the handbrake. If necessary, add a rear wheel brake to prevent the vehicle from slipping out.
7. Please strictly follow the installation manual and operating instructions when using this product. Unauthorized modifications are strictly prohibited.
8. Please note: Damage caused by modifications or the user's failure to follow the product instructions is not covered by the warranty.
9. the operator should be skillful. If the vehicle falls off the maintenance ramp due to poor technical skills which not cause by product issue, it will not covered by the warranty.
10. It is recommended that two people assist in using the lifting ramp. It also need extra people to command when using it.
11. place the ramp in front of the front wheel and the central position of the wheel, make sure that the wheels are running in the middle of the ramp.
12. Pay attention to slow down when driving onto the ramp and avoid the wheel rushing off the slope.
13. Pay attention to slow down when departing the ramp and avoid the ramp sliding back.
14. After the vehicle is parked on the ramp, please remember to pull the handbrake, to avoid the harm caused by the shaking of the vehicle.
15. Do not use it when the product is found to have damage, bending or other factors that affect the safety.
16. This product is suitable for the use of vehicles close to the angles greater than 18 degrees.
17. Warning-To reduce the risk of injury, user must read instructions manual carefully.
18. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

20. Children shall not play with the appliance.


21. Please use the product according to the intended use, warn of potential injury from misuse.

INSTRUCTIONS

1. place the ramp in front of the front wheel, be sure the two ramps are aligned, and the ramps are in central position of the wheels.



2. Drive the car slowly onto the ramp and avoid the wheel rushing out of the slope. Then pull the handbrake of the car.

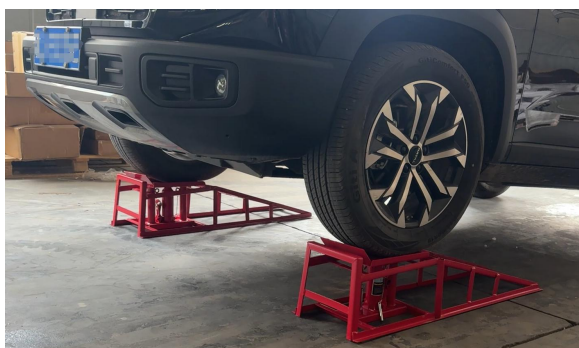

3. Insert the handle into the hole of the lifting jack.




4. Use the handle to lift the lifting jack. It's recommended to lift the two lifting jacks synchronously. Make sure that they are at the same height.



5. Insert the two pins into the holes for security.



6. To lower the lifting jack, two persons are required to perform the operation, each person operates one ramp, and they turn the relief valve of the lifting jack synchronously.

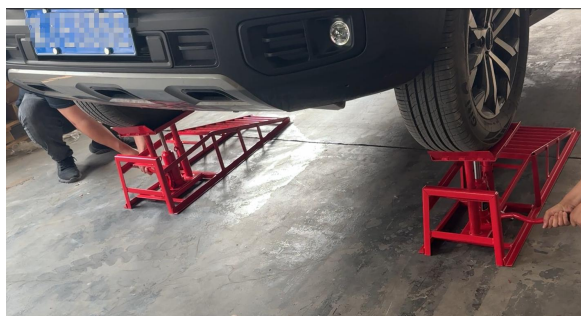

7. Finally, depart the car from the ramp, be sure to slow down the car and avoid the ramp sliding back.

MAINTENANCE

1. Regularly check whether the Hydraulic drive-on ramp is deformed or has cracks,
2. Clean pollution of any kind on the Hydraulic drive-on ramp after each use, such as Oil stains,etc.
3. Regularly check whether all the screws are loose, and reinforce the screws.

