



Upgrade · The Home Creator Way

BUBBLE TENT

MODEL: 121082 / 121083 / 121084

VEVOR
Support Center



121082




121083



121084

MODEL: 121082/121083/121084

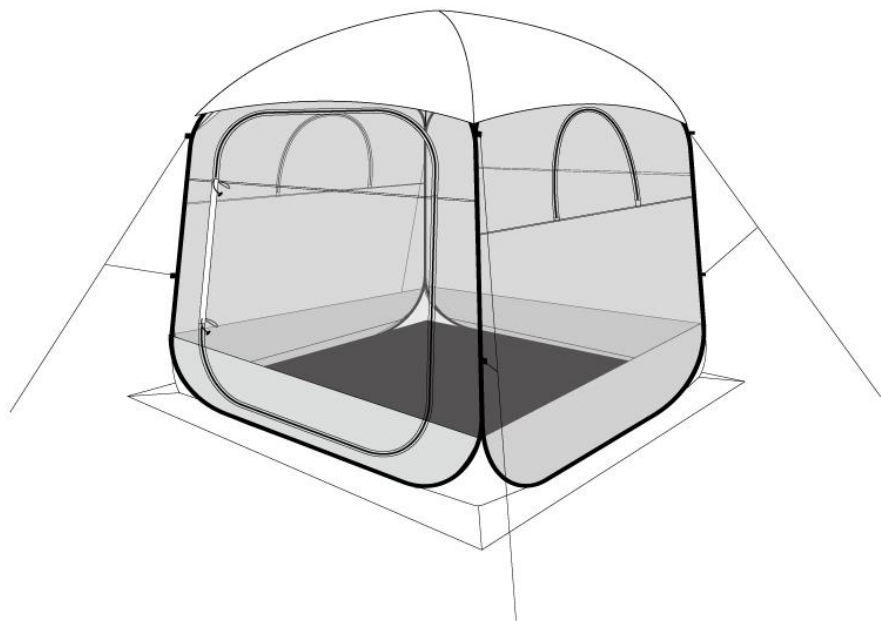

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Assembly precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Bubble Tent.
8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Use precautions

1. DO NOT SIT OR STAND ON THIS ITEM.
2. This product is not a toy. Do not allow children to play with or near this item.
3. Do not exceed specified weight capacities.
4. Use as intended only.
5. Inspect before every use; do not use if parts are loose or damaged.

	
WearGloves	we recommend 2 people for a smoother assembly

Friendly Reminder

What if one side of the tent is found twisted or uneven after being set up?

Method 1: Hold the steel wires at both ends of the uneven part with both hands and twist the steel wires back and forth to adjust it to be smooth.

Method 2: Follow the tent folding method to fold it into a flat surface, with 8 steel wires smoothly overlapping, and then unfold it.

The product complies with relevant standards and regulations.

Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

Never smoke inside the tent. Never use candles, light matches, or allowany type of open flame in or near the tent.

Do not cook inside the tent.

Do not store flammable liquids inside the tent.

Allow adequate ventilation inside the tent at all times

Never refuel lanterns, heaters or stoves inside the tent.

NEVER run the engine when the tent is attached to the vehicle.

When the temperature is below freezing, do not install the tent whenyour vehicle is wet as it may cause damage.


Do not attempt to drive the vehicle with the tent attached.

Product can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

The product is not a toy, children shall not play with the product.
Cleaning and user maintenance shall not be made by children without supervision.
Avoid injury, children should not play around inside the product or to rely on.
This product is not recommended during thunderstorms.
Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it
Please use the product according to the intended use, warn of potential injury from misuse.

SAVE THIS MANUAL


PARTS LIST

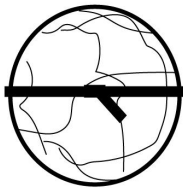 tent *1	 ground mat *1	 sunshade cover *1
 fiberglass rod *2	 tent shake *8	

ASSEMBLY STEP


Setup Instructions

1

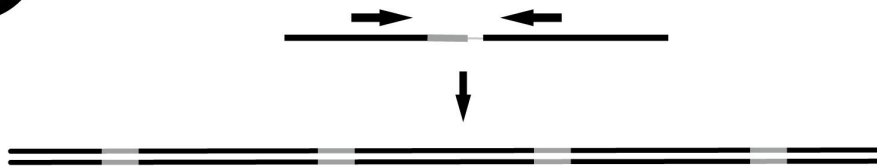


Assemble the two poles.

2

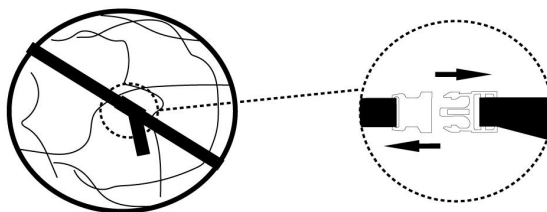

Undo the strap buckle that secures the tent.


3

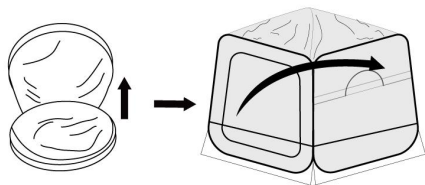


Unfold the tent.

Note: The tent contains highly elastic steel wires. Be careful when opening it to prevent injury from the sudden spring - back.

4

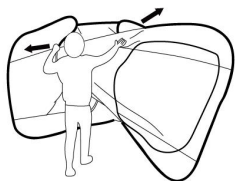


Top View

 


Pull open the black - edged frame to set up the tent.

5

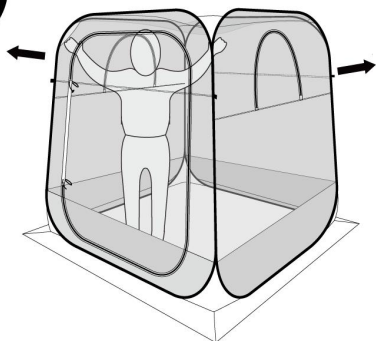

If it is difficult for the tent to take a stable shape, you can enter from the bottom of the tent, spread out the tent from the inside, and adjust the shape of the tent at the same time.


6

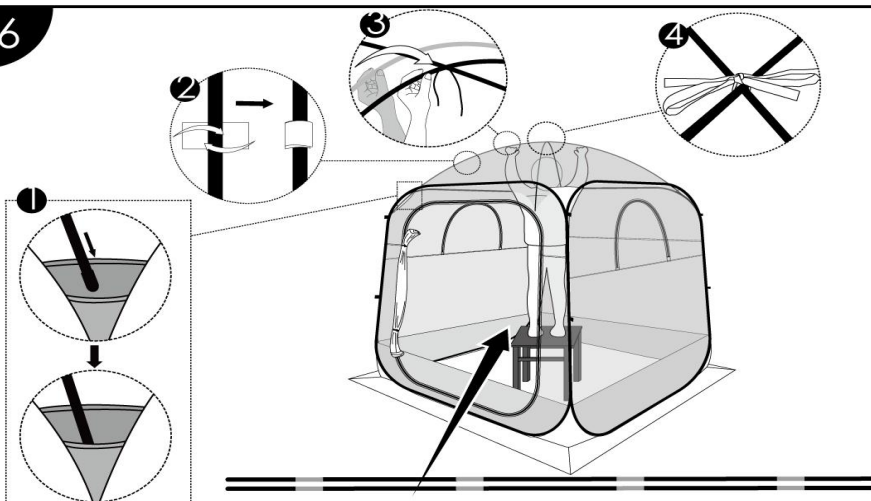

Insert both ends of 2 poles into the diagonal cloth sleeves respectively, fasten the magic tape to fix the fiber poles, then move the poles to the highest point and fix them with binding straps.


※A chair can be used for assistance in the setup.

7

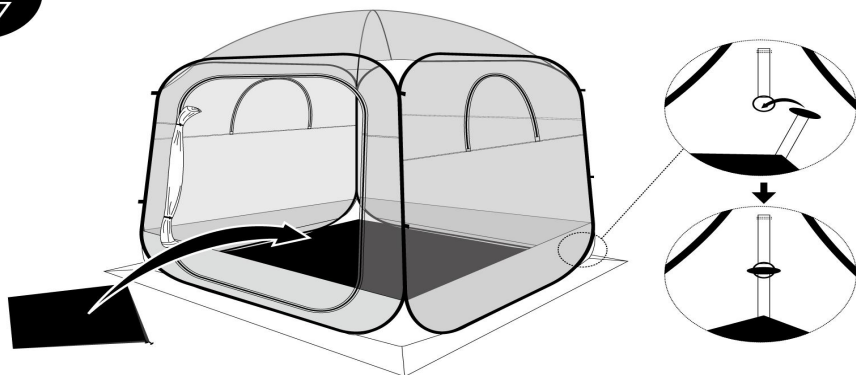


Lay the mat flat inside the tent and fasten it to the four corners of the tent with plastic buckles.

8

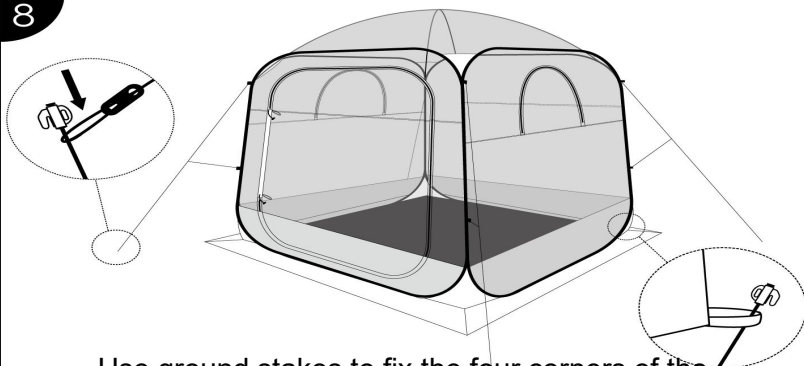

Use ground stakes to fix the four corners of the tent and the wind ropes to the ground.

9

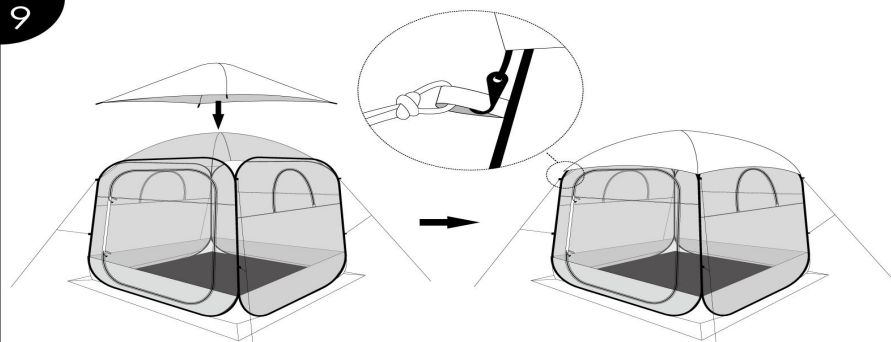


Put the sunshade over the top of the tent, and hook the black hooks onto the white wind rope loops at the top of the tent.

PACKING INSTRUCTIONS

Storage Instructions

1

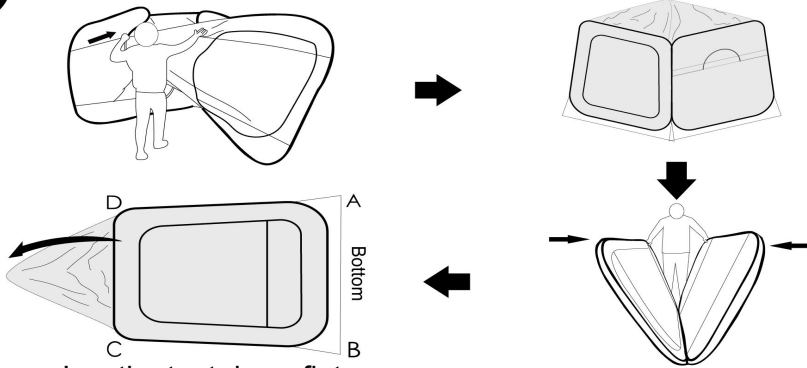


Lay the tent down flat.

Press the black frame to overlap with the opposite side, align the top and bottom surfaces to form a flat plane.


Pull out the transparent top and smooth it out.

2

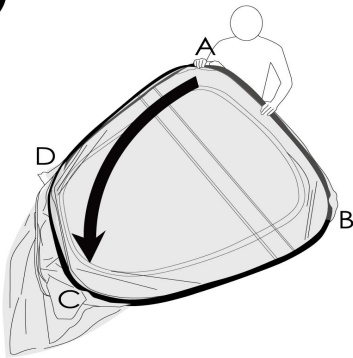

Hold corner A of the tent bottom and press it downward toward corner C of the top.


3

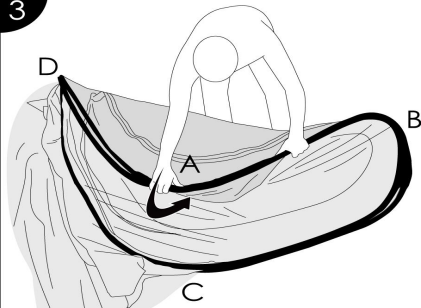

While pressing down, pull corner A backward in the direction of the arrow.


Position it slightly behind corner C (closer to the area near the legs).

4

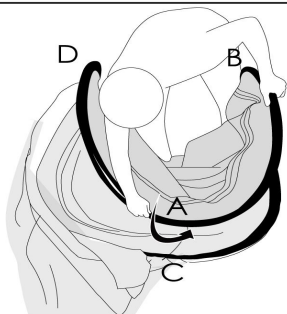


Press down until corner A fully touches the ground. At this point corners B and D will naturally up and move toward the middle.

5

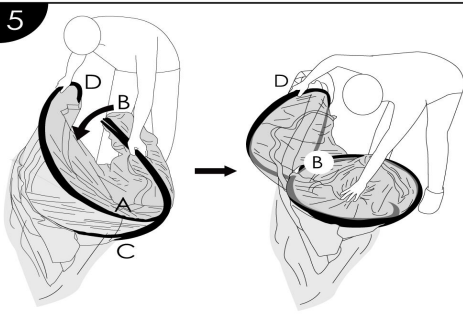


Press corner B downward toward corner D.
At this point it will be positioned below corner D.

6

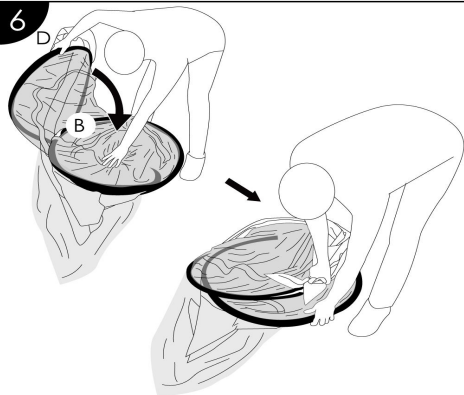


Press down corner D as well, and fold the tent into three overlapping circles.

7

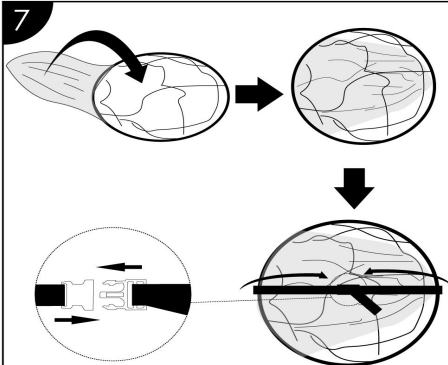

Fold the transparent part at the top over the circle.
Secure the folded tent with the buckle of the strap.

8

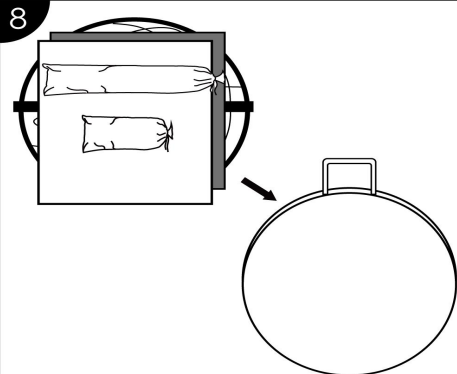

Pack the tent and other accessories into the storage bag together.

PRODUCT PARAMETER

Model	121082
Colour	Beige + transparent color
Desktop Size (L*W*H)	1270 × 1270 × 1700mm

Model	121083
Colour	Beige + transparent color
Desktop Size (L*W*H)	1600 × 1600 × 1820mm

Model	121084
Colour	Beige + transparent color
Desktop Size (L*W*H)	1830 × 1830 × 1950mm

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

MISE EN GARDE: TENIR LE TISSU DE CETTE TENTE LOIN DE TOUTE FLAMME ET DE TOUTE SOURCE DE CHALEUR.

THIS TENT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH A FLAME SOURCE.

CETTE TENTE N'EST PAS ININFLAMMABLE. LE TISSU BRÛLERA S'IL EST LAISSÉ EN CONTACT CONTINU AVEC UNE SOURCE DE FLAMME.

(a) Do not use candles, matches or open flames of any kind inside
or near a tent;

- (b) Do not cook inside a tent
- (c) Build campfires downwind and several metres away from a tent and be sure to fully extinguish campfires before leaving a campsite or before going to sleep;
- (d) Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns whenever possible;
- (e) Do not refuel lamps, heaters or stoves inside a tent;
- (f) Extinguish or turn off all lanterns before going to sleep;
- (g) Do not smoke inside a tent; and
- (h) Do not store flammable liquids inside a tent.

