



Upgrade · The Home Creator Way

DROP SAFES

MODEL:TD-SS70

Instruction for Using the Locks of Drop Safes

<https://www.youtube.com/playlist?list=PL5xH4aWDI9UVVy84LFgQ4MnUrWi1iEjzA>

 


VEVOR Support Center



TD-SS70

MODEL:TD-SS70

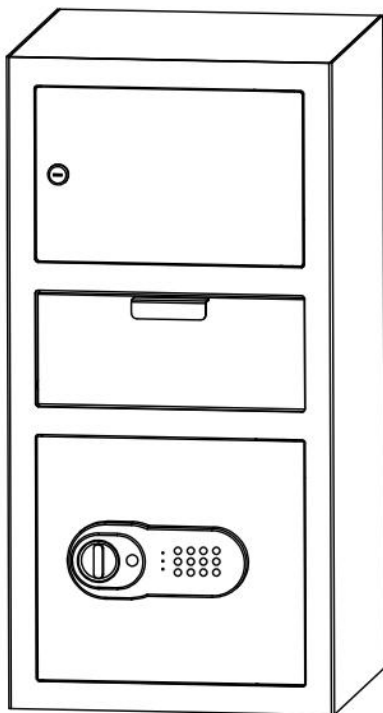

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.



Compliance is a CE security certification.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

 
 


This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

INSTRUCTIONS

 


Thank you very much for choosing this product. Please read all of the instructions before using it. The information will help you achieve the best possible results.

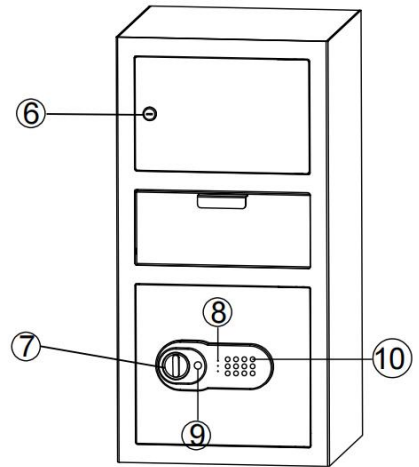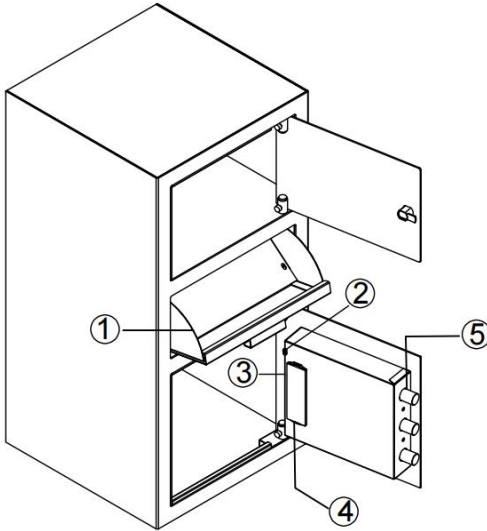

NO.	Name	NO.	Name
1	Coin Slot	6	Upper Door Lock
2	LED Light	7	Knob
3	Setting Button	8	Indicator Light
4	Internal Battery Box	9	Keyhole
5	Bolt	10	Button

PARTS LIST

A  1PCS	B  2PCS	C  2PCS
D  6PCS	E  1PCS	

PASSWORD SETTING AND CHANGING

Notice:

- The default factory password for the electronic lock is "123456".
1. Press the green button (code change switch) inside the box, the buzzer will beep once, and the setting light will turn on.
 2. Enter the password you need, with a length of 3-12 digits.
 3. Press the "#" key to confirm, the buzzer will play a chord, the setting light will go out, and the door opening light will turn on, indicating that the password setting and changing are successful.

GROUP 2 PASSWORD SETTING

- Press 00, then press the green button (code change switch) inside the box, then enter the new password and confirm the end with the # key. The password length is 3-12 digits.

OPENING THE SAFE

1. Press the buttons to enter the password you set.
2. Press the "#" key to confirm, the buzzer will beep twice, and the password is correctly entered, indicating that the electromagnet is attracted. Turn the handle to open the door, which takes 5 seconds and will automatically close after that.

VIBRATION ALARM SETTING

1. The vibration alarm electronic lock alarm has the functions of setting alert and eliminating alert.
2. Alert setting method: Press the "*" key, and the three status lights will turn on, indicating that the alert state is entered. The safe will alarm immediately after vibration.
3. Method of lifting the alert: After the safe alarms, enter the set password and press the "#" key to open the door, which can eliminate the alert.

UNDER VOLTAGE INDICATION

1. The system uses four 1.5V alkaline batteries. If the voltage is insufficient, it will continuously remind "Di, Di, Di" after opening the door. "Di, Di, Di" twice, and the red light will turn on to remind the user to replace the battery in time.
2. If the battery voltage is insufficient, emergency power or a mechanical emergency key can be used for operation.
3. This electronic lock has the function of power-off protection, and the password will never disappear.

ALARM OPERATION

This electronic lock has 3 (5) times of wrong password, and it will automatically alarm for 30 seconds or 1 minute. Entering the correct password can eliminate the alarm sound.

SYSTEM INITIALIZATION

Long press the green button on the mechanism for 5 seconds, the buzzer will play a chord, and the system will restore the initialization settings and clear all passwords.

HOW TO WALL OR FLOOR MOUNTING

- * The safe may be mounted to a wall or floor.
 - * Drill the appropriate size holes for the anchors you are using
 - * Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely
- Floor Mounting
- * Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).

SAFETY AND COMPLIANCE

1. Reduce the risk of theft, the safe must be posted on the wall or floor to ensure safety.
2. Please take good care of the emergency key and store it in a secret place away from the safe. Do not put the emergency key into the safe, or the emergency key will not be used to open the safe when the battery runs out.
3. Do not place the product on an unsafe overhead, so as to avoid falling, damaging the product or injuring people.
4. Do not spill liquid on the control panel, or it may cause an electric shock to the internal electronic components and prevent them from working properly.
5. Warning-To reduce the risk of injury, user must read instructions manual carefully.
6. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing

and using this equipment.

7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

8. Children shall not play with the appliance.

9. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

10. This appliance is intended to be used in household and similar applications such as:

- Securely store cash, receipts, and important business documents.
- store valuable tools, and confidential files to prevent loss or theft.
- Place important certificates, contracts, and personal valuables for long-term secure storage at home or in the office.

11. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.

12. Please use the product according to the intended use, warn of potential injury from misuse.

TECHNICAL PARAMETERS

Model	TD-SS70
Working Voltage Range	4.2-6.8Vdc
Working Power	4 AA (1.5V) Alkaline Batteries
Product Size (D*W*H)	350*350*700mm
Net Weight	23.4kg

