

VEVOR

Upgrade · The Home Creator Way



LBJ-1038

VEVOR Support Center

Knife Sharpening Fixture

MODEL: LBJ-1038

MODEL: LBJ-1038



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

Lawn Mower Blade Sharpener

1. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children shall not play with the appliance.
4. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
5. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
6. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
7. Please use the product according to the intended use, warn of potential injury from misuse.

STEPS FOR USE

The product comes pre-assembled and can be used with minimal preparation after unpacking.




ALL THE INCLUDED PARTS

Main Component * 1

Angle Grinder Adapter Screws *4

Angle Grinder Bushing * 1

Self-tapping Screws *2

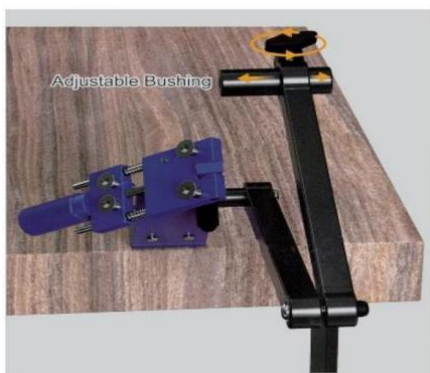

Step 1

As shown in the diagram, firmly fix the Lawn Mower Blade Sharpener to a wooden table or workbench through 2 self-lapping screws. (You may need to drill pilot holes in advance, Alternatively, you can use suitable tools or fixtures to firmly secure the Lawn Mower Blade Sharpener to the table or workbench.) Then, fix the Angle Grinder Bushing as shown in the diagram.

Afterwards, adjust the Fix in a Handle and Blade Fastening Screws to ensure that the blade can fit properly within the Blade Holder.



Step 2

Adjusting the angle of Blade Holder: Loosen the screws of Blade Holder to adjust its angle. The Angle Indicator represents the cutting edge angle of the lawn mower blade after sharpening.




Step 3

Securing the Blade: Place the blade onto the Blade Holder with one hand while tightening the fixing handle first, and then tighten the blade fixing screw. Alternate tightening the blade fixing screws instead of tightening one screw completely at a time.




Attention: Before the blade is securely fixed, always hold the blade firmly with your hand. After the blade is fixed, ensure that the plane of the blade cutting edge is parallel to the plane of the Blade Holder. This is important to maintain accurate cutting angles.

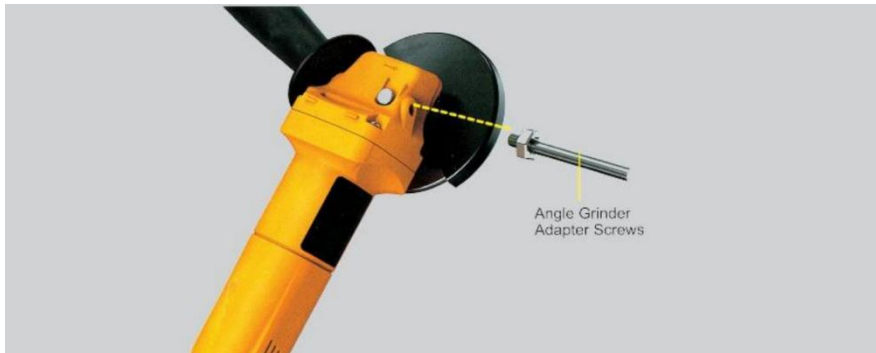

Step 4

There are 4 different Angle Grinder Adapter Screws included for different angle grinders. Select the appropriate one and screw it into the right side of your angle grinder. Then tighten the hex nut.

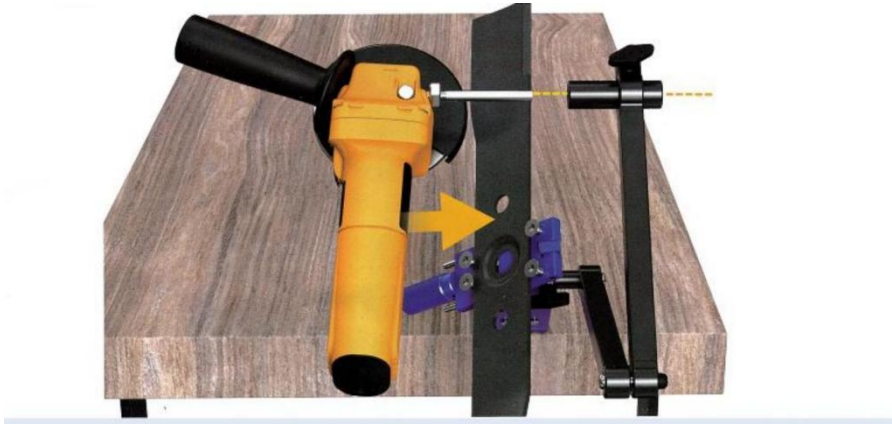

Step 5

Insert the Angle Grinder Adapter Screw into the Bushing. Then, with your left hand, hold the angle grinder handle, and with your right hand, hold the angle grinder body, test if the movable arm moves smoothly and effortlessly.

Attention!

Before inserting the Angle Grinder Adapter Screw into the Bushing, make sure that all screws are securely tightened, including the Self-tapping Screws, Fixing Handle, Blade Fastening Screw, Angle Indicator Locking Screw, Bushing Screws, and Angle Grinder Adapter Screw.



Step 6

Once everything is confirmed to be correct, you can proceed to sharpen the blade

Step 7

After completing the blade sharpening, first remove the angle grinder and set it aside. then loosen the Fixing Handle to remove the blade.

Warning! The freshly sharpened area of the blade may have a higher temperature

