



Upgrade · The Home Creator Way

DINING-TABLE


MODEL: SR241142

VEVOR Support Center



SR241142

MODEL: SR241142

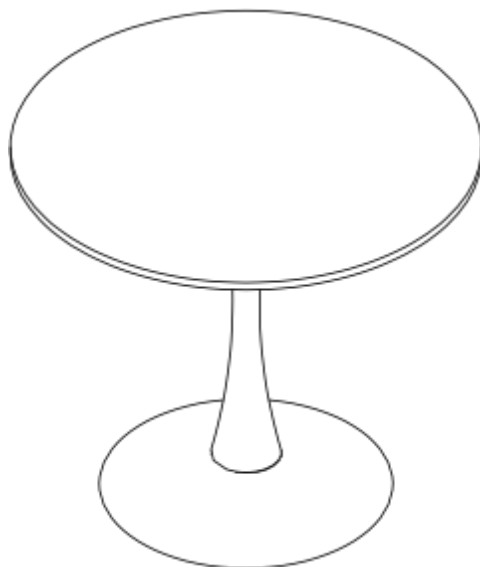

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



WARNING:

Please read this manual carefully before using the product. Failure to do so may result in serious injury.

1. SHARP EDGES & PINCH HAZARD

Be careful of sharp edges, corners, and moving parts during assembly and use.

Keep fingers clear of joints and hinges to avoid pinching or injury.

2. CLEANING & MAINTENANCE

Clean with a soft, dry cloth. Do not use abrasive, corrosive, or harsh chemicals.

Regularly inspect for cracks, deformation, loose parts, or damage.

Replace or repair damaged components immediately; do not use defective furniture.

3. FLAMMABILITY (for upholstered chairs)

Keep fabric upholstery away from fire, flames, cigarettes, and heat sources.

Comply with local fire safety regulations.

4. COMPLIANCE STATEMENT

This dining set complies with applicable European and American safety standards for domestic furniture.

ASSEMBLY PRECAUTIONS

- 1. Assemble only according to these instructions. Improper assembly can create hazards.**
- 2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.**
- 3. Keep the assembly area clean and well-lit.**

4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Record Player Cabinet.
8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

USE PRECAUTIONS


TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:

 
1. This product is not a toy Do not allow children to play with or near this item.
2. Do not exceed weight capacities, before moving.
3. Use only on a flat, hard and smooth surface capable of safely supporting a fully loaded Record Player Cabinet.
4. Use as intended only.
Inspect before every use; do not use if parts are loose or damaged.

SAVE THESE INSTRUCTIONS

**Products such as specifications, appearance, and design are
subject to modification without prior notice.**


PART LISTS

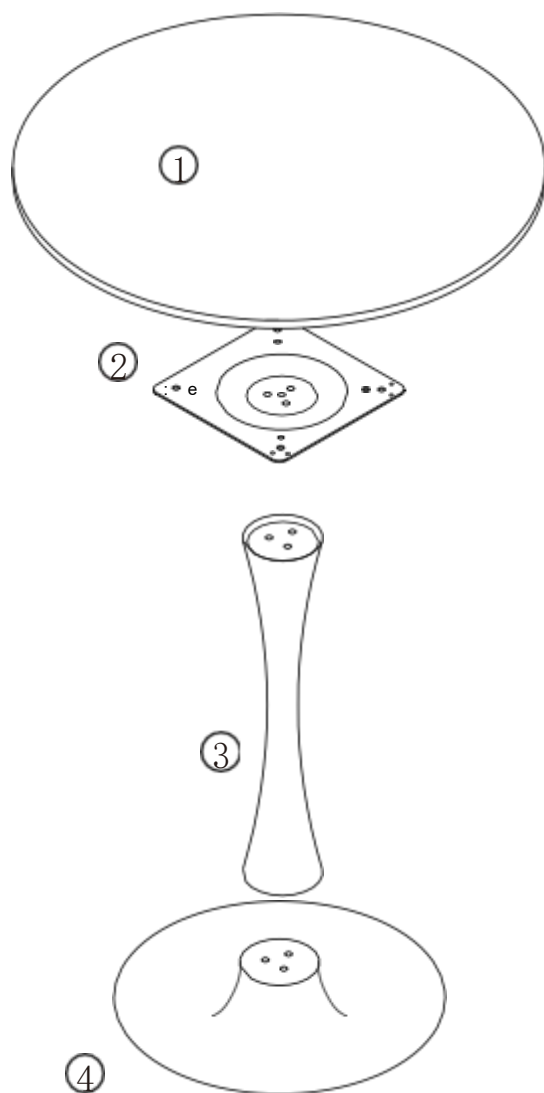

1  1 PC	2  1 PC	3  1 PC	4  1 PC
--	--	--	--

A M8x30  6 pcs	B M6x12  4 pcs	C    1 pc 1 pc				
--	--	---	--	--	--	--



PACKAGE CONTENTS

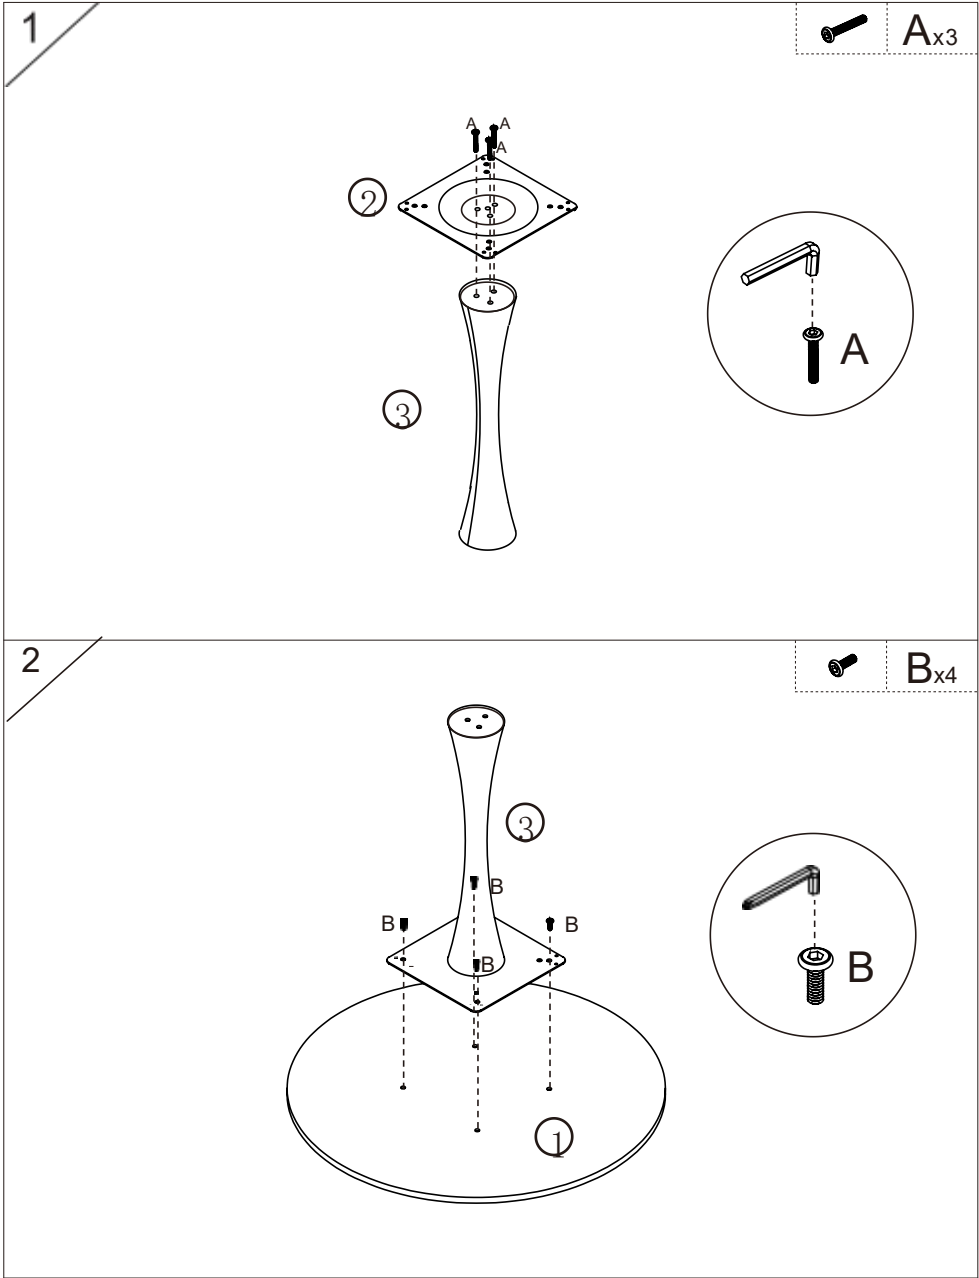

3



A_{x3}

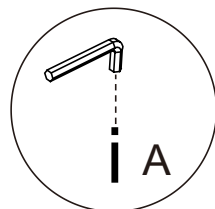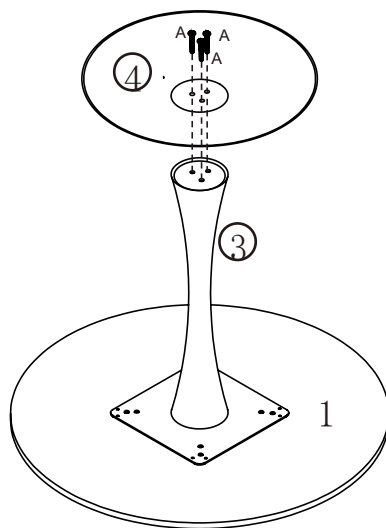

COMPLETION



