



Upgrade · The Home Creator Way

Wooden Fences


MODEL:DUSGD2417

VEVOR Support Center




DUSGD2417


MODEL : DUSGD2417

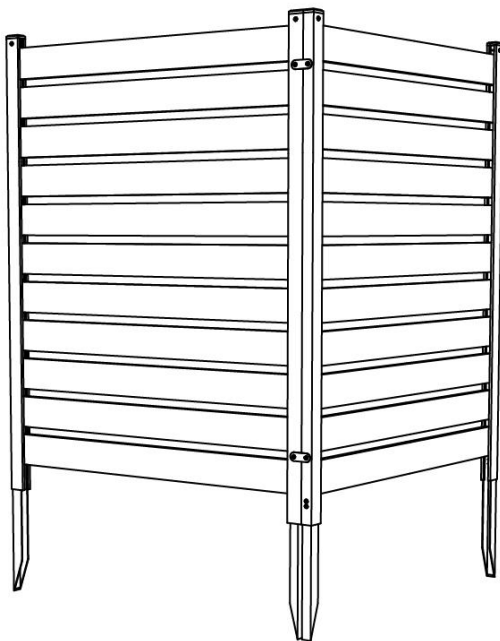

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

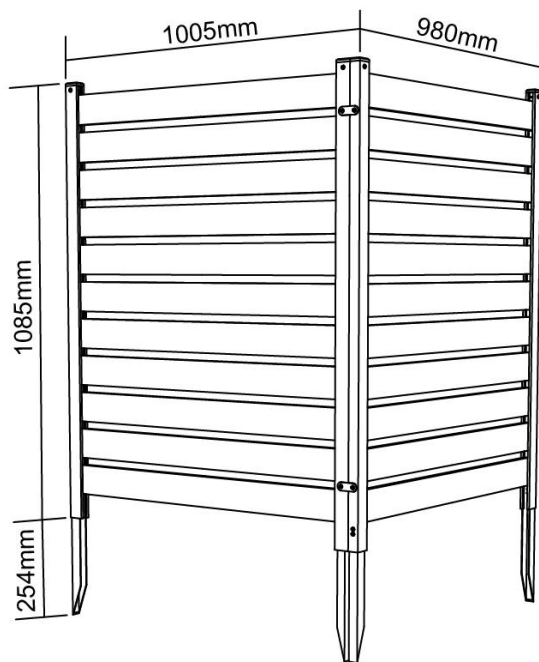

Note: The product size may differ from the actual product. Please refer to the actual product for details

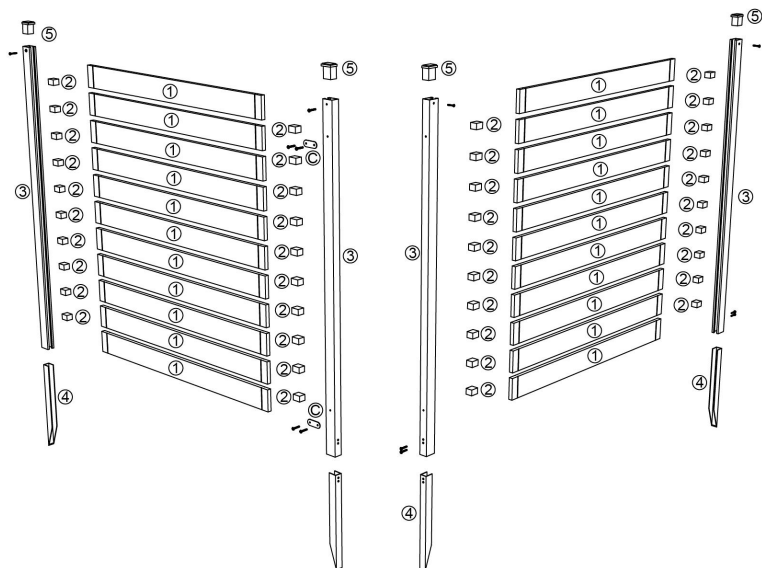

INSTRUCTIONS

Thank you very much for choosing this product. Please read all the instructions before using it. The information will help you achieve the best possible results. PLEASE NOTE! Drawings in this manual are for illustration purposes only and in some details may differ from the actual product.

ATTENTION! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in serious injury or even death. The device or product used in the warning instructions is referred to pet bunk bed. Please place in a position that children cannot climb or move, so that the product does not fall over and injure children.

USAGE SAFETY



1. Select an area for assembly that is clean and free of any debris that might cause persons working on the assembly to trip.
2. Do not lift heavy parts or assemblies. Use crane, jack, tackle, fork trucks or other mechanical devices.
3. Preview the assembly instructions in your operator's manual before proceeding further.
4. After completing assembly, thoroughly inspect the machine to be sure that all nuts, bolts or any other fastener assemblies have been thoroughly tightened.
5. This product is not a toy or a washing vessel and should not be used for any purpose other than a shampooer.
6. The drainage pipe of the product, please use the clamp firmly connected to avoid water leakage. The other end of the drain pipe should be placed in the household drain sink or drain pipe, and remember that the end accessories of the drain pipe should not be placed with electrify things to avoid electric shock.
7. Avoid to use any hard objects or any chemicals which can dissolve plastic to clean the basin.
8. Please put the product in a flat place for use. When using the product on sloping or uneven ground, there is a risk of rollover during use.

SAVE THESE INSTRUCTIONS

TECHNICAL PARAMETERS

Model	DUSGD2417
Colour	Burly wood
Product size(mm)	1005*980*1085mm

  Part & Hardware List

Parts Code	Lmage	Parts name	Qty(pcs)
1		Panel	20
2		spacer	36+2
3		Aluminum alloy frame	4
4		Ground anchor iron	4
5		cap	4
A		screw	4
B		screw	8
C		Connecting iron	2
D		screw	4

WARNING

⚠ Warning-To reduce the risk of injury, user must read instructions manual carefully.

⚠ The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

⚠ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

⚠ Children shall not play with the appliance.

⚠ Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.

⚠ Please use the product according to the intended use, warn of potential injury from misuse.



⚠ Not suitable for environments with high humidity, explosive atmospheres, salt spray, acidic or alkaline conditions.

Installation steps

1. Check whether the product accessories are complete, including wooden fence panels, aluminum bar columns, connecting parts, screws, etc.
2. Prepare the necessary installation tools, such as electric drills, screwdrivers, hammers, levels, tape measures, line markers, etc.
3. Clear the installation site to ensure the ground is flat and free of obstacles. According to the design requirements, determine the installation position and direction of the fence, and mark the position of the posts with a marker.
4. Please wear gloves when operating to avoid scratches.
5. It is more convenient for two people to assemble.

Assembly


1.Insert panel 1 into the bottom aluminum alloy frame 3 along the card slot.

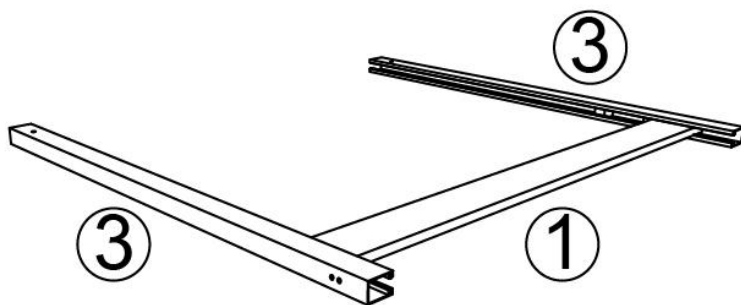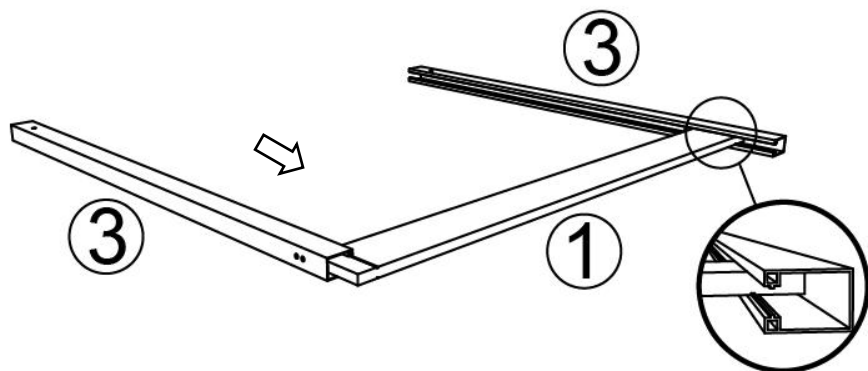



Attention:

Wooden strips need to be installed vertically with aluminum materials, otherwise it may cause installation difficulties.

2. Insert the ground anchor iron from the bottom and align it with the hole position, then fix it with screw B.

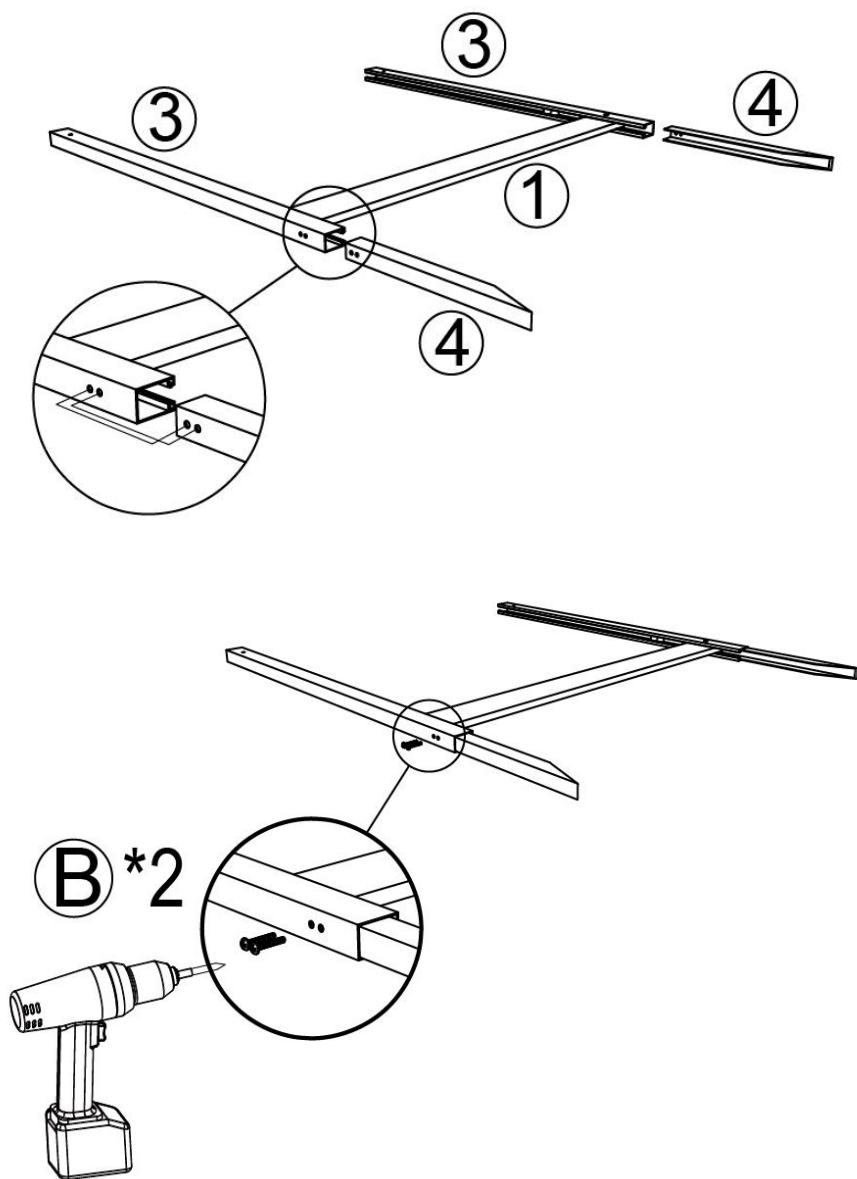


3.Stand the product upright. First, insert the spacer into the aluminum strip, and then install the panel.

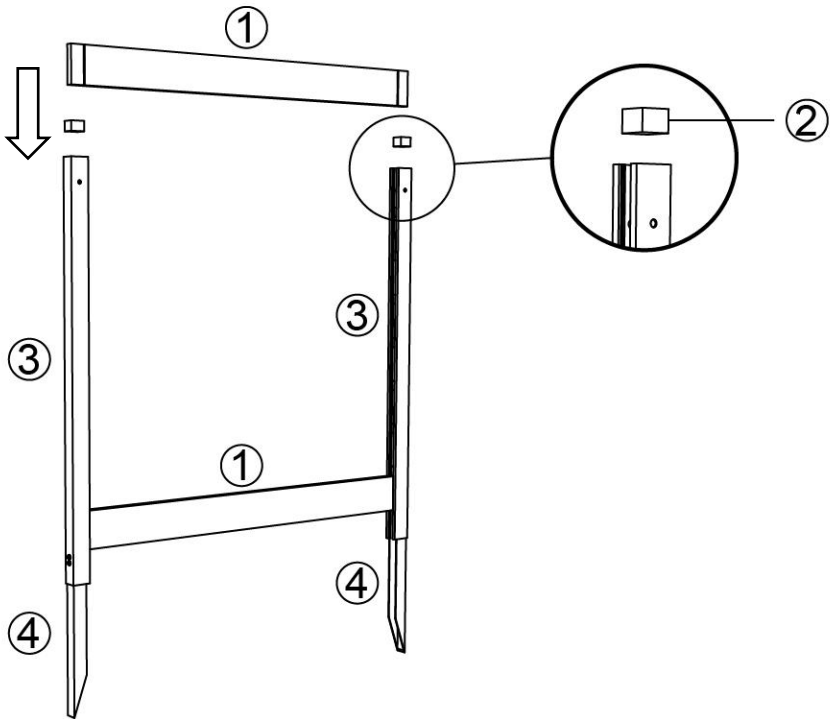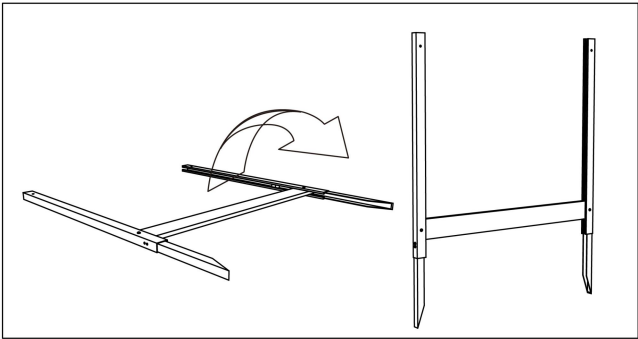


Note: Lay the panel against a wall for an easier assembly.


4. Load the spacer and the panel in sequence.

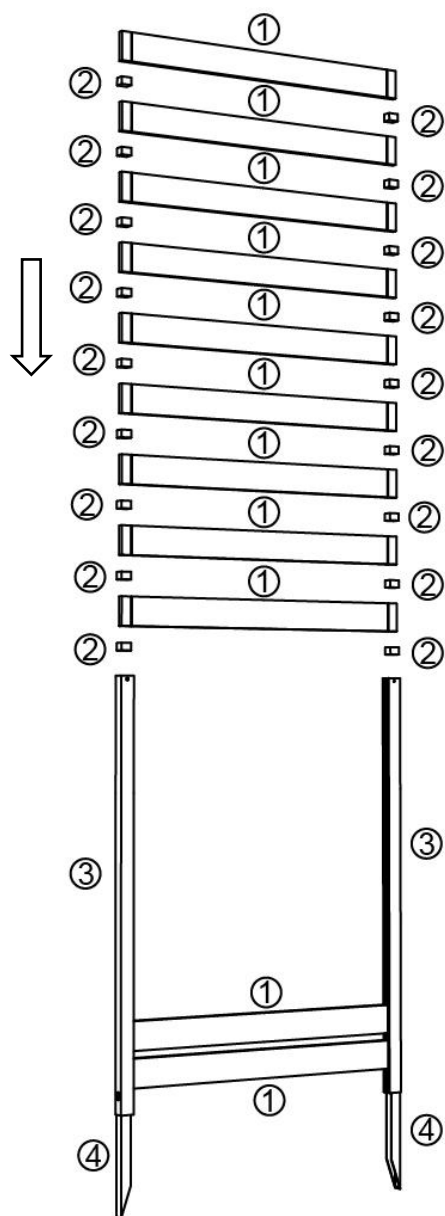


5.Install the top cap 5 on the top of the aluminum part 3 and lock it with screw A.

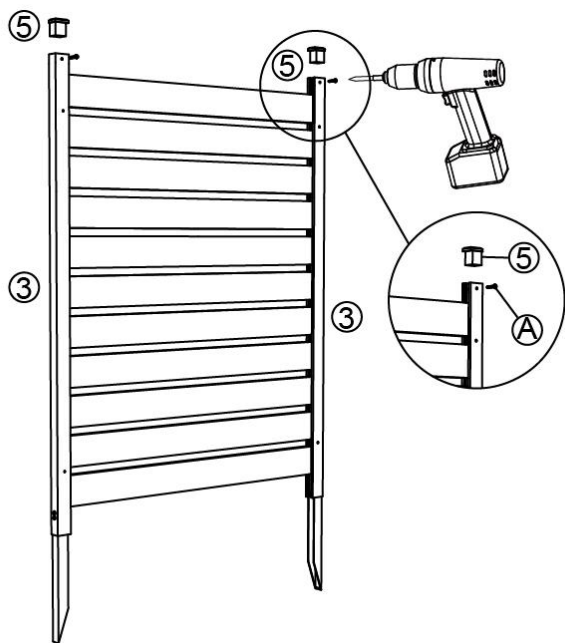



6.Assemble the two fences in turn, using screw D and connecting iron C to assemble the two pieces.

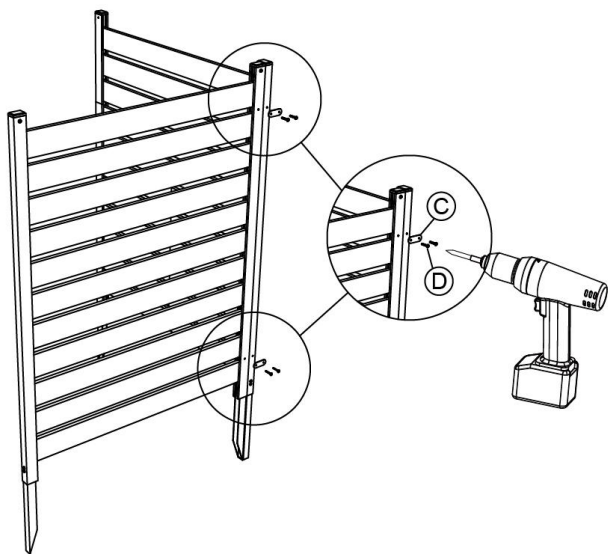

7.Insert the product's ground anchor iron into the ground.

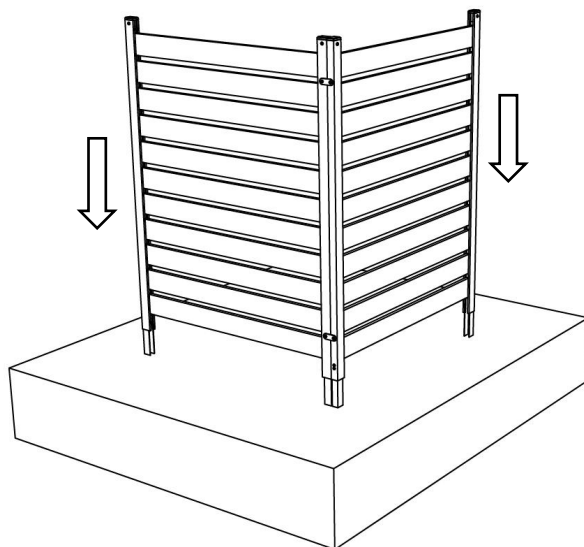


Wooden blocks (provided by the user)

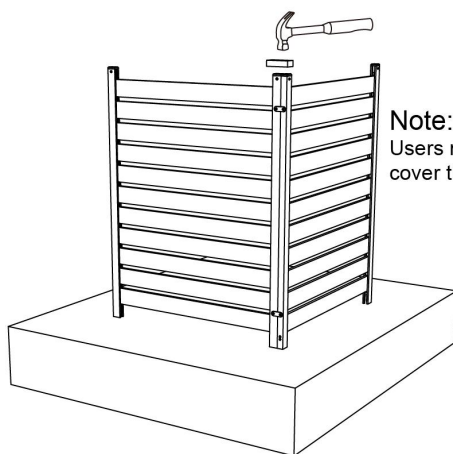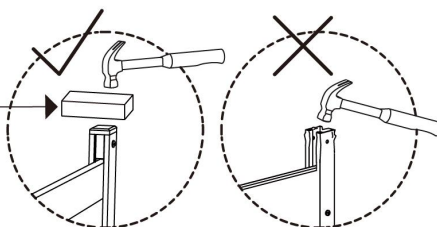


Note: Do not strike unprotected columns. Users need to prepare wooden blocks to cover the columns and then strike them.

Note:All ground anchors must be fully inserted into the ground to make them invisible.

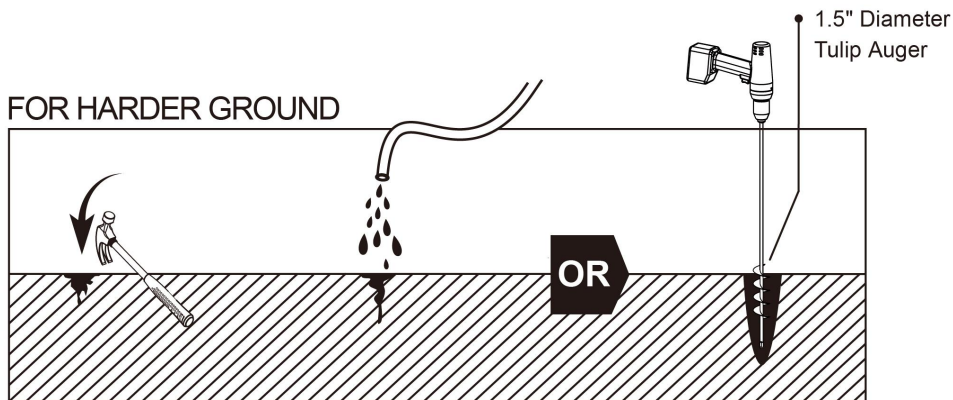

If your ground is really hard, you may need to dig a hole large enough to accommodate one post from each panel—Approximately 8" in diameter and 13" deep. Backfill and compact the dirt.

FOR HARDER GROUND

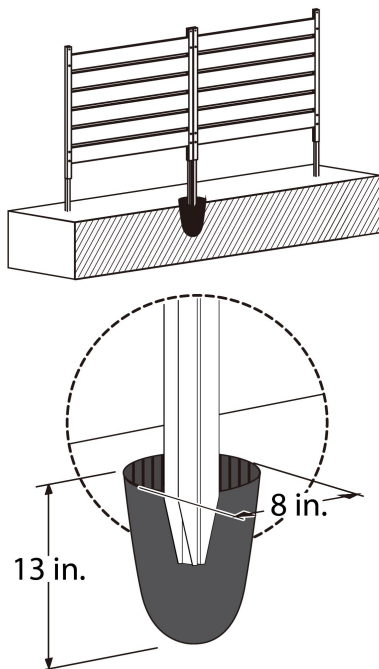

Precautions for Use

1. After the wooden fence is installed, do not hang overly heavy items on it to avoid deformation or damage to the fence.
2. Avoid sharp objects from colliding with or scratching the surface of the fence to prevent affecting its appearance and service life.
3. During use, if any loosening or deformation of the fence is found, its use should be stopped immediately and maintenance or replacement should be carried out.
4. Please do not set off fireworks and firecrackers near the fence to avoid causing fires or damaging the fence.
5. When children are playing near the fence, they should be supervised by an adult to prevent accidents.
- 6.

Maintenance and upkeep

1、Wood section: Regularly (generally every 6 to 12 months) clean and paint the wood surface. When cleaning, you can use a soft cloth or sponge dipped in clean water or neutral detergent to gently wipe and remove dust and stains on the surface. When painting, choose wood paint suitable for outdoor use and apply it according to the paint instructions to enhance the wood's corrosion resistance and water resistance.

2、Aluminum bar column section: Regularly wipe the surface of the aluminum bar column with a soft cloth dipped in clean water to remove dust and dirt on the surface. If scratches or oxidation are found on the surface of the column, a special aluminum cleaner can be used for cleaning and treatment.

3、Connecting parts and screws: Regularly check if the connecting parts and screws are loose or rusted. If any are loose, tighten them promptly. If there is rust, new connecting parts and screws should be replaced to ensure a firm and reliable connection of the fence.

