



Upgrade · The Home Creator Way

UNIVERSAL TV STAND


MODEL:PCT01-2

VEVOR Support Center



PCT01-2

 MODEL:PCT01-2

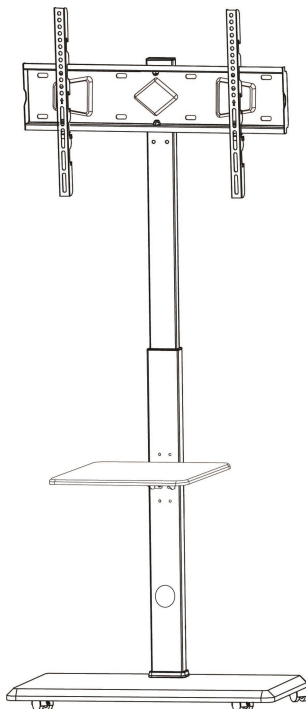

100x100	400x100
200x100	400x200
200x200	400x300
300x200	400x400
300x300	600x400



RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

PCT01-2

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Before installation, please ensure that your TV stand mounting holes, dimensions, and weight can meet the specifications and standards of the TV stand. If you have any questions or questions about the instructions and warnings, please contact us for help..



Important:

1. When installing the support, please use professional safety devices and tools in accordance with the requirements of the assembly instructions. Improper installation may cause the TV to fall or serious injury.
2. Before installation, ensure that the support surface can safely support the weight of the device and all accessories.
3. Please do not exceed the intended load capacity, otherwise it may cause serious injury or property damage.
4. This product contains small parts, swallowing them may cause choking hazards. Please keep out of reach of children.
5. This product is only suitable for indoor use, outdoor use may cause product damage and personal injury risk.
6. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Children shall not play with the appliance.
9. This appliance shall not be used by children. Keep the appliance out of reach of children.

10. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
11. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
12. Please use the product according to the intended use, warn of potential injury from misuse.
13. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Maintenance:

Please check the connection between the bracket and the TV periodically to ensure it remains stable, and verify that the screws have not loosened or fallen off due to long-term use (at least once every three months). If any security risks are identified, replace or reinforce the parts promptly.

WARNING FOR POWER STRIP:

ELECTRICAL SHOCK AND FIRE HAZARD !

The power strip is not to be connected to power prior to installation. Failure to comply with this instruction could result in an electrical failure, fire and electrocution.

IMPORTANT: Installation of this power strip and related wiring must be done by a qualified electrician in compliance with all applicable electrical codes,

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- For indoor use only.
- Under no circumstances could the cover be opened. If the cover is damaged, the adapter may no longer be used.
- This appliance can be used by children aged 8 years and above and

persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

SAVE THIS MANUAL

 
 


CORRECT DISPOSAL

This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.

PARTS LIST

PART LIST




		  Plastic Washer  Steel Washer	
			M8X50 G X4
			H X4
			M6x10 I X20
			M6X16X1.5 J X8
			M6X16 K X4
			L X1 4mm
			L X1 5mm
			L X1
			M X3
			N X3

FOR TV INSTALLATION

				
M4X30 TV1 X4	M6X16 TV2 X4	M6X35 TV3 X4	M8X16 TV4 X4	M8X35 TV5 X4
				
M8X50 TV6 X4	SP1 TV7 X8	SP2 TV8 X4	SP3 TV9 X4	Washer TV10 X4







ASSEMBLY STEP

   1

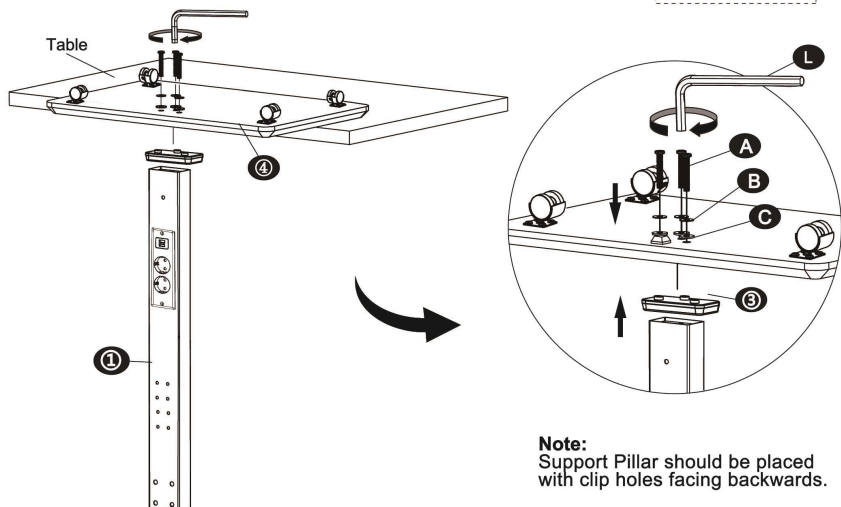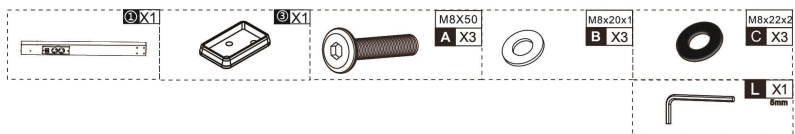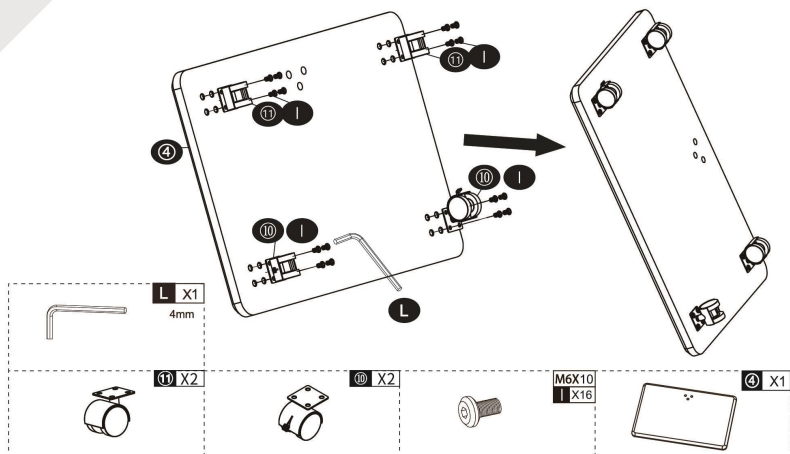


2

    
 
 
Note:
Support Pillar should be assembled with clip holes in the same side.

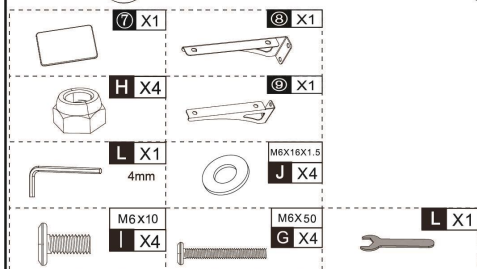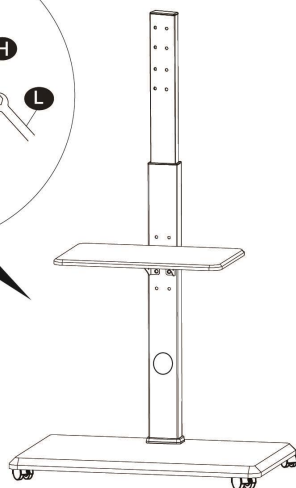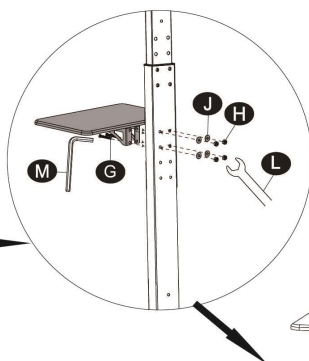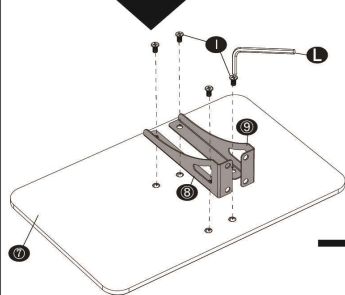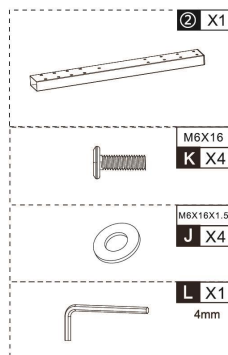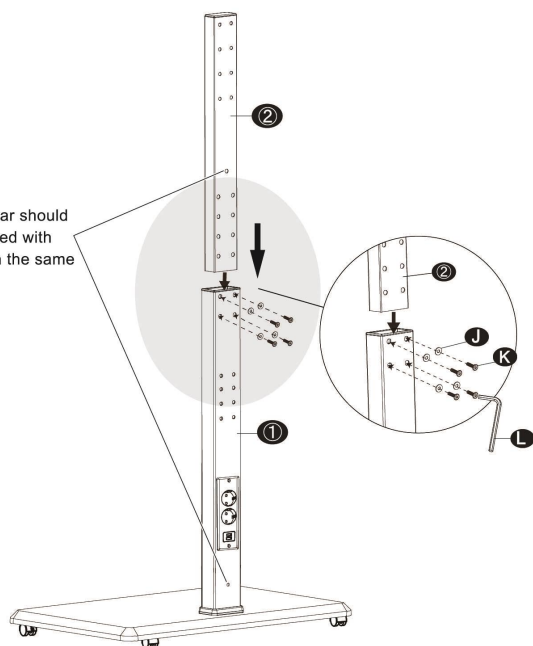

3

 


M6X45

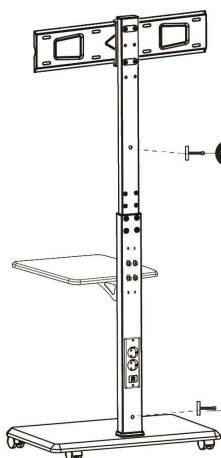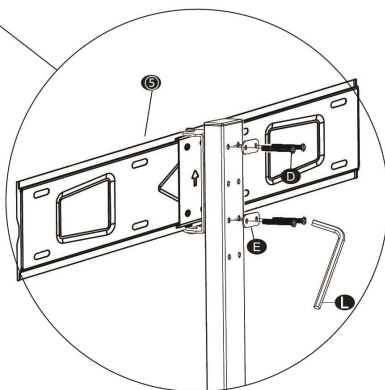   


N

 N

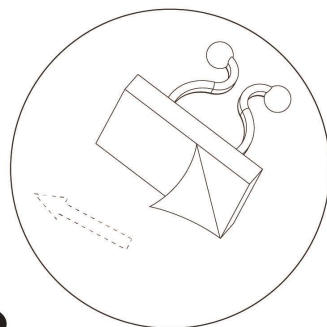


4

 Measure the TV fixing holes Width and Height

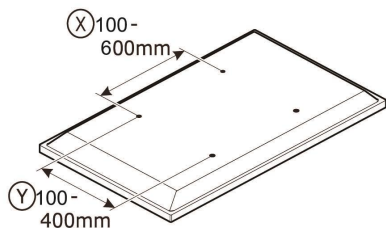

 If width (X) is greater than 600mm or height (Y) greater than 400mm STOP installation now and contact the customer help line

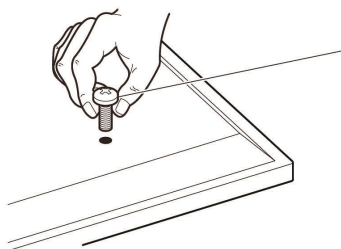




TV1
TV2-3
TV4-6

You are provided with 4 diameters of TV fixing screws, **M4**, **M5** and **M8**. Determine the screw diameter that fits.

Spacers


SP

   For TVs with irregular/obstructed back

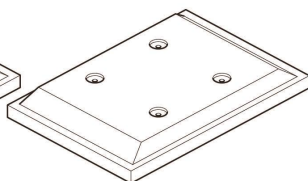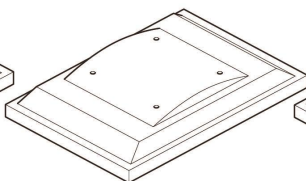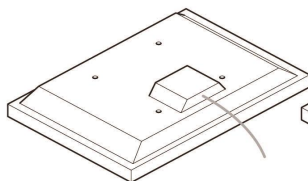


No Spacers

 For TVs with flat/unobstructed back

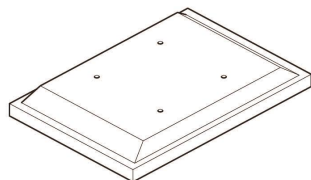



WARNING

 please keep for future reference.

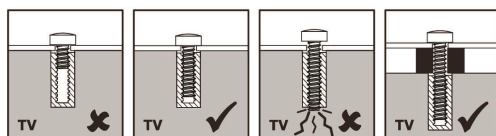

5

  NOT INCLUDED

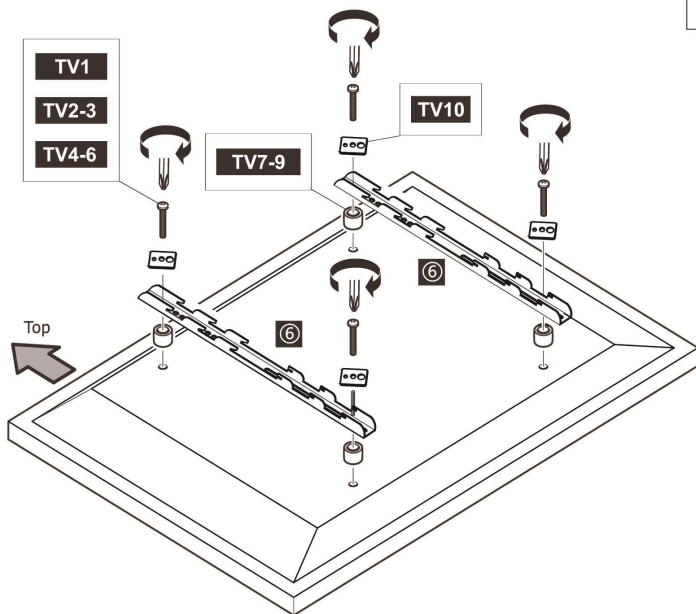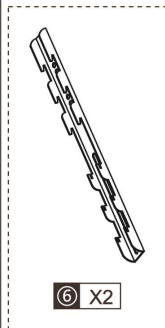

M4

TV1 X4



Washer with 3 holes
TV10 X4



2.5mm

TV7 X8



10mm

TV8 X4



22mm

TV9 X4



M6

TV2-3 X4



Washer with 3 holes
TV10 X4



2.5mm

TV7 X8



10mm

TV8 X4



22mm

TV9 X4



M8

TV4-6 X4



Washer with 3 holes
TV10 X4



2.5mm

TV7 X8



10mm

TV8 X4



22mm

TV9 X4

 
 
 
 
Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

6

NOT INCLUDED



M X3

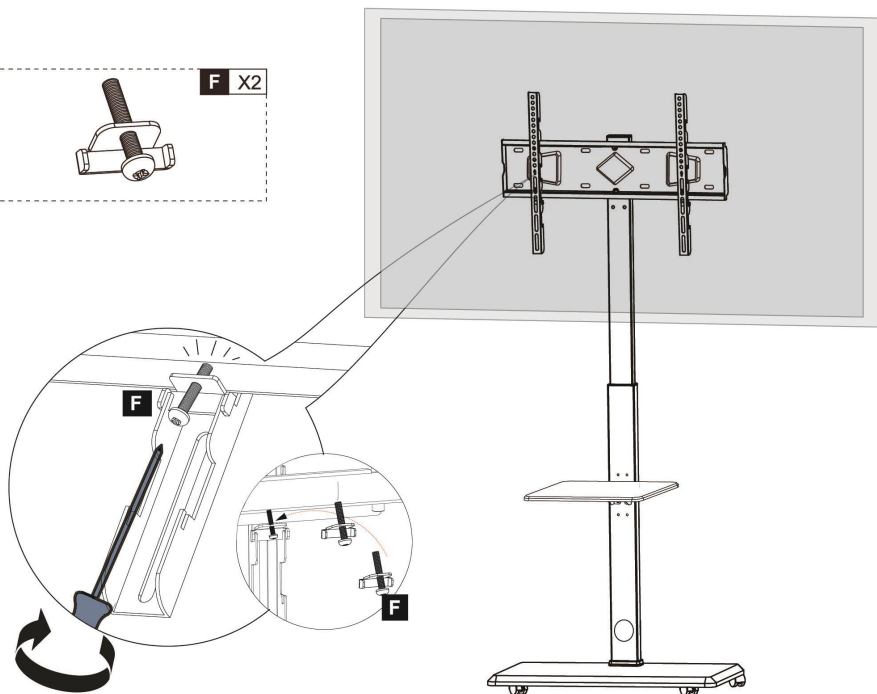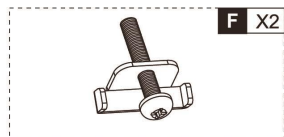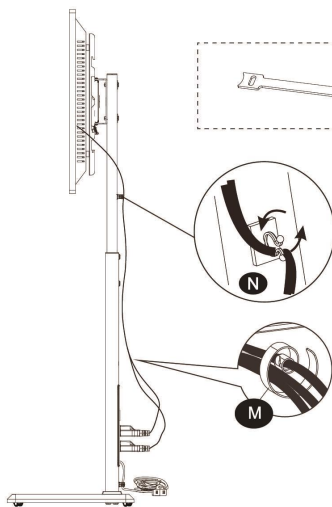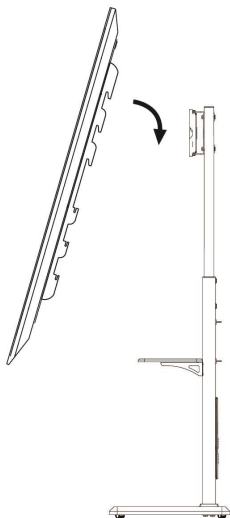

PRODUCT PARAMETER

Model	PCT01-2
Power	AC230V 50Hz 10A (Via Power Strip)
Safe Loading Weight	88 LBS
Product Size	660*380*(1365-1620)mm

