



Upgrade · The Home Creator Way

DRUM SET INSTRUCTION MANUAL

MODEL: SH-001-BL, SH-001-BK, SH-001-BL-A, SH-001-RD

VEVOR Support Center



SH-001-BL



SH-001-BK

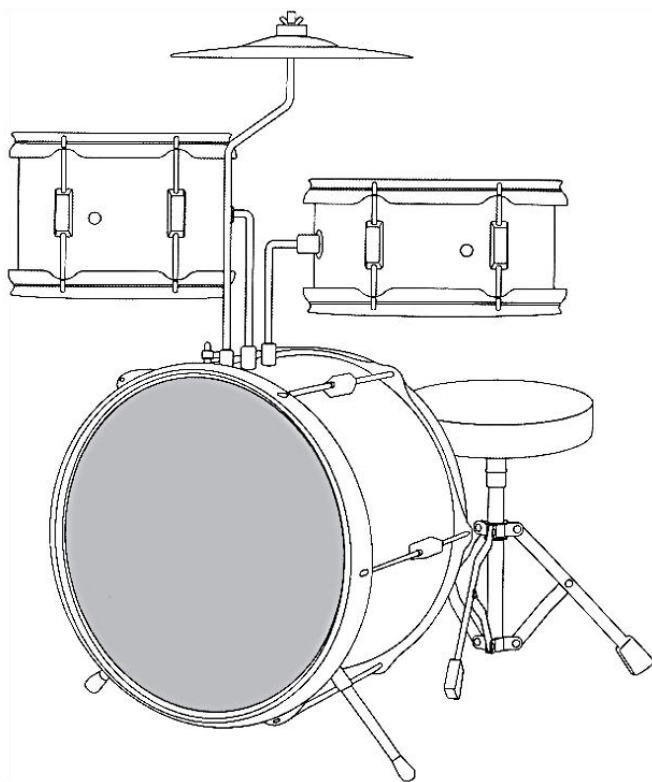


SH-001-BL-A



SH-001-RD

Model: SH-001-BL, SH-001-BK, SH-001-BL-A, SH-001-RD



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

If an appliance is intended to be permanently connected to the water mains and not connected by a hose-set, this shall be stated.

For appliances marked with different rated voltages or different rated frequencies (separated by a /), instructions shall be included to indicate to the user or installer what action must be taken to adjust the appliance for operation at the required rated voltage or rated frequency.

The instructions for built-in appliances shall include information with regard to the following:

 
 
- dimensions of the space to be provided for the appliance;
- dimensions and position of the means for supporting and fixing the appliance within this space;
- minimum distances between the various parts of the appliance and the surrounding structure;
- minimum dimensions of ventilating openings and their correct arrangement;
- connection of the appliance to the supply mains and the interconnection of any separate components;
- necessity to allow disconnection of the appliance from the supply after installation, unless the appliance incorporates a switch complying with 24.3. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules.

+The method of fixing stated is not to depend on the use of adhesives since they are not considered to be a reliable fixing means.






NOTICE






- Do not stand on or use any part of this product as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges .If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED

 a	 b x 8
DRUM KEY	TENSION RODS & WASHERS

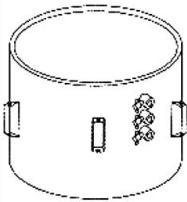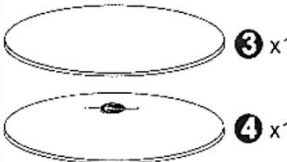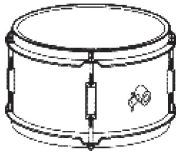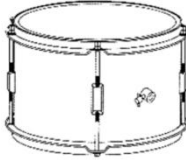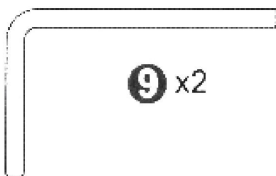
PARTS

 1	 3 x1 4 x1	 6 x2
BASS DRUM SHELL	DRUM HEADS	DRUM HOOPS
 7	 8	 9 x2
SMALL TOM DRUM	LARGE TOM DRUM SHELL	TOM HOLDER

 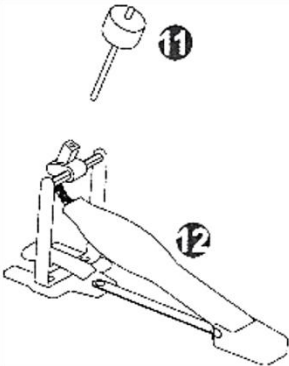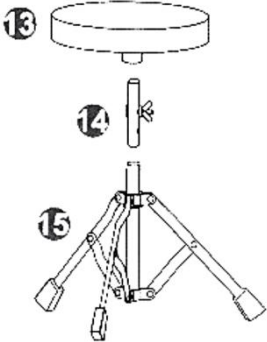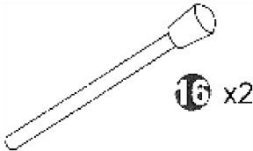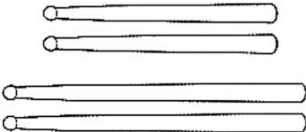
		
CYMBAL HOLDER	PEDAL	DRUM THRONE
		
BASS DRUM LEG	CYMBAL	DRUMS TICKS

PRODUCT ASSEMBLY

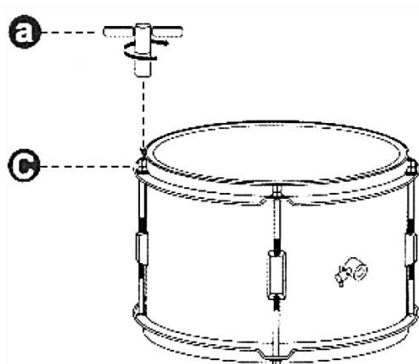
1. Attach the large tom drum hoop/head with tension rods and washers



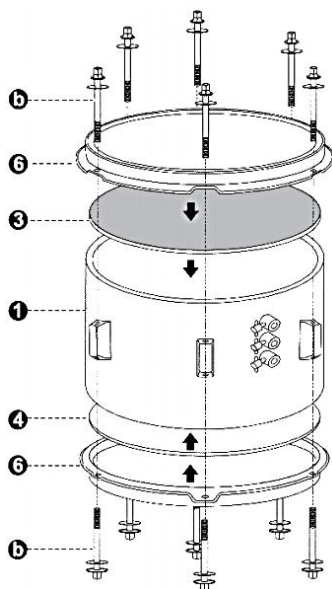
2. Place bass drum head and bass drum hoop on the bass drum shell.



3. Attach the bass drum hoop/head with tension rods and washers

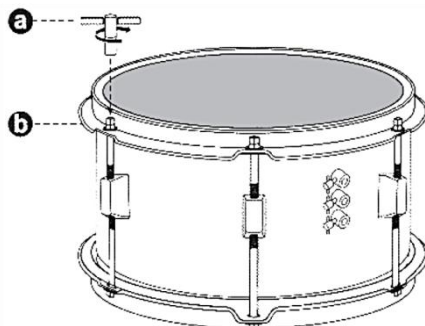


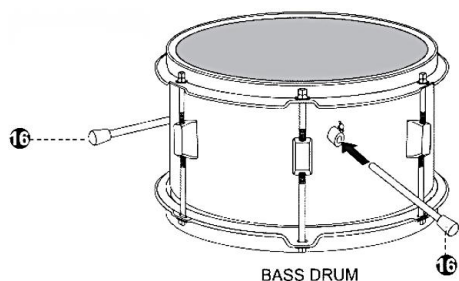4. Insert two bass legs into the bass drum. Tighten the wing nuts to secure the legs.




5. Stand the bass drum up on its legs, insert two tom holder into the top of the bass drum. Tighten the wing nuts to secure the legs.

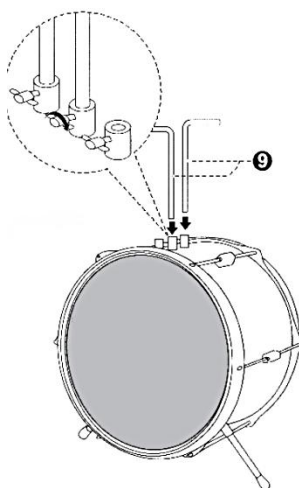NOTE: Make sure the arms face opposite directions.




6. Insert the small tom and large tom on on to the tom holders.

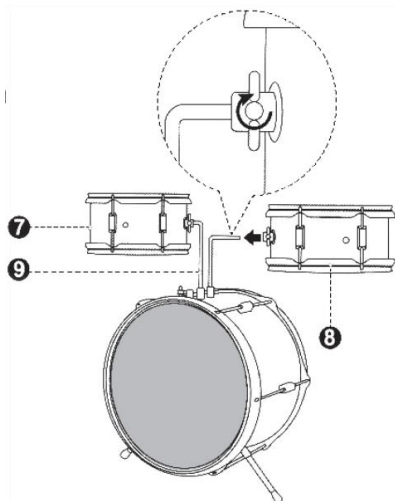
Tighten the wing nuts to secure the leds.



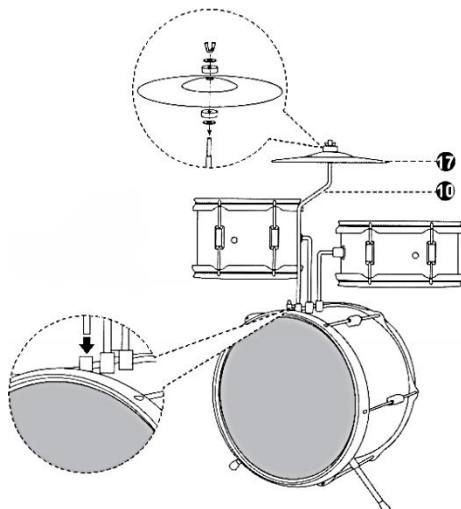
7. Insert the stand from the cymbal set into the designated slot. Tighten the wing nuts to secure the stand. Remove the wing nut, washer, and top pad from the stand, place the cymbal, then replace the top pad, washer, and wingnut.



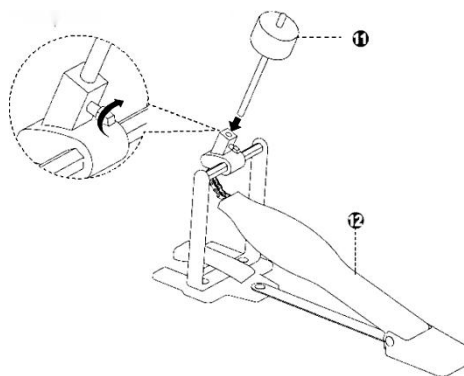
8. Assemble the pedal.



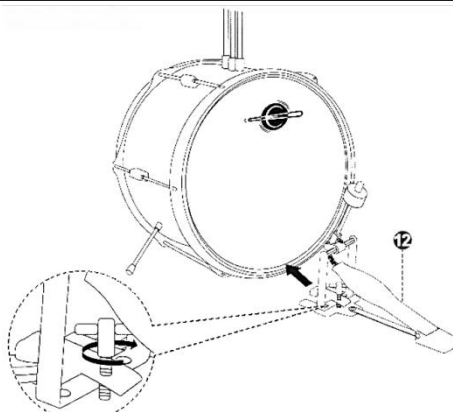9. Put the pedal to the bottom of the bass drum hoop and tighten the pedal screw.



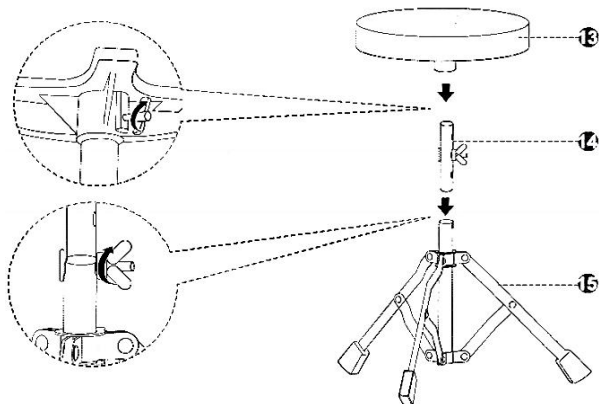10. Place the drum throne on the drum throne stand. Tighten the wing nuts to secure the drum throne,



WARNING:

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.



CHOKING HAZARDS-

small parts not for children under 6 yrs.

Manufacturer : Tianjin Korpus Musical Instrument Co., Ltd

Address: 50 meters east of Cierzhuang Primary School, Tangguantun Town, Jinghai District, Tianjin City, China

