



Affordable. Reliable. Home Improvement.

WEIGHTED DIGITAL PIANO

 
MODEL: S-180

VEVOR

Affordable. Reliable. Home Improvement.

**Weighted
digital piano**

MODEL: S-180

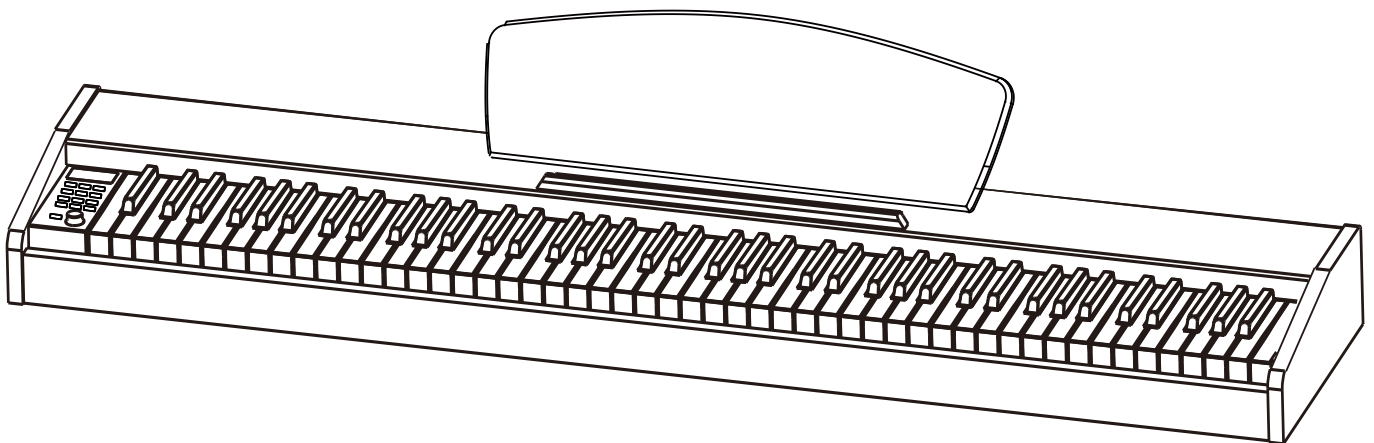

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

**FCC Information:**

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

 
This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.




This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

Manual for electric piano

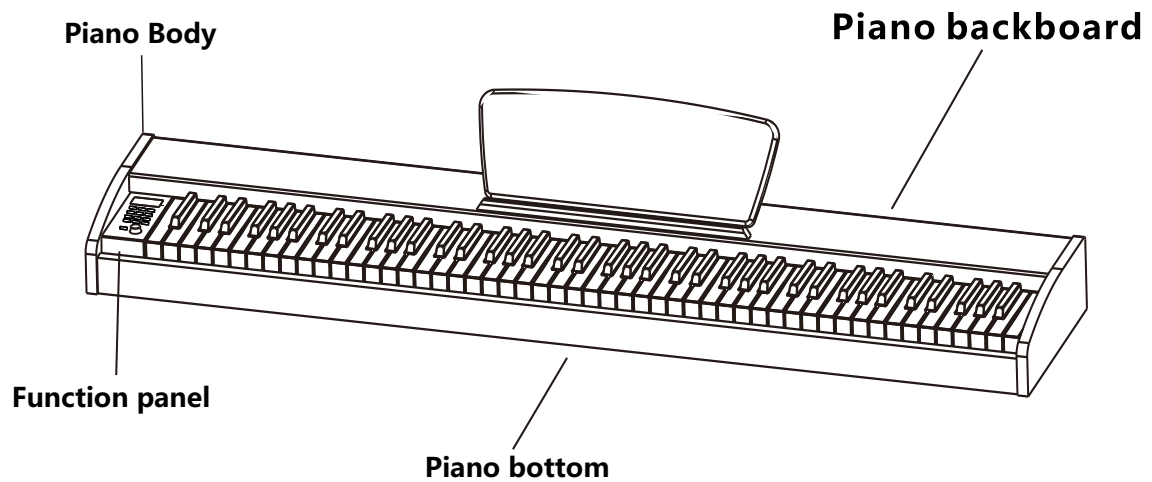


Piano backboard

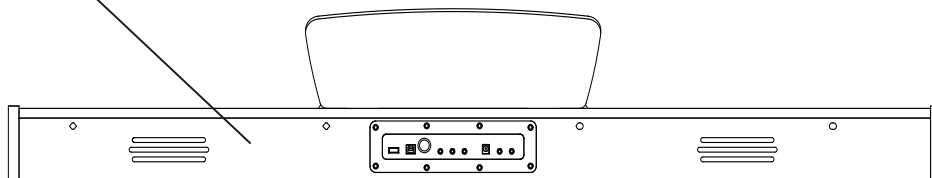 

Manual for electric piano

 Introduction of function panel

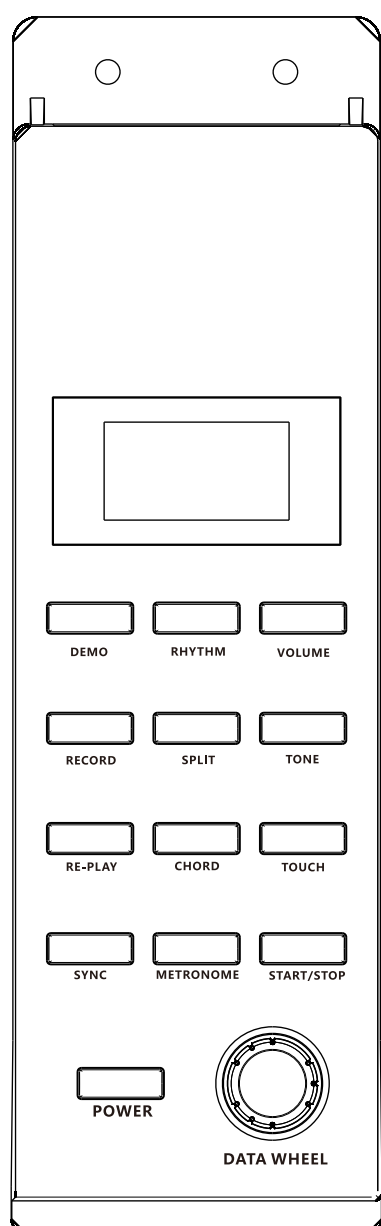

- **Keyboard: 88 standard keys (including Black Keys) range: A0-C8**
- **Timbre: 238 timbres**
- **Rhythm: 238 rhythms**
- **Demo: 100 songs**
- **Rhythm function, demonstration music function, recording and playback function**
- **Double keyboard function, chord function, metronome function**
- **Output function: three-digit digital display/LCD display**
- **Touch control function**
- **Mp3 playback function, Microphone function**
- **MIDI arrangements**
- **Pedal function**

Manual for electric piano

Product description

Points for attention:

- 1.Product configuration: 12v original factory charger Remark:It is strictly prohibited to use chargers exceeding 12V, otherwise it may cause product burnout,even causing a fire.
- 2.If you do not use it for a long time, please unplug the charger.

Manual for electric piano

Instructions for use

Play (Tone) mode:

1. Press the [POWER] switch and enter the play (tone) mode automatically.
2. Rotating [DATA WHEEL] can choose the timbre.

Rhythm mode:

1. Press the [START/STOP], then press [RHYTHM] key, the system enters rhythm mode and plays rhythm.
2. Rotate [DATA WHEEL] can select rhythm, the range from 0-237.
3. Press the [SYNC] key to start the rhythm by pressing the piano key.
4. In this mode, press the [RHYTHM] key, rotate [DATA WHEEL] switch the timbre, if you want change the rhythm, need press the [RHYTHM] key again.

Dual keyboard mode:

1. Press the [SPLIT] key to turn on/off double keyboard mode.
2. In this mode, the range of the keys is divided into two intervals :AO-C4T and C4#-C8

Demo mode:

1. Press the [DEMO] key, the system plays all the demo songs, press the [START/STOP] key to stop the demo songs playing.
2. Rotate [DATA WHEEL] to select demo songs, the range from 0-99.
3. In this mode, press the [RHYTHM] key and rotate the [DATA WHEEL] to switch the tone. if you want change the rhythm, need press the [RHYTHM] key again.

Recording function:

1. Press the [RECORD] key to enter the recording mode, digital tube display 【REC】
2. The recording function is to record the notes by multi-channel real-time recording.
3. After entering the recording mode, the user can play the keys at will, and the system will automatically record the keys played by the user. When the recording block planned by the system is full, the recording is automatically closed, and the maximum number of notes is 2000.
4. Press [RE-PLAY] key to play back the recording, but must have a note to be recorded, this playback function is regarded as a valid .playback after the end, automatically back to the original state.
5. After re-recording, the system reset, the recorded notes will be automatically refreshed.

Chord mode:

1. When the system plays the rhythm, press the [CHORD] key to enter the chord mode.
2. Chord function :A0~F3# interval press the keys to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the keys.
3. In chord mode, press the [CHORD] key to close the chord.

Manual for electric piano

Touch control function :

Press the [TOUCH] can turn on or off the strength, and the strength is on when the power is turned on.

Bluetooth function: (Note: normal configuration without Bluetooth function):

1. In Bluetooth mode, the connected Bluetooth device can be used as a Bluetooth speaker.
2. Bluetooth MIDI connection, open the phone Bluetooth function, open the APP selection settings select Bluetooth connection, you can use directly.

Metronome function:

1. Metronome for the beat auxiliary function, press the [Metronome] key can cycle to select the beat.
2. The metronome has four changes: 1/4 beat → 2/4 beat → 3/4 beat > 4/4 beat.

Volume button function:

 
Press [VOLUME] to rotate [DATA WHEEL] to select volume.

MP3 function:

1. Connect U disk directly into MP3 mode.
2. MP3 volume control: rotate the [DATA WHEEL] to control the volume.
3. Automatic loop playback.

Manual for electric piano

Socket location

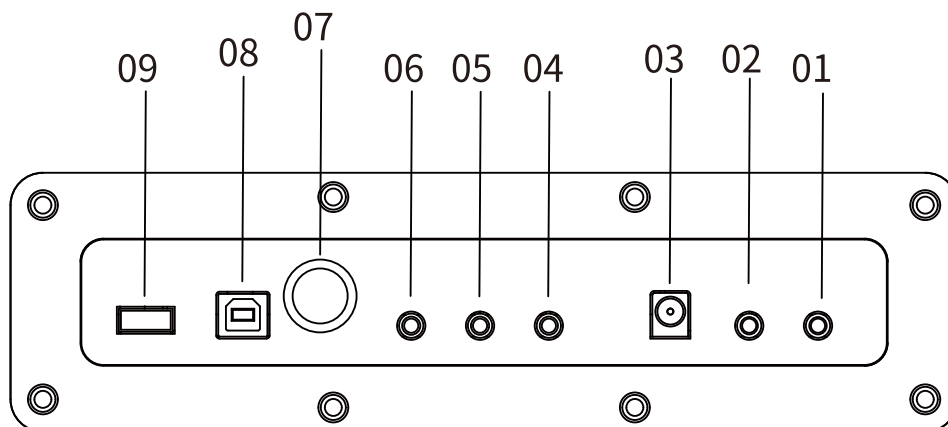

1. **Headphone jack:** connecting the headphone will automatically cut off the output of the built-in speaker so that it does not disturb others while playing.
2. **Audio output:** audio output interface can be connected to audio equipment.
3. **Operating voltage:** Input Voltage Range DC 12 V.
4. **Microphone:** Support microphone function
5. **Audio input:** insert the audio cable into the "Audio input" interface directly connected to the phone to play songs.
6. **Sustain pedal:** this product has sustain sound pedal function, when using please according to the need to step on the pedal.
7. **Three-pedal :** can be connected with the three-pedal function (grand piano) to meet the needs of customers on different occasions to play.
8. **MIDI interface:** use data cable to connect computer, mobile phone or ipad to open corresponding software can use MIDI function, transmit and receive MIDI signal.
9. **USB port:** U disk plays MP3 songs.

Manual for electric piano

238Tone

0	Acoustic Grand Piano	50	SynthStrings 1	100	FX 5 (brightness)
1	Bright Acoustic Piano	51	SynthStrings 2	101	FX 6 (goblins)
2	Electric Grand Piano	52	Choir Aahs	102	FX 7 (echoes)
3	Honky-tonk Piano	53	Voice Oohs	103	FX 8 (sci-fi)
4	Rhodes Piano	54	SynthVoice	104	Sitar
5	Chorused Piano	55	Orchestra Hit	105	Banjo
6	Harpsichord	56	Trumpet	106	Shamisen
7	Clavichord	57	Trombone	107	Koto
8	Celesta	58	Tuba	108	Kalimba
9	Glockenspiel	59	Muted Trumpet	109	Bagpipe
10	Music box	60	French Horn	110	Fiddle
11	Vibraphone	61	Brass Section	111	Shanai
12	Marimba	62	SynthBrass 1	112	Tinkle Bell
13	Xylophone	63	SynthBrass 2	113	Agogo
14	Tubular Bells	64	Soprano Sax	114	Steel Drums
15	Dulcimer	65	Alto Sax	115	Woodblock
16	Hammond Organ	66	Tenor Sax	116	Taiko Drum
17	Percussive Organ	67	Baritone Sax	117	Melodic Tom
18	Rock Organ	68	Oboe	118	SynthDrum
19	Church Organ	69	English Horn	119	Reverse Cymbal
20	Reed Organ	70	Bassoon	120	Guitar Fret Noise
21	Accordian	71	Clarinet	121	Breath Noise
22	Harmonica	72	Piccolo	122	Seashore
23	Tango Accordian	73	Flute	123	Bird Tweet
24	Acoustic Guitar (nylon)	74	Recorder	124	Telephone Ring
25	Acoustic Guitar (steel)	75	Pan Flute	125	Helicopter
26	Electric Guitar (jazz)	76	Bottle Blow	126	Applause
27	Electric Guitar (clean)	77	Shakuhachi	127	Gunshot
28	Electric Guitar (muted)	78	Whistle	128	Acoustic Grand Piano
29	Overdriven Guitar	79	Ocarina	129	Bright Acoustic Piano
30	Distortion Guitar	80	Lead 1 (square)	130	Electric Grand Piano 1
31	Guitar Harmonics	81	Lead 2 (sawtooth)	131	Honky-tonk Piano 1
32	Acoustic Bass	82	Lead 3 (caliope lead)	132	Rhodes Piano 1
33	Electric Bass(finger)	83	Lead 4 (chiff lead)	133	Chorused Piano 1
34	Electric Bass (pick)	84	Lead 5 (charang)	134	Harpsichord 1
35	Fretless Bass	85	Lead 6 (voice)	135	Clavichord 1
36	Slap Bass 1	86	Lead 7 (fifths)	136	Celesta 1
37	Slap Bass 2	87	Lead 8 (bass+lead)	137	Glockenspiel 1
38	SynthBass 1	88	Pad 1 (new age)	138	Music box 1
39	SynthBass 2	89	Pad 2 (warm)	139	Vibraphone 1
40	Violin	90	Pad 3 (polysynth)	140	Marimba 1
41	Viola	91	Pad 4 (choir)	141	Xylophone 1
42	Cello	92	Pad 5 (bowed)	142	Tubular Bells 1
43	Contrabass	93	Pad 6 (metallic)	143	Dulcimer 1
44	Tremolo Strings	94	Pad 7 (halo)	144	Hammond Organ 1
45	Pizzicato Strings	95	Pad 8 (sweep)	145	Percussive Organ 1
46	Orchestral Harp	96	FX 1 (rain)	146	Rock Organ 1
47	Timpani	97	FX 2 (soundtrack)	147	Church Organ 1
48	String Ensemble 1	98	FX 3 (crystal)	148	Reed Organ 1
49	String Ensemble 2	99	FX 4 (atmosphere)	149	Accordian 1

Manual for electric piano

150	Harmonica 1	200	Piccolo 1
151	Tango Accordion 1	201	Flute 1
152	Acoustic Guitar (nylon)	202	Recorder 1
153	Acoustic Guitar (steel)	203	Pan Flute 1
154	Electric Guitar (jazz) 1	204	Bottle Blow 1
155	Electric Guitar (clean)	205	Shakuhachi 1
156	Electric Guitar (muted)	206	Whistle 1
157	Overdriven Guitar 1	207	Ocarina 1
158	Distortion Guitar 1	208	Lead 1-1(square)
159	Guitar Harmonics 1	209	Lead 2-1(sawtooth)
160	Acoustic Bass 1	210	Lead 3-1(caliopo lead)
161	Electric Bass(finger) 1	211	Lead 4-1(chiff lead)
162	Electric Bass (pick) 1	212	Lead 5-1(charang)
163	Fretless Bass 1	213	Lead 6-1(voice)
164	Slap Bass 3	214	Lead 7-1(fifths)
165	Slap Bass 4	215	Lead 8-1(bass+lead)
166	SynthBass 3	216	Pad 1-1(new age)
167	SynthBass 4	217	Pad 2-1(warm)
168	Violin 1	218	Pad 3-1(polysynth)
169	Viola 1	219	Pad 4-1(choir)
170	Cello 1	220	Pad 5-1(bowed)
171	Contrabass 1	221	Pad 6-1(metallic)
172	Tremolo Strings 1	222	Pad 7-1(halo)
173	Pizzicato Strings 1	223	Pad 8-1(sweep)
174	Orchestral Harp 1	224	FX 1-1(rain)
175	Timpani 1	225	FX 2-1(soundtrack)
176	String Ensemble 3	226	FX 3-1(crystal)
177	String Ensemble 4	227	FX 4-1(atmosphere)
178	SynthStrings 3	228	FX 5-1(brightness)
179	SynthStrings 4	229	FX 6-1(goblins)
180	Choir Aahs 1	230	FX 7-1(echoes)
181	Voice Oohs 1	231	FX 8-1(sci-fi)
182	SynthVoice 1	232	Sitar 1
183	Orchestra Hit 1	233	Banjo 1
184	Trumpet 1	234	Shamisen 1
185	Trombone 1	235	Koto 1
186	Tuba 1	236	Kalimba 1
187	Muted Trumpet 1	237	Bagpipe 1
188	French Horn 1		
189	Brass Section 1		
190	SynthBrass 3		
191	SynthBrass 4		
192	Soprano Sax 1		
193	Alto Sax 1		
194	Tenor Sax 1		
195	Baritone Sax 1		
196	Oboe 1		
197	English Horn 1		
198	Bassoon 1		
199	Clarinet 1		

Manual for electric piano

238Rhythm

000	80sPop	050	Samba1	100	Euro soul
001	16beat1	051	Samba2	101	Rhumba2
002	8Ballad	052	Tango1	102	Rhumba3
003	Soul1	053	Tango2	103	Jazz Samba
004	70sRock	054	House1	104	Rhumba4
005	Afro pop	055	Jazz waltz	105	Funk Samba
006	Samba pop	056	Bolero	106	Rhumba5
007	60sSoul	057	New soul	107	Samba3
008	70sSoul	058	Bossa nova3	108	Hard beat
009	Funky	059	Shuffle1	109	Mambo1
010	16Beat slide	060	Shuffle2	110	Disco soul
011	Pop dance1	061	House2	111	Mambo2
012	Pop dance2	062	Merengue1	112	Cobmo
013	Hard rock	063	Salsa	113	Swing beat
014	Fusion jazz	064	Latin swing	114	China3
015	Funk slide	065	Thailand	115	Band marche1
016	Aor	066	Reggae1	116	Band marche2
017	Love ballad1	067	Soul2	117	Band marche3
018	Love ballad2	068	Soul3	118	Big band1
019	Funkysoul	069	Merengue2	119	Big band2
020	Classic pop	070	Polka3	120	Soul7
021	c&w1	071	16Reggae	121	Soul8
022	c&w2	072	Slow rock1	122	Swing2
023	Bossa noval1	073	Slow rock2	123	Swing3
024	Rock roll	074	Slow soul3	124	Swing4
025	Rock cha-cha	075	Jorpo	125	Habanera
026	Baiao	076	Lambada	126	Bachata1
027	Pop dance3	077	Love ballad3	127	Bachata2
028	Bachata	078	Plena	128	80sPop2
029	Bossa noval2	079	China1	129	16beat2
030	Polka1	080	Acid	130	8Ballad2
031	Blues1	081	8Beat modern	131	Soul12
032	80sSoul	082	Countryfolk	132	70sRock2
033	90sSoul	083	Soul4	133	Afro pop2
034	Popular waltz	084	City pop	134	Samba pop2
035	American march	085	Calypso	135	60sSoul2
036	Tango	086	Love ballad4	136	70sSoul2
037	Tarante	087	Love ballad5	137	Funky2
038	Funk pop	088	Soul5	138	16Beat slide2
039	Rock waltz	089	Bluegrass	139	Pop dance3
040	Mideast	090	16beat2	140	Pop dance4
041	Jazz waltz1	091	China2	141	Hard rock2
042	Jazz waltz2	092	Soul6	142	Fusion jazz2
043	16Beat tune	093	Kinetic1	143	Funk slide2
044	Polka2	094	Kinetic2	144	Aor2
045	Waltz	095	Funk disco	145	Love ballad3
046	African	096	Cobmo disco	146	Love ballad4
047	Swing1	097	Twist	147	Funkysoul2
048	Vallenato	098	Euro beat	148	Classic pop2
049	Bequine	099	Rhumba1	149	c&w3

Manual for electric piano

150	c&w4	200	Slow roc4
151	Bossa noval2	201	Slow rock5
152	Rock roll2	202	Slow soul6
153	Rock cha-cha2	203	Jorpo2
154	Baiao2	204	Lambada2
155	Pop dance4	205	Love ballad6
156	Bachata2	206	Plena2
157	Bossa noval3	207	China12
158	Polka12	208	Acid2
159	Blues12	209	8Beat modern2
160	80sSoul2	210	Countryfolk2
161	90sSoul2	211	Soul8
162	Popular waltz2	212	City pop2
163	American march2	213	Calypso2
164	Tango2	214	Love ballad6
165	Tarante2	215	Love ballad7
166	Funk pop2	216	Soul6
167	Rock waltz2	217	Bluegrass2
168	Mideast2	218	16beat3
169	Jazz waltz3	219	China4
170	Jazz waltz4	220	Soul7
171	16Beat tune3	221	Kinetic3
172	Polka3	222	Kinetic4
173	Waltz2	223	Funk disco2
174	African2	224	Cobmo disco2
175	Swing12	225	Twist2
176	Vallenato2	226	Euro beat2
177	Bequine2	227	Rhumba12
178	Samba3	228	Euro soul2
179	Samba4	229	Rhumba3
180	Tango5	230	Rhumba4
181	Tango6	231	Jazz Samba2
182	House3	232	Rhumba5
183	Jazz waltz2	233	Funk Samba2
184	Bolero2	234	Rhumba6
185	New soul2	235	Samba4
186	Bossa nova9	236	Hard beat2
187	Shuffle3	237	Mambo2
188	Shuffle4		
189	House3		
190	Merengue2		
191	Salsa2		
192	Latin swing2		
193	Thailand2		
194	Reggae2		
195	Soul8		
196	Soul9		
197	Merengue3		
198	Polka4		
199	16Reggae2		

Manual for electric piano

100Demo


000	Romance De Amor	050	Mozart
001	Concerto D'Amour	051	Mozart symphony.
002	Dream of Love	052	Cowboy
003	Minuet From L'Arlesienne	053	Song Of Herding Sheep
004	Aledeman	054	Going Hom
005	The River of Babylon	055	Clap Your Hands
006	Bach Song	056	The Fountain
007	Ballade	057	A Comme Amour
008	Beethoven Piano Sonatas	058	Unchained Melody
009	Cancan	059	Il Barbiere di Siviglia
010	Get Tea	060	santa lucia
011	On wings of song	061	Troika
012	Come Back To Sorrento	062	Hawthorn tree
013	Clarinet Polka	063	The Maiden's Prayer
014	Toreador Song	064	Santa Claus is Coming to Town
015	cuckoo waltz	065	Schubert Serenade
016	Russian dance music	066	Ballade pour Adeline
017	Merry widow waltz	067	SAY YOU SAY ME
018	Minuet in G	068	Counting The Ducks
019	Dove	069	Four Seasons Spring March
020	Old Franc	070	Silence
021	Haydn serenade	071	Swan Lake
022	Ode to Joy	072	Susannah
023	Fantasy March	073	Sweet Honey
024	Dance of the Flowers	074	Turkish March
025	Bridal Chorus	075	Rhythm Of Rain
026	Innocent	076	Happy Birthday to You
027	Parade March	077	Little Brown Jug
028	Gewolt	078	Trout
029	Chopin Fi	079	Moon
030	March Militaire	080	View of Silence
031	Triumphal March	081	Smiling Polka
032	Carmen aragon	082	Viana Forest Story
033	Carman Overture	083	My sun
034	Canon	084	My hart will go on
035	Katyusha	085	For Alice
036	Lovely Smurf	086	Chopin Nocturnes
037	Clementine sonata	087	Chopin Nocturnes
038	Croatian Rhapsody	088	Spanish Matador
039	The Blue Danube Waltz	089	Hungarian Dances
040	The Thunderer March	090	Edelweiss flower
041	Let It Go	091	Lullaby
042	The Butterfly lovers	092	Wild bees fluttering and dancing
043	Mary had a little lamb	093	Polka, Italy
044	American patro	094	Humorous song
045	Fantasia	095	Auld Lang Syne
046	MARRIAGE D' AMOUR	096	CSIKOS POST
047	Fate Symphony	097	New Paradise Park
048	The Magic Flute-overture	098	Moon River
049	Jasmine	099	Yesterday Once More

PRECAUTIONS

Special reminder: This product is an electronic product. After electrified, the loudspeaker (two horns or one horn, earphone) has some current sound as a normal phenomenon. It is necessary to keep away from these devices, such as radio, routers, TV receivers, refrigerators, washing machines, etc.

Power Supply

 This product can be supplied by standard indoor wall socket, please use only the power cord specified by this product. When you do not use, please be sure to turn off the power supply, if you do not use it for a long time, please pull out the power cord and keep it properly.



Sign

In order to ensure that you are safe and correct use of this product, to prevent damage to the user and other people, and to the financial damage, the specification and the product marked with a series of safety signs. All kinds of signs and their meaning.

Warning

This sign indicates that, if you ignore the flag and error operation of this product, there is a potential risk of death or serious injury to personnel.

Attention

This sign indicates that, if you ignore the flag and the wrong operation of this product, there is a potential risk of injury or other financial damage caused by personnel.

Logo example



This triangle mark indicates that the user should pay attention to the matters. (left case is be careful electric shock)



The circular sign painting a slash said prohibited matters. The icon in the logo or next to the specific content of the ban. (left case is no disassemble)



Black dots indicate matters must be complied with. Icon in this sign indicates the specific content that must be followed. (left case is the power plug must be pulled out of the socket)



Warning

Smoke, odor, overheating

When the product is smoking, emitting odors or overheating, it continues to be used to cause fire and electric shock. In the event of such a situation, the following operations shall be carried out immediately.

- 1 Turn off the power supply.
- 2 Pull the plug from the power outlet.
- 3 Contact your agency

Power cord

● Improper use of power supply leads to danger of fire and electric shock Must observe the following precautions.

- Special power lines specified for this product must be used.

- An AC power source with output voltage within the household rated voltage must be used.

- It is not allowed to overload the power socket and the power extension line.

● Improper handling of power lines, resulting in damage or rupture of the fire and the risk of electric shock.

Must observe the following precautions.

- Do not place heavy objects on the power line or make them heated.
- Do not attempt to transform the power cord or bend it too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, replace the power cord of the same type.

● Do not use wet hands to touch the power cord and plug, otherwise there is a risk of electric shock.

● Please use the power cord in the place where the water will not be spilled. Water has the risk of fire and electric shock.

● Never put a vase or any other container with water in this product. Water has the risk of fire and electric shock.

● Do not let the minor contact plug and power line or a connecting plate, Minor knowledge of useless electricity safety causes danger of electric shock.

● Improper use of power supply leads to danger of fire and electric shock. The following matters of attention must be observed.

- Do not place the power cord near the furnace or other heat sources.

- Unplug the power cord from the power outlet. Must grasp the plug body.

- Plug the power cord into the power socket.

- Before connecting or cutting off the power cord, make sure that the power is off.

- The power cord should be removed from the electrical outlet of the wall before a thunderstorm occurs or traveling or before other long leave.

- At least once a year, unplug the power cord from the wall outlet and clean the dust around the plug.

Don't burn this product

Do not put this product into the fire, otherwise it will cause the burning of wood products and the explosion of the internal electronic components. There is a danger of fire and personnel injury

Water and foreign matter

Water and other liquids and (metal) into this product has the risk of causing fire and electric shock. The following operation should be performed immediately when the above situation occurs.

- 1 turn off the power supply
- 2 if the power cord is used for power supply, it will be pulled off from the wall of the power outlet
- 3 contact your dealer.

Dismantling and rebuilding

Do not disassemble this product or transform it in any way. Otherwise it will be hazardous to electrical shock, burns or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your dealer.

