



Upgrade · The Home Creator Way

CABINET STYLE GARMENT RACK



MODEL:SHSS7635192-2XM4B

VEVOR Support Center



SHSS7635192-2XM4B

  MODEL:SHSS7635192-2XM4B

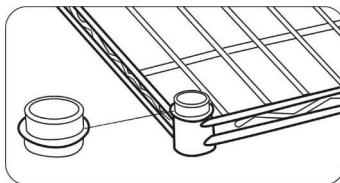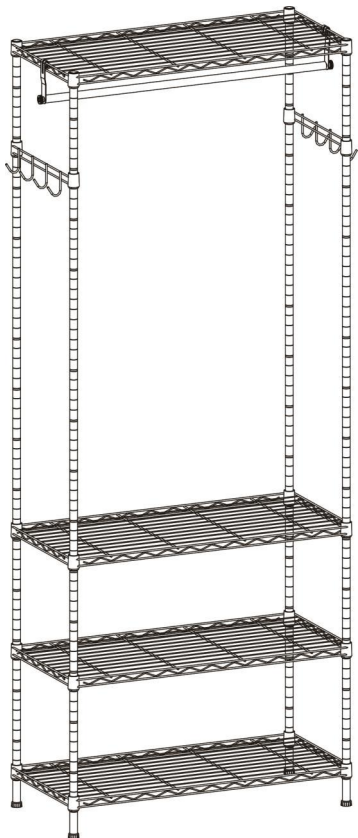

Reduce Product Damage

The plastic caps are used to reduce friction and defect of the shelf cone collars during transit, they can be thrown away once you have confirmed the delivery.

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT

1. IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- Do not let children climb on or play with the garment rack.
- This product must be assembled by competent adults.
- Always use on a firm level ground.
- Do not sit or hang on the product.
- Check to ensure that all components and fixings of this product are secure, do not use if you have any doubts about its fitness for purpose.
- To avoid scratching the floor, assemble the shelving unit on a soft surface such as a carpet.
- Load the unit evenly and place the heaviest items on the lower shelves.
- The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- This appliance shall not be used by children. Keep the appliance out of reach of children.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;

- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.
- Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
- Please use the product according to the intended use, warn of potential injury from misuse.

2. CLEANING AND MAINTENANCE:

- To clean, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

 
3. Since we don't know how the wires and pipes are routed behind your washer or dryer, we recommend:

- Move the washing machine away first, then assemble the rack according to the instructions, and when it is in the right place, move the washing machine back.
- Or after observing the wires and pipes on the back, assemble the rack directly in the right place according to the steps in the manual.

DANGER Risk of suffocation!

Keep any packaging materials away from children - these materials are a potential source of danger, e.g. suffocation.





IMPORTANT

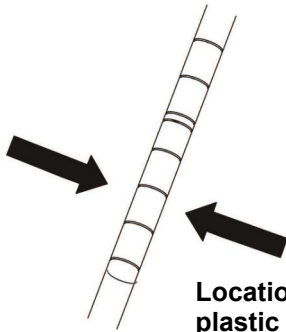


Location for holding the plastic clips in place.



    Plastic clips' arrow shall be pointed up.

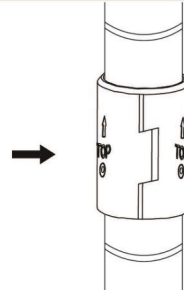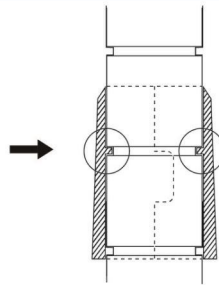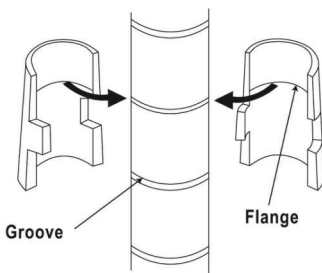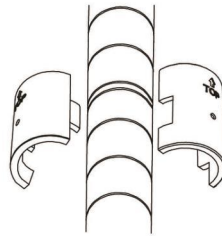


 Note: There are multiple gaps between two plastic clips assembled onto the poles as shown in the drawing. This is a structural design rather than a quality issue, which aims to bind the shelves firmly onto the poles.

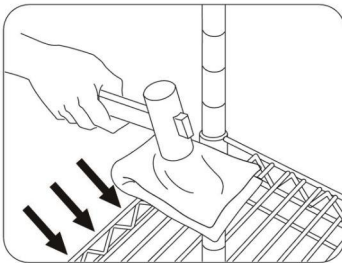



Note: It is kindly advised to lay a thick cloth or a board over the edge of the wire shelf to prevent damage when hitting it with a rubber mallet, make the shelf firmly fastened to the poles.

 PARTS LIST

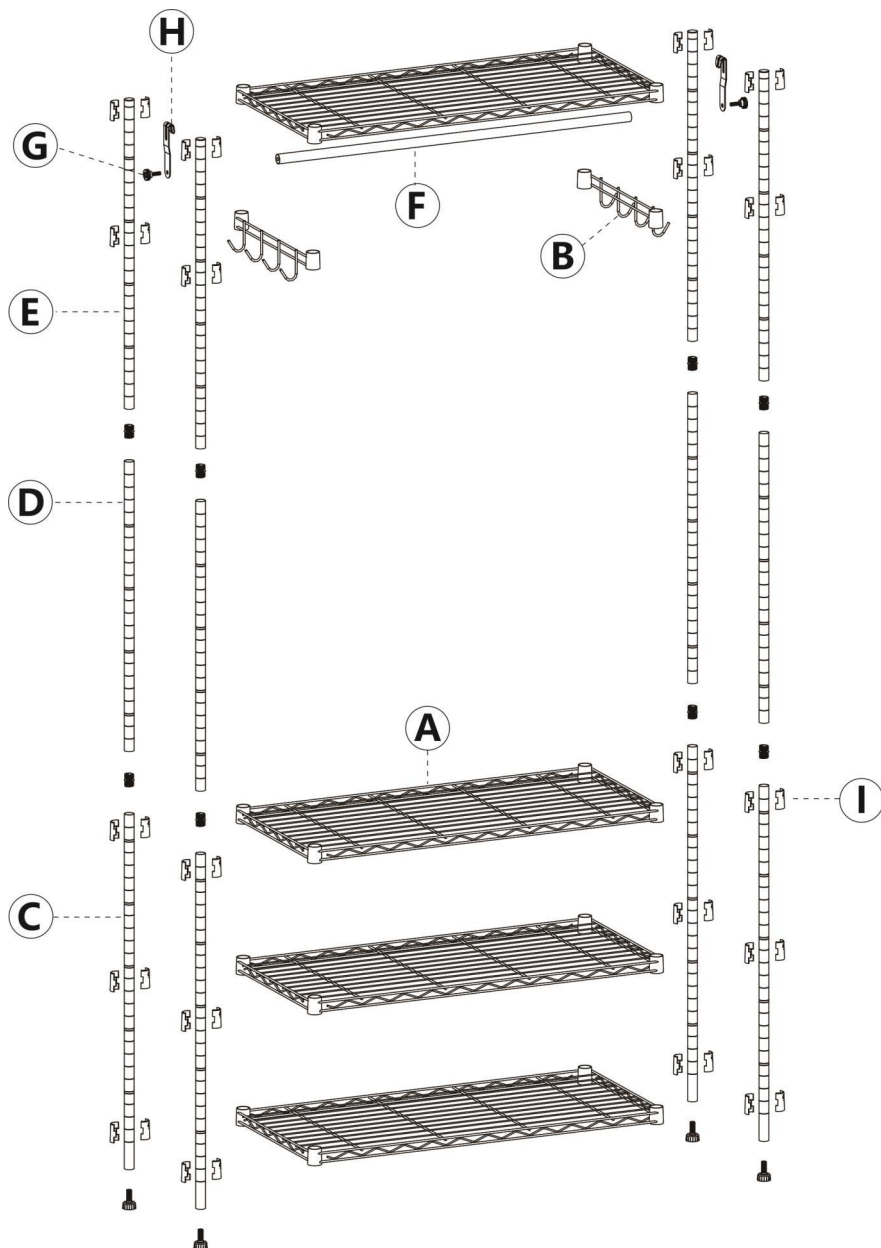

PARTS LIST

  Make sure all the parts are in the package.

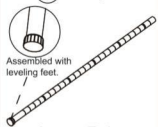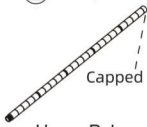
A × 4 pcs  Shelf	B × 2 pcs  Side hook	C × 4 pcs  Lower Pole	D × 4 pcs  Middle Pole	E × 4 pcs  Upper Pole	F × 1 pcs  Hanger Rod
G × 2 pcs  Screw	H × 2 pcs  Hook bracket	I × 40+2 pcs (2 pcs are for spare use)  Plastic Clips	J × 2 sets  Anti-tip Device	 Plastic Cover Trash Can	

ASSEMBLY STEPS

Step 1


Assemble the plastic clips (I) on the lower pole (C) for later assembly.

 ! Plastic clips' arrow shall be pointed up

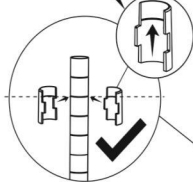


Note:

 The clamp mounting height should be at the same level.

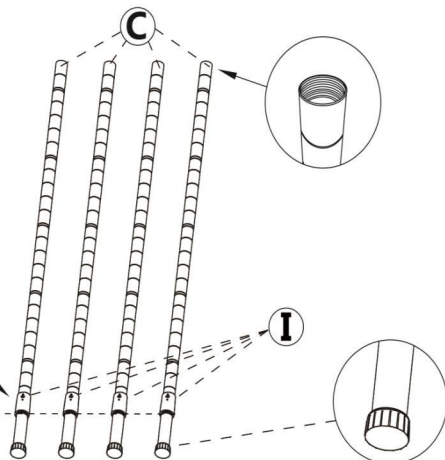


Assembled with leveling feet.

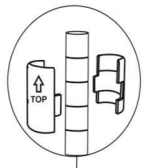 



! Plastic clips' arrow shall be pointed up





 
Step 2 Assemble the shelf (A).

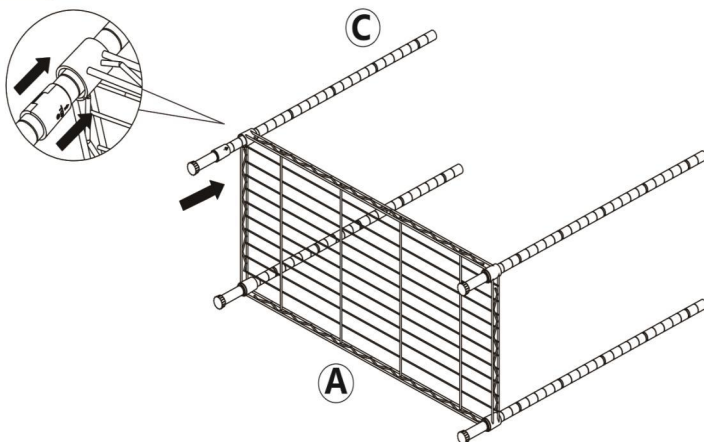


 
 
Step 3 It is kindly advised to lay a thick cloth or a board over the edge of the wire shelf to prevent damage when hitting it with a rubber mallet, make the shelf firmly fastened to the poles. (Rubber mallet is not included.)

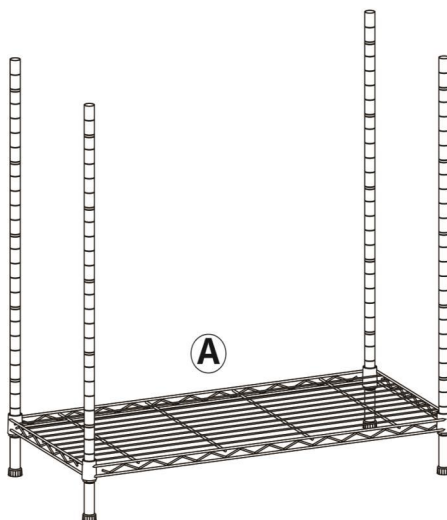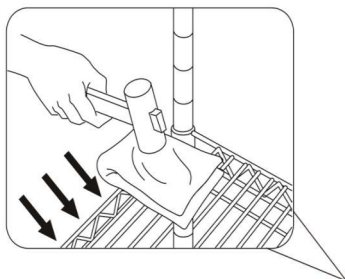

   Step 4 Assemble the shelf (A).

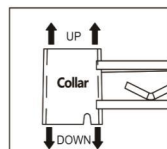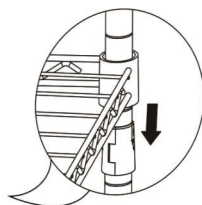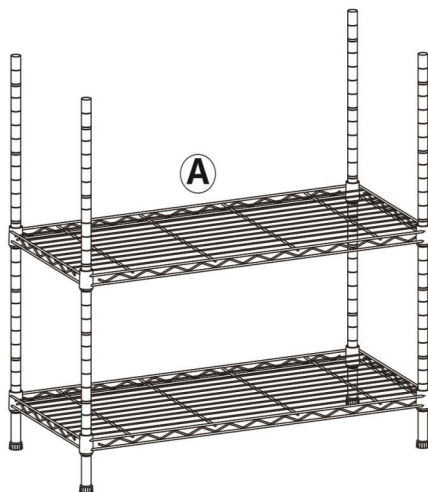


   Step 5 Assemble the shelf (A).

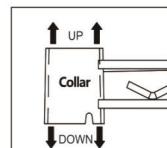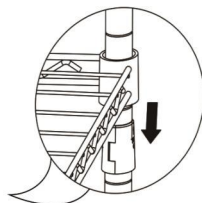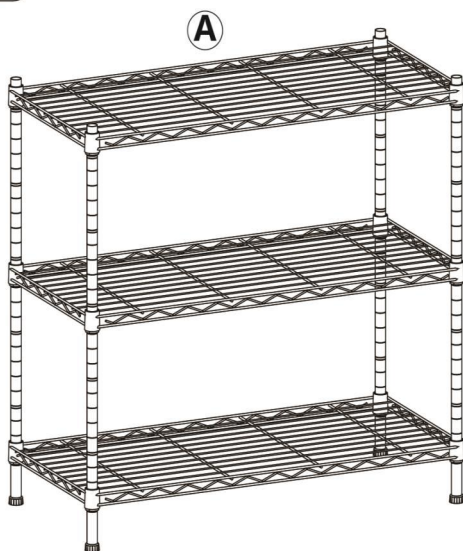

Step 6

 Assemble the middle pole (D) and upper pole (E).


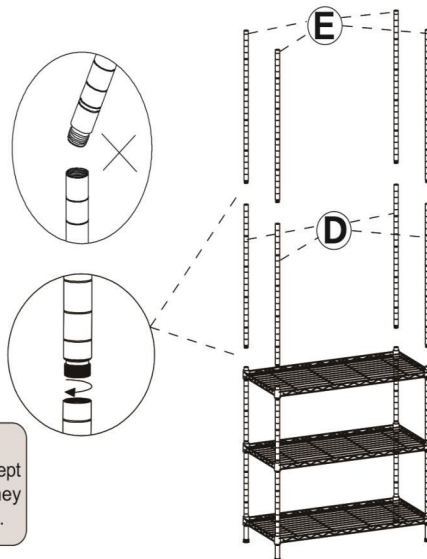


Note:

These two poles must be kept completely parallel until they are seamlessly connected.


Step 7

  Assemble the side hook (B).

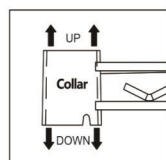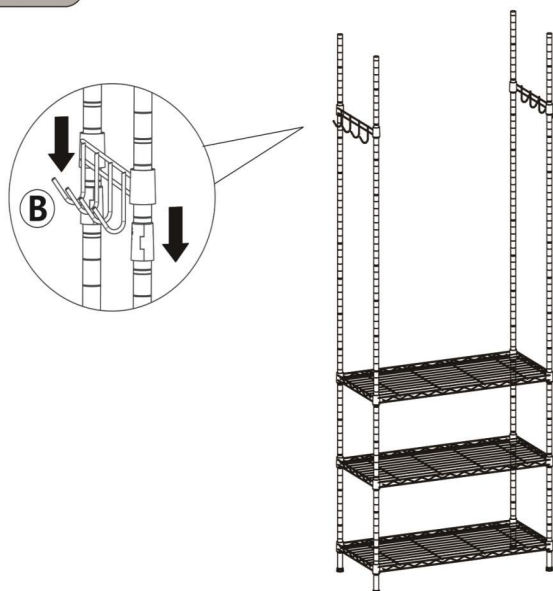


Step 8

 Assemble the shelf (A).

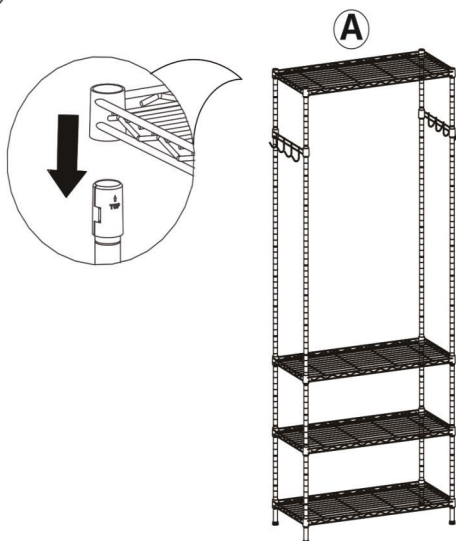


Step 9

 Assemble the hanger rod (F) using screws (G) and hook bracket (H).

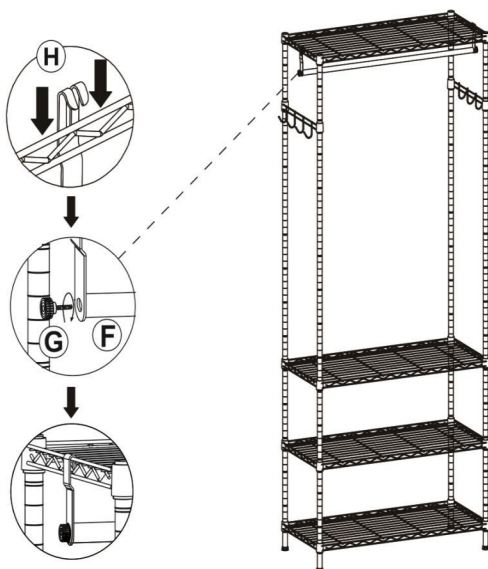


Step10

 For the sake of safety, using the anti-tip device (J) is recommended.

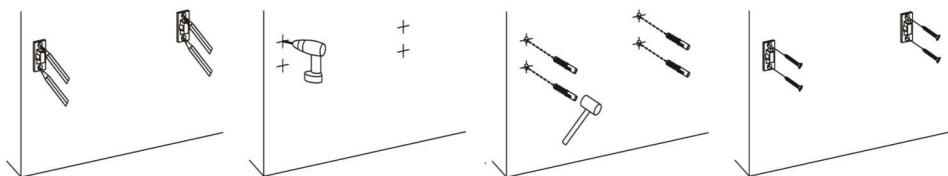

Tips:

 - It can make the product fixed to the wall.
- The height of the shelves can be adjusted according to your needs.
- In case of uneven ground, you can adjust the leveling feet.

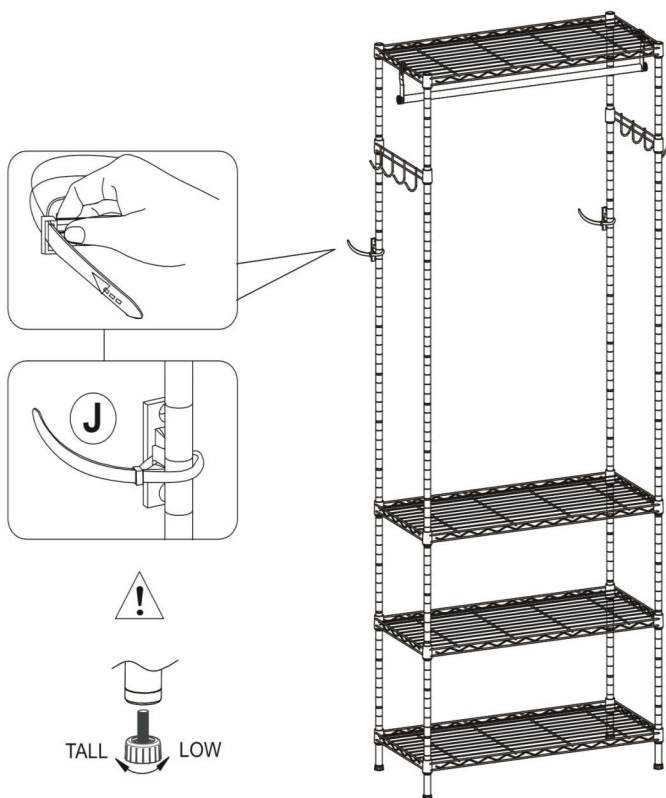

PRODUCT PARAMETER

Model	SHSS7635192-2XM4B
Colour	Black
Safe Loading Weight	Weight: Up to 500 pounds (227 kg); Lattice Net: 40 kg Per Piece (Uniform Distribution); Hanging Rods: 35 kg Per Bar (Uniform Distribution); Row Hooks: 16 kg Per Row (Uniform Distribution)
Product Size	762×356×1940mm

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

***This is a permanent label.
Do not remove!***

