



Upgrade · The Home Creator Way

Auger Drill Bit

MODEL:

HYZ 4*42CM/ HYZ 4*80CM/ HYZ 6*80CM

HYZ 8*30CM/ DZ 8*60CM/ DZ 8*80CM

DZ 10*80CM/ DZ 12*80CM/ DZ 15*80CM

DZ 20*80CM/ DZ 4*22+8*30CM/ HYZ 4*22CM

HYZ 8*40CM

VEVOR Support Center

1	HYZ 4*42CM		2	HYZ 4*80CM	
3	HYZ 6*80CM		4	HYZ 8*30CM	
5	DZ 8*60CM		6	DZ 8*80CM	
7	DZ 10*80CM		8	DZ 12*80CM	
9	DZ 15*80CM		10	DZ 20*80CM	
11	DZ 4*22+8*30CM		12	HYZ 4*22CM	
13	HYZ 8*40CM				

MODEL:HYZ 4*42CM/ HYZ 4*80CM/ HYZ 6*80CM/ HYZ 8*30CM
DZ 8*60CM/ DZ 8*80CM/ DZ 10*80CM/ DZ 12*80CM
DZ 15*80CM/ DZ 20*80CM/ DZ 4*22+8*30CM
HYZ 4*22CM/ HYZ 8*40CM



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

WARNING:

1. Warning-To reduce the risk of injury, user must read instructions manual carefully.
2. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
5. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
6. Please use the product according to the intended use, warn of potential injury from misuse.
7. Not suitable for environments with high humidity, explosive atmospheres, salt spray, acidic or alkaline conditions.

Safety Precautions-

- . Always wear protective eyewear and gloves when using the Electric Planting Auger Drill Bit.
- . Do not touch the auger when it is rotating or shortly after it has stopped. The auger may still be hot and cause burns.
- . Do not use the Electric Planting Auger Drill Bit on rocky or hard soil.
- . Keep the tool away from children and pets.

Maintenance

- . After use, clean the Electric Planting Auger Drill Bit with a soft cloth to remove any soil or debris.
- . Store the tool in a dry place to prevent rust or corrosion.
- . Check the tool periodically for any signs of wear or damage. If the tool appears damaged, do not use it and replace it with a new one.

Technical Specifications

No.	Model	N.W	Color	Accessories
1	HYZ 4*42CM	0.21kg	black	
2	HYZ 4*80CM	1.17kg	green	1*adapter
3	HYZ 6*80CM	1.58kg	green	1*adapter
4	HYZ 8*30CM	0.47kg	black	
5	DZ 8*60CM	1.4kg	black	
6	DZ 8*80CM	1.46kg	green	
7	DZ 10*80CM	2.55kg	green	1*adapter
8	DZ 12*80CM	3.12kg	green	1*adapter
9	DZ 15*80CM	3.72kg	green	1*adapter
10	DZ 20*80CM	4.93kg	green	1*adapter
11	DZ 4*22+8*30CM	0.585kg	black	
12	HYZ 4*22CM	0.125kg	black	
13	HYZ 8*40CM	0.77kg	black	

Instructions



1. Attach the Electric Planting Spiral Drill Bit to your electric drill. Make sure the shank is securely fastened to the drill chuck.
2. Turn on the electric drill and grip it with both hands.
3. Place the spiral drill bit in the desired planting position and apply gentle downward pressure.
4. Allow the auger to rotate and dig into the soil. Do not force the auger or apply excessive pressure.
5. Once the desired depth has been reached, slowly withdraw the auger while the drill is still rotating.
6. Repeat the process for the desired number of planting holes.

