

VEVOR

Upgrade · The Home Creator Way



8805B(32inch)



8805B(39inch)



8804B(48inch)



8804B(60inch)

VEVOR Support Center

Bubble Lamp

MODEL:8804B, 8805B

MODEL:8804B,8805B



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.
	This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

INSTRUCTIONS

Thank you very much for choosing this bubble lamp. Please read all of the instructions before using it. The information will help you achieve the best possible results.



1. Before first use, carefully remove the container from the packaging.

2. Check that it is not damaged. If the container is cracked, do not use it.

3. Place it on a flat, dry, stable, secure and non-slippery surface that can reliably withstand the weight of the lamp for a long time once it will be filled up.

The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Please use the product according to its intended use, otherwise it may damage the product, such as damage to the lamp beads and motor.

WARNING: Only use the supply unit provided with this appliance.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

WARNING – Risk of electric shock. Disconnect power before installation, maintenance, cleaning or replacement. Do not open or modify the product.

WARNING – Risk of fire. Do not cover the luminaire. Keep clear of curtains, fabrics and combustible materials. Ensure adequate ventilation.

WARNING – Risk of burns. The luminaire becomes hot during use. Do not touch while ON or immediately after OFF. Allow to cool before handling.

WARNING – Not a toy. Keep out of reach of children. Do not allow children to play with or install the product.

CAUTION – Risk of eye injury. Do not stare directly at the LED light source. Prolonged direct viewing may cause eye damage.

This product complies with EN 62471 (IEC 62471). Risk group: RG1.

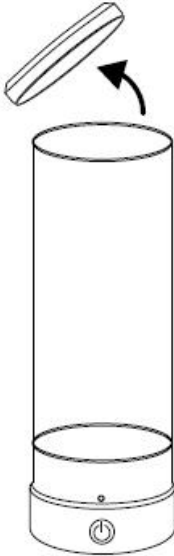
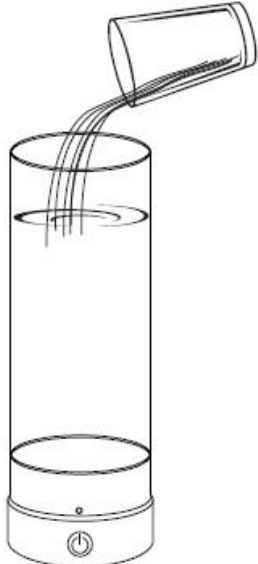
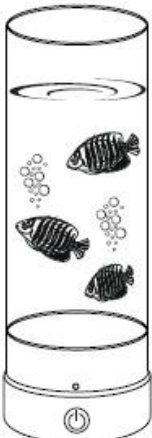
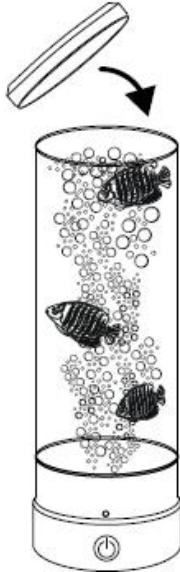
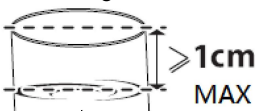
Installation must be performed by a qualified electrician in accordance with local electrical codes.

Do not install near heat sources (heaters, stoves). Ambient temperature: -10°C to +40°C.

Clean only with a dry soft cloth. Do not use water or chemical cleaners.

OPERATING STEPS


(1) FILLING UP THE CONTAINER

1	2	3	4
			
Open the top lid.	Pour clean water into the water tank. When pouring water, make sure that the water level is below the max line. See the figure below. 	Put the fish into the tank. (It is best to let the small fishes soak in the water for a day).	Close the top lid. Then plug one extremity of the USB cable to the USB port of the lamp. Plug the other extremity to a removal adapter, 5V 1A max (not included).

Change occasionally the water when it is cloudy or dirty.

(2) Wall bracket instructions

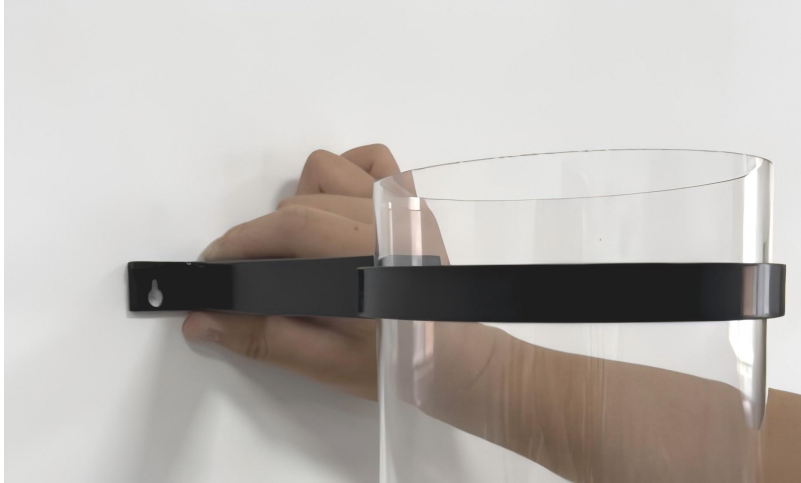1. Remove the retractable wall bracket and adjust it to the desired length.
2. Adjust to the height that matches the lamp holder (recommended position for MAX line).Punching holes in the wall
3. Finally put in the anchor expansion nail to fix it.



(3) LAMP OPERATION

- 1.Press the button to turn on the LEDS. The light color will change automatically.
- 2.Press the button repeatedly to get 7 lighting colors by turn. Stop pressing when you get your desired color.
- 3.After pressing for the eighth time, the lamp will turn off.

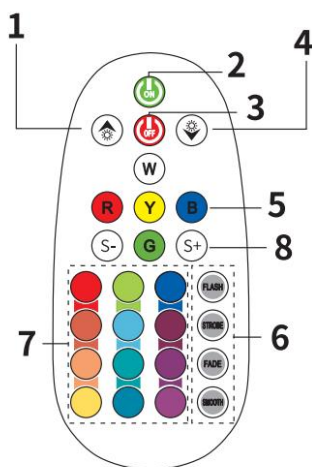
NOTE:This product is set with 8 hours auto shut-off function.

CLEANING

- **DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID.**
 - **DO NOT USE ABRASIVES OR CLEANERS.**
- Before cleaning or carrying out any maintenance, turn off if was in operation before, unplug the lamp and leave to cool down for a few minutes.

- Clean the external surface of the lamp with a soft, dry, lint-free cloth. If it is very dirty, clean with a cloth slightly moistened with water. Wipe it dry clean.
- Avoid the USB power port when cleaning. Water should not get inside.
- Change occasionally the water when it is cloudy or dirty.
- Keep the lamp away from dust, moisture and extreme temperatures.

USE OF THE REMOTE CONTROL



1. Increase brightness
2. ON
3. OFF
4. Reduce brightness
5. Five main colors (Red, green, blue, yellow and white)
6. Color switching frequency control (Flash, strobe, fade, smooth)
7. RGB colors
8. The default maximum gear of the air pump when turned on is S+ for upshift, totaling 1.2.3 gears, and S- for downshift, totaling 1.2.3 gears

- **FLASH MODE:** Press flash button to activate it. There are seven colors, which are displayed in turn.
- **STROBE MODE:** Press STROBE button to display the 7 flashing and changing colors in turn. Note: The red, green and blue colors are the three primary colors of all luminous colors, and other luminous colors evolved from these three colors.
- **SMOOTH MODE** - The lamp changes color smoothly in sequence (7 color lights).
- **FADE MODE** - There is a transition of 7 colors that fade from the lightest to the darkest, creating a smooth gradient effect.

