

VEVOR

Upgrade · The Home Creator Way

ICE CRUSHER

MODEL:GY-A108/GY-A168

VEVOR Support Center

1	WF-A108E		2	WF-A168 (BLUE-US)	
3	WF-A168 (BLUE-AUS)		4	WF-A168 (SILVER-US)	
5	WF-A168 (SILVER-EU)		6	WF-A168 (SILVER-AUS)	
7	WF-A109 (BLUE)		8	WF-A109 (SILVER-2)	
9	WF-A109 (SILVER-4)				

MODEL:GY-A108/GY-A168



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

IMPORTANT SAFETYINSTRUCTIONS

When using electrical appliances,basic safety precautions should be followed to reduce the risk of fire,electric shock and injury to persons or property. Read all instructions before operating the machine for the first time.

WARNING:

1. Do not use appliance for other than intended use.
- 2.The product complies with relevant standards and regulations.
Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
- 3.This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
- 5.This product shall not be used by children. Keep the appliance and its cord out of reach of children.

6. This product is intended to be used in household and similar
7. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
8. Please use the product according to the intended use, warn of potential injury from misuse.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Install the machine correctly before using

Keep the ice crusher and power cable away from heat sources and hot surfaces.

To avoid electrical shock, do not place the cord, plug or ice crusher in water or other liquids.

We do not recommend the use of an extension cord, as it may overheat and become a risk of fire.

Do not operate appliance with wet hands or operate in a wet working environment.

Always protect the power cable from undue flexing and wearing -do not allow the cable to hang off edge of the counter or table.

If the supply cord is damaged, do not use the product. Contact customer service for repair or replacement.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Do not move the ice crusher while it is switched on.

Do not leave your Professional Blender unattended when power is connected.

Unplug the ice crusher before cleaning or making any repairs or servicing.

NOTE: strongly recommend to repair the machine by professional

technician.

It's forbidden to pull the cable to unplug the plug, pull the plug is a must.

The ice crusher is commercial machine which is intended to be used in staff kitchen areas in shops, offices and other working environments.

Warning: Don't use your ice crusher outdoors. Avoid direct sunlight and make sure that there is at least 15cm of space between the back and sides of your unit and the wall.

Do not tip the machine over.

The blade must be replaced by original blade.

The manufacturing will not be responsible for injury that occurs as result of failure to follow these precautions.

SPECLATION OF GY-A108/GY-A168

SMASH ICE DEVICE

1.Operation

①Check voltage of current whether or not it corresponds to the shown and required voltage. Power supply should be with reliable ground wire.

②Pick-up press-ice handle to up stop point, plug into electricity. Turn on main switch, lie down the ice disc under Chassis, put down ice granular into the ice smash drum. (NOTE: quantity of ice in the drum can not exceed level of ice smash drum) Then put down the handle of the ice smash drum to make protect switch to turn on automatically, get the result of the smash ice, after finish work. Please raise the handle of ice smash to the up-stop, then to repeat above-mentioned procedure.

2.Clean & maintenance

After operation of smash ice device, should turn off switch. Put out electricity plug. Wipe the surface of device to dry and lie it at the dry place.

3.Caution

When operation, outlet of ice granular can not be blocked, other words, knife disc will be blocked, destroy motor, if above appearance appear, please lift up handle immediately, turn off source of electricity, examine the Reason.

NOTE: To improve our product continuously, The factory holds the right of change above technical parameter without notice.

Manufacturer: Yongkang Tiange Electric Co., Ltd.

Address: NO.101, XITA FOUR ROAD, XICHENGSTREET, YONGKANG
JINHUA, ZHEJIANG, CHINA

E-mail: support@vevor.com

