

VEVOR

Upgrade · The Home Creator Way



XXJD1500ZF

VEVOR Support Center

Engine Stand

Model: XXJD1500ZF

MODEL: XXJD1500ZF



<Picture Only For Reference >

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS



WARNING: Read and understand this entire manual before operating or servicing this product. Failure to follow these warnings and instructions can cause personal injury or damage to valuable property.

- Avoid children using the product. And this product is not a toy. Do not allow children to play.
- Inspect the equipment carefully before each use. Ensure the equipment is not damaged, excessively worn, or missing parts.
- Inspect the work area before each use. Make sure it is free and clear of any potential hazards.
- Make certain all equipment operators are properly trained; understand how to safely and correctly operate the unit.
- Store these instructions.
- Keep all decals on the unit clean and visible.

ASSEMBLY PRECAUTIONS

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly and use.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
6. Product capabilities apply to properly and completely assembled product only.
7. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and

separate all parts in a clean work area. Please keep small spare parts out of children's reach.

8. Warning-To reduce the risk of injury, user must read instructions manual carefully.

9.The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

10.Children shall not play with the appliance.

11.Please properly keep product. Check whether the product is abnormal before use.If it is abnormal, please stop using it.

12.Please use the product according to the intended use, warn of potential injury from misuse.

SPECIFICATION

Model	XXJD1500ZF
Material	Steel
Capacity	750lbs
Color	Yellow
Suitable Engine	General

ASSEMBLY INSTRUCTIONS


1. Measure length of oil pan. This determines where the cross-braces(3) are attached to the frame (2).

2. With set screw holes facing inwards, slide 2 support uprights (4)onto each cross-brace (3).

3. Attach casters (1)through frame (2) and cross-braces (3), with nut (5), split washer (6), and flat washer (7) at desired length based on measurement in step 1. The length of the cross-braces (3)should be a minimum of 2” and a maximum of 4” shorter than the overall length of the oil pan. Tighten nut (5).
4. With the engine still being supported by hoist, lower the engine close enough to the stand to properly determine width of support uprights (4). Install set screws (8) into support uprights (4) and tighten.
5. Slowly lower engine onto stand. Using the straps provided, secure
6. The engine to the stand before removing hoist.

ASSEMBLY DIAGRAM

No.	Name	Specification	QTY
1	Universal wheels	/	4
2	Frame	/	1
3	Cross-Braces	/	2
4	Support Uprights	/	4
5	Nut	M12	4
6	Split washer	Ø12	4
7	Flat washer	Ø12	8
8	Set Screw		4

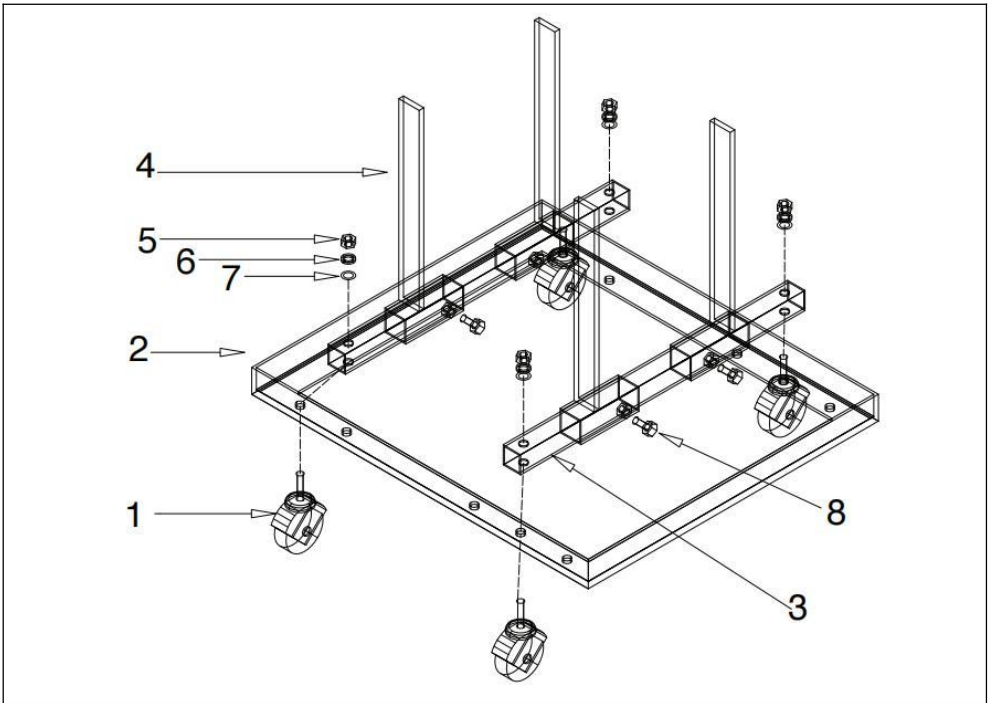

IMPORTANT SAFETY INFORMATION

Read these safety warnings before operation.

WARNING!

Failure to heed these warnings may result in loss of load, damage to engine stand, and/or engine stand failure, resulting in personal injury or property damage.

WARNING!

Do not overload engine stand beyond rated capacity.

Overloading can cause damage to or failure of the engine stand.

Always use stand on hard, level surface capable of sustaining the load. Use of stand on other than hard level surfaces can result in stand instability and possible loss of load.

1. Visual inspection shall be made before each use of the stands, checking for

cracks, cracked welds and missing and/or damaged parts. Any stand that appears to be damaged in any way shall be removed from service immediately.

2. BECAUSE OF THE POTENTIAL HAZARDS ASSOCIATED WITH THE MISUSE OF EQUIPMENT OF THIS TYPE, NO MODIFICATIONS SHALL BE MADE TO THE PRODUCT.

3. Replace worn or damaged parts with Performance Tool replacement parts. Be sure that only qualified personnel perform repairs.

