



Upgrade · The Home Creator Way

Truck Bed Tent


MODEL: 121171

VEVOR Support Center



121171

MODEL: 121171

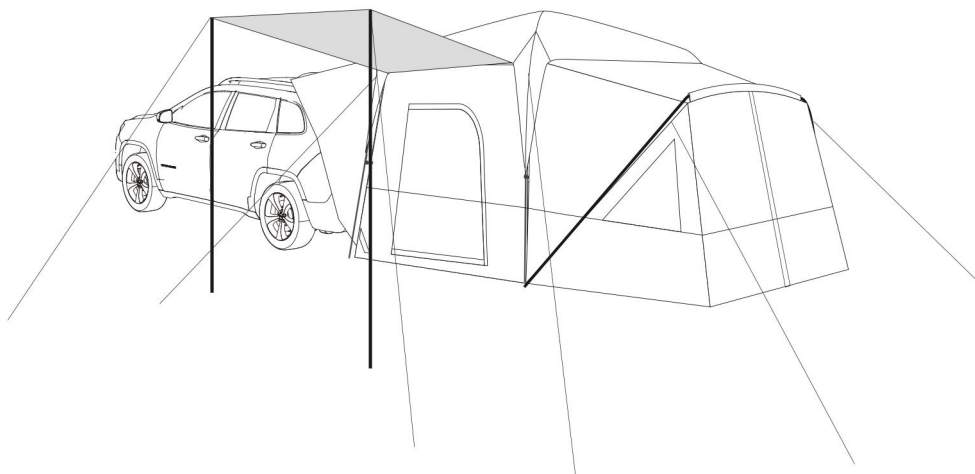

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS



WARNING: Read and understand this entire manual before operating or servicing this product. Failure to follow these warnings and instructions can cause personal injury or damage to valuable property.

Avoid children using the product. And this product is not a toy. Do not allow children to play.

Keep all flame and heat sources away from the tent fabric. The fabric will burn if left in contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

To avoid injury, children should not play around inside the product or rely on it.

This product is not recommended during thunderstorms.

Product can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

The product is not a toy, children should not play with the product.

Cleaning and user maintenance shall not be made by children without supervision.

Avoid injury, children should not play around inside the product or rely on it.

This product is not recommended during thunderstorms.

Please properly keep product. Check whether the product is abnormal before use.

If it is abnormal, please stop using it

Please use the product according to the intended use, warn of potential injury from misuse.

SETUP PRECAUTIONS

1. Do not use candles, matches, or open flames of any kind in or near the tent.
2. Do not cook inside the tent.
3. Build campfires downwind and several meters away from the tent. Be sure to fully extinguish fires before leaving a campsite or before retiring for the night.
4. Exercise extreme caution when using fuel-powered lanterns or heaters inside or around the tent. Use battery-operated lanterns whenever possible.
5. Do not refuel lamps, heaters, or stoves inside the tent.
6. Extinguish or turn off all lanterns before going to sleep.
7. Do not smoke inside the tent Do not store flammable liquids inside the tent.
8. NEVER run the vehicle engine when the tent is attached.
9. Do not install the tent when the temperature is below 0°C/32°F or when your vehicle is wet, as it may cause damage.
10. Allow adequate ventilation inside the tent at all times.
11. Do not attempt to drive the vehicle with the tent attached.

12. To prevent carbon monoxide from entering the vehicle and tent area, do not run the engine, do not cook inside the tent, and do not use a gas heater in the tent. Carbon monoxide is dangerous to your health.

13. Engine must be off and exhaust must be fully cooled before tent installation and use.

SAVE THESE INSTRUCTIONS

CAMPSITE SELECTION

1. Select a smooth, level campsite clear of rocks, branches, and other hard or sharp objects.
2. Avoid areas with overhead power lines and tree limbs.
3. Park the vehicle in the chosen campsite.
4. Turn the engine off and engage the parking brake.


HOW TO STORE

1. Clean and dry the tent.
2. Fold all of the components into the tent.
3. Roll the tent, using the pole bag as a guide.
4. Secure it with the tent tie straps and insert them into the carrying bag.
5. Store in a cool, dry place.
- 6.

SPECIFICATION

Tent Style	SUV Tail Tent
Wind Scale	III
Colour	Grey
Seasons	3 Season, Summer, Fall, Spring
Material	Body: Polyester fabric 210D/PU2000 Bottom: PE
Maximum circumference of SUV socket: 21.3ft (6.5m)	

PARTS LIST

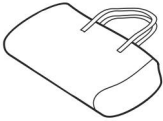No.	Name	Picture	QTY
1	Storage bag		1
2	Tent		1
3	Rainfly		1
4	Wind Rope		18
5	Guy ropes		8
6	Fiberglass pole A		2
7	Fiberglass pole B		1
8	Iron pole C		4
9	Iron pole D		2
10	binding strap		2

ASSEMBLY


TIPS BEFORE ASSEMBLY

THIS RECREATIONAL PRODUCT REQUIRES 2 to 4 ADULTS TO ASSEMBLE.


- Make sure ground surface is free from debris, i.e., rocks that could damage flooring.
- Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- Do not drop tent pole bag. Do not bounce tent bag on its end to remove tent .as these actions may damage the shock-cord and /or pole ends.

THE METHOD OF BUILDING THE TEN


STEP1. Assemble the four types of tent poles as shown in the diagram.

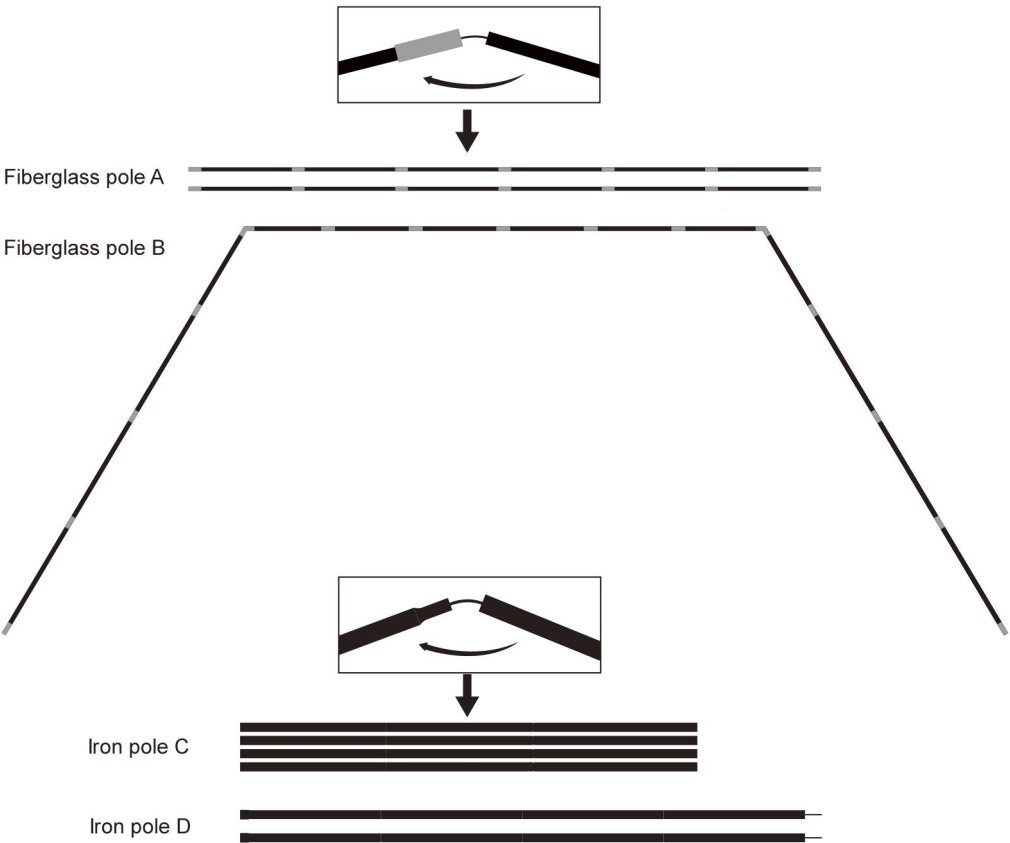


STEP2. Lay the tent flat on the ground. Thread the two Fiberglass A poles crosswise through the central tent sleeves, inserting their ends into the black plastic fittings at the top of the tent (insert the end with the threaded part). Tie the intersection point of the poles securely using the central strap of the tent. Thread the B pole through the separate sleeve at the rear. (The bent sections near the middle of the Fiberglass B pole should remain outside the sleeve.)

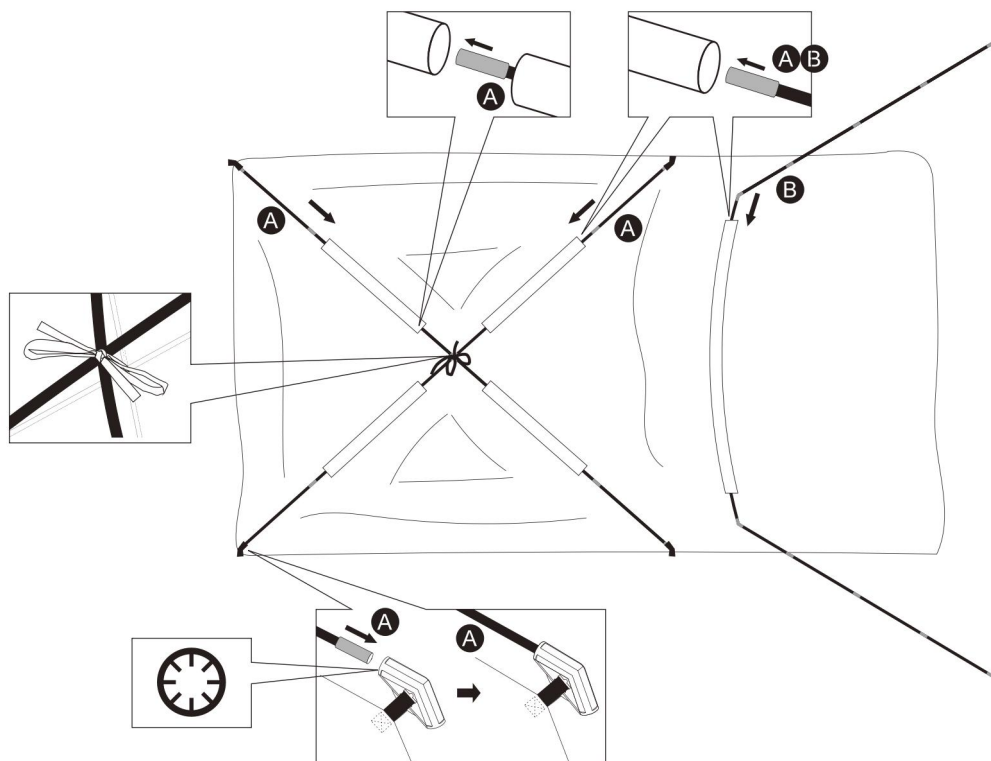


STEP3. Insert the four Iron C poles into the other end of the plastic rings connected to the A poles. Secure the bottom ends using the metal pins at the four corners, and the middle sections using the hooks on the tent. Insert the two ends of the Fiberglass B pole into the metal pins at the two front corners, also securing the middle section with the hooks on the tent.

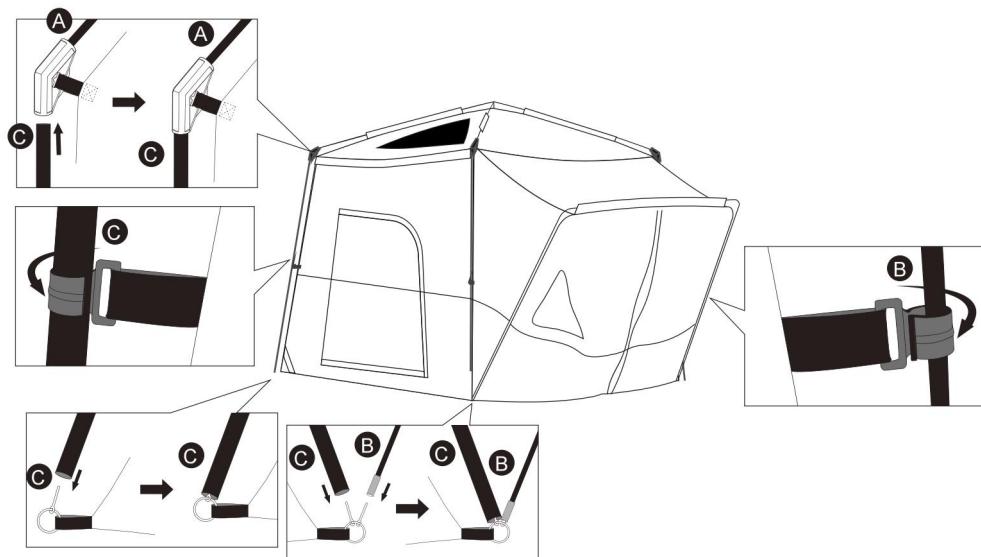


STEP4. Open the vehicle's trunk. Move the tent to the rear of the vehicle. Drape the vehicle connection fabric at the back of the tent over the rear of the vehicle. Attach the middle hook to the rear wheel of the vehicle, and the top hook to the luggage rack or door handle. Adjust the length and tightness of the webbing straps.

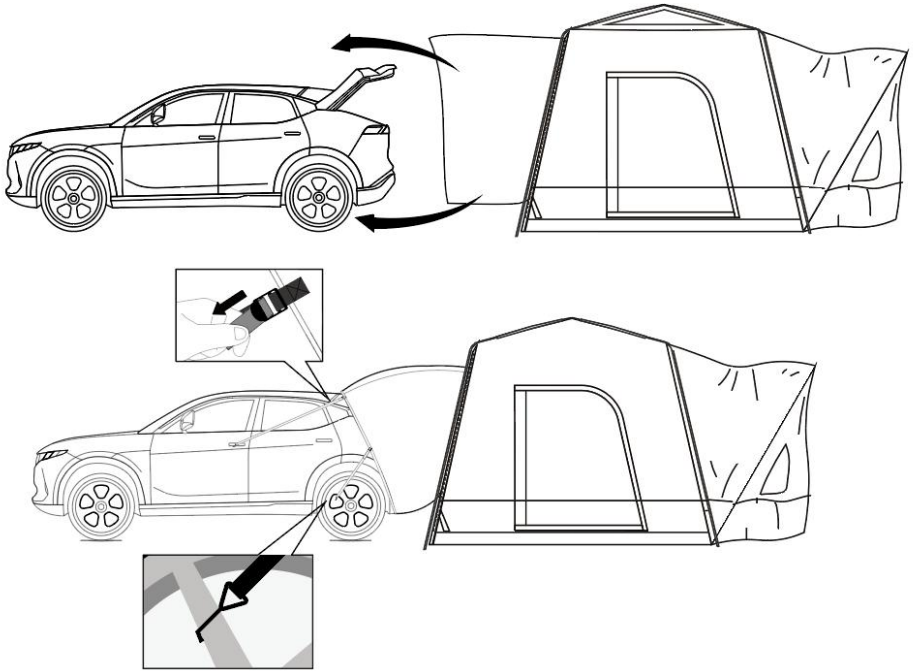


STEP5. After positioning the tent correctly, secure the four corners and the front vestibule edges using the tent stakes. Attach the provided guy ropes to both sides of the vestibule, pull them forward, and secure them with tent stakes.

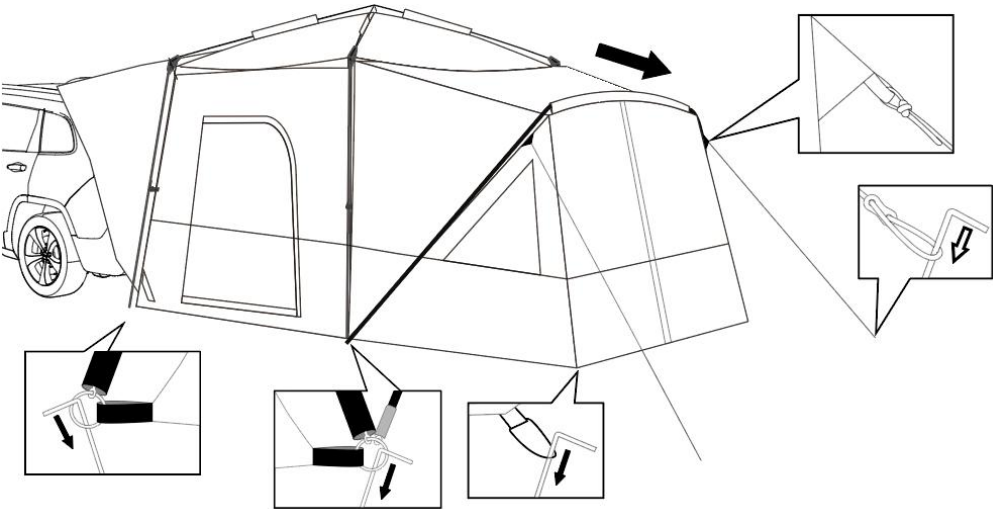


STEP6. Drape the rainfly over the tent (orient the square awning towards the side door). Inside, there are Velcro patches near the top of the four corners; attach these to the four iron poles. Hook the four corners of the rainfly onto the four metal rings at the bottom of the tent.

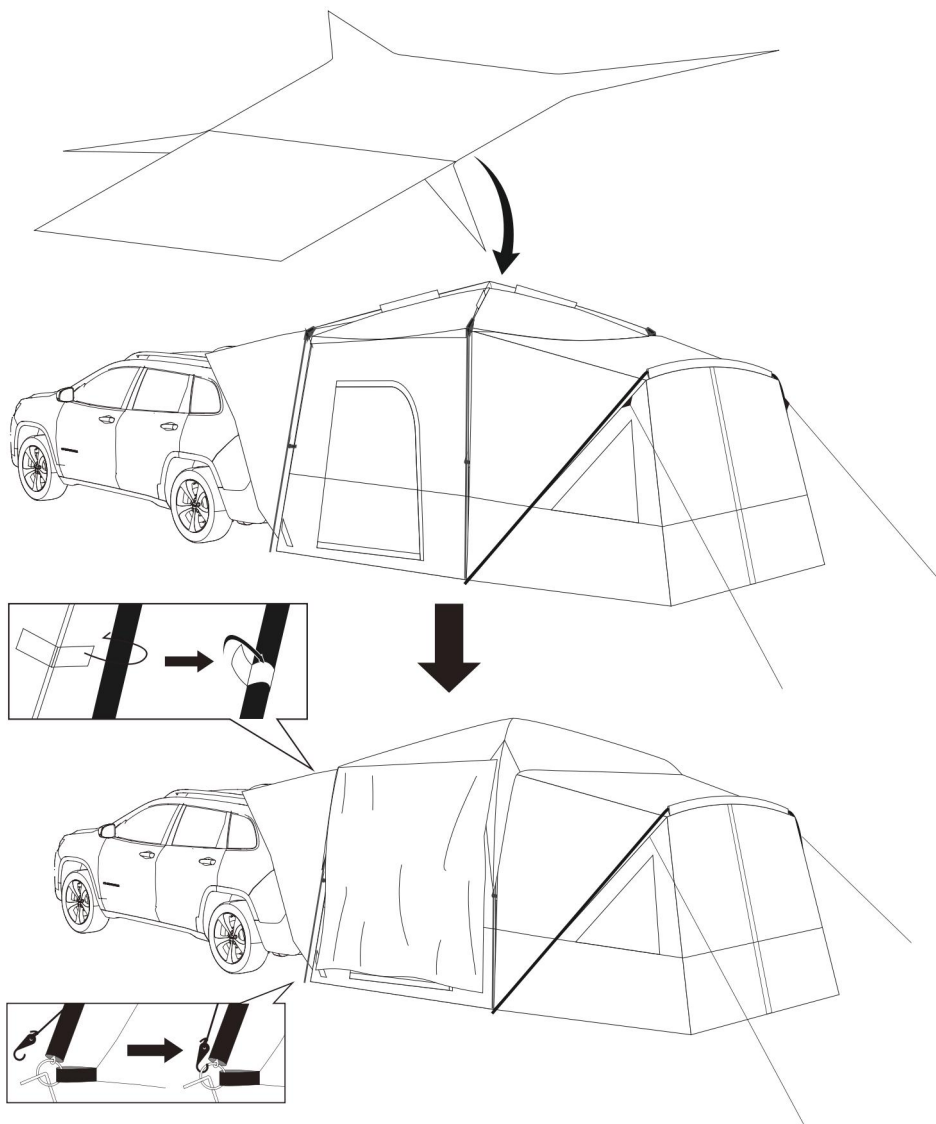

STEP7. Attach guy ropes to the four corners of the rainfly and secure them to the ground with tent stakes. Take the two pre-assembled Iron D poles. Use the end with the plunger to prop up the rainfly's awning. Attach guy ropes and secure them to the ground with tent stakes to complete the setup.

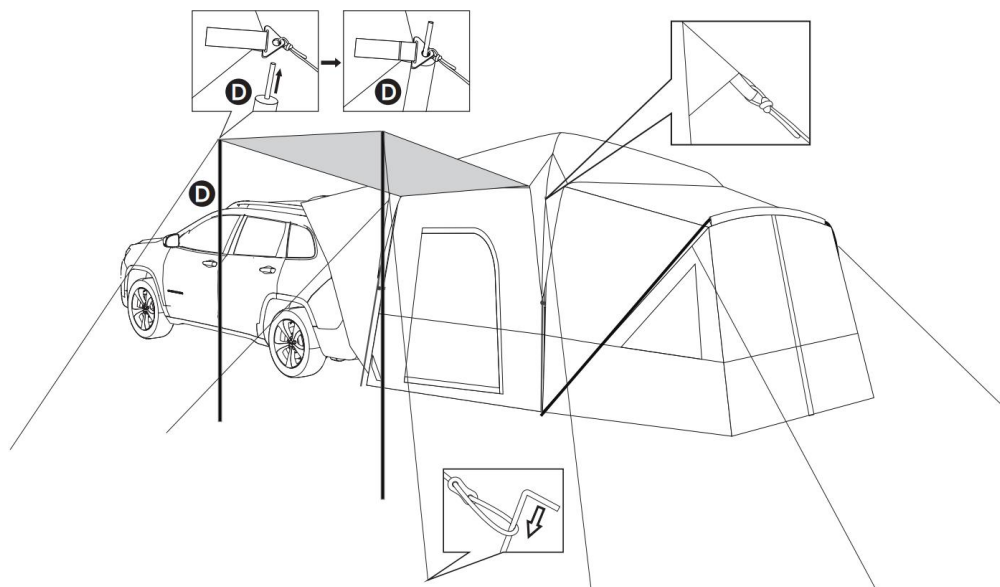


STEP8. The tent can also be set up on the ground if a vehicle is not available.

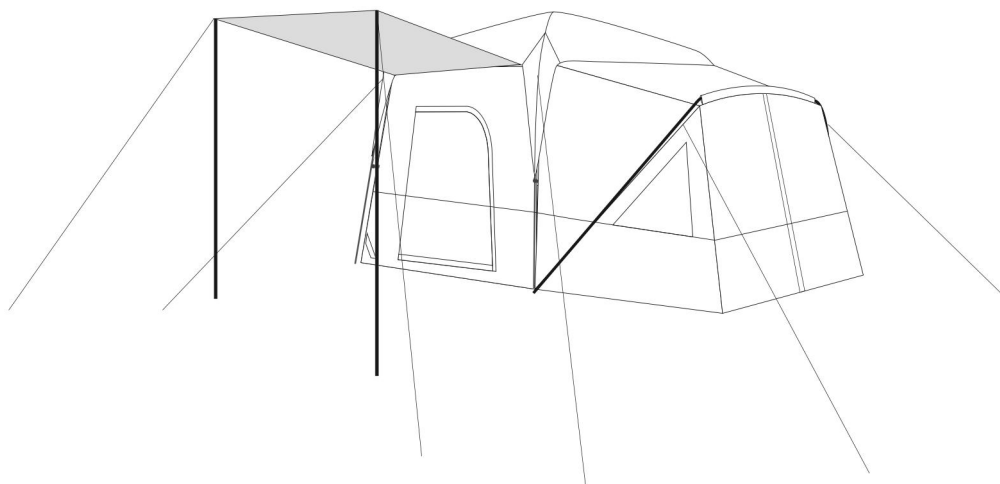


STORAGE METHOD

STEP1. Remove all tent stakes, guy ropes, and poles from the tent. Store them properly in the pole bag and accessory bag.

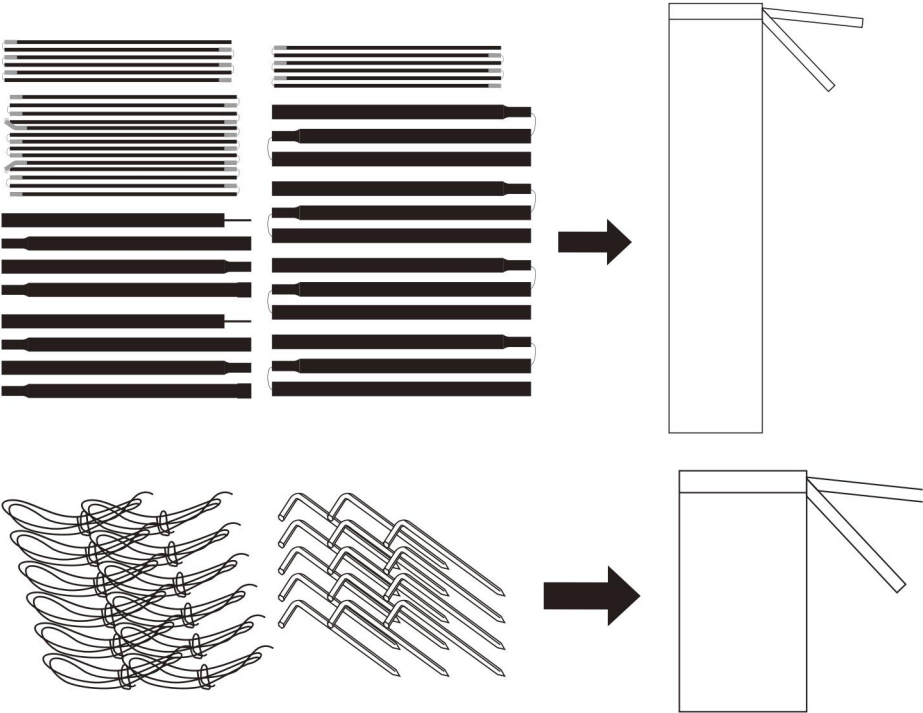

STEP2. Fold the tent and rainfly into long strips approximately the same width as the pole bag. Roll them up together with all the accessories into a cylinder. Place everything into the storage bag to complete the storage process.

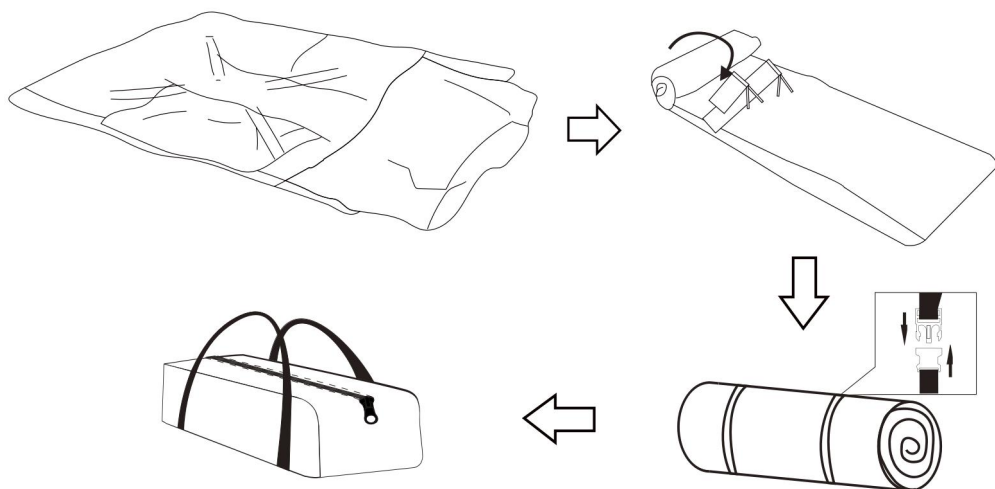

DISASSEMBLYINSTRUCTIONS

* Make sure that all door zippers are not fully closed, leaving room for air to escape during repacking.

Store all poles and stakes in their corresponding bags to prevent possible tearing or damage to fabric.

1. First remove the top cover of the connecting channel, and then remove the pocket cloth, and finally remove the rainfly. 2. Release the pole clips, then pull the top fiber pole out of the awning pole pockets and place them in the pole bag with the rain fly poles.

3. Fold the tent in half according to the length of the pole bag, roll it up and fasten it into the bag with a bandage.

TENT CARE TIPS

- 1) We highly recommend seam sealing your tent prior to camping as water may penetrate the needle holes in the fabric. This is common with tents and is not a defect.
- 2) Condensation may be formed at the interior surface of your tent. It is caused by water vapor from your breath, perspiration, or any wet items in the tent. Water in the tent shows no leakage through the tent fabric.
- 3) The water-resistant coating may wear down over time. It is suggested to spray a water-resistant coating onto the tent and rainfly every few years.
- 4) Avoid spraying insect repellent, hairspray, etc., inside or near your tent, as they may be harmful to the tent fabric and cause leakage.
- 5) Do not leave your tent set up in direct sunlight longer than necessary. If left in sunlight for prolonged periods of time, the fabric will fade and weaken.
- 6) If zippers stick, lubricate with silicon. Never force a zipper as this will bend and prevent the zipper from closing.
- 7) NEVER roll up or pack away a wet/damp tent. This will cause mildew. Make sure your tent is completely dry before storing. Store your tent in a dry place.
- 8) To clean, hand wash with a sponge using mild soap. Never use a washing machine or detergent.

Manufacturer: Domi Outdoor Products Co., Ltd

Address: Building 1, Tianmeng Industrial Park, Shangou Industrial Zone, Yudu, Ganzhou

Email: support@vevor.com

