

VEVOR

Upgrade · The Home Creator Way



ZHDRYZP-SW

VEVOR Support Center

Hunting Chair Blind

Model: ZHDRYZP-SW

MODEL: ZHDRYZP-SW



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFETY WARNINGS



Read and understand all instructions before use. Failure to follow these warnings may result in serious injury or death.

General Safety Warnings

1. This product is intended for adult use only. Do not use it for children or pets without adult supervision.
2. This shade is designed only for hunting, outdoor recreation, and sun protection purposes. Do not use it for any other intended or unintended applications.
3. Inspect the product before each use. Do not use it if the frame, fabric, connectors, or straps are damaged, torn, broken, or missing parts. Replace damaged components immediately.

Installation & Setup Safety

1. Set up the ground blind only on stable, level, and solid ground. Avoid slopes, wet, muddy, or uneven terrain to prevent tipping or collapse.
2. Secure the GROUND BLIND firmly to the hunting chair using all provided straps, buckles, or clamps. Ensure all connections are tight and secure before use.
3. Do not over-tighten or force the frame during assembly. This may cause fracture or failure.
4. Keep hands, fingers, and hair away from moving parts and frame joints during setup and folding to avoid pinching or crushing injuries.

Use Safety

1. Do not stand, climb, or sit on the GROUND BLIND frame or fabric. The ground blind is not designed to support human weight beyond its intended function as a sun/rain cover.
2. Avoid exposing the shade to extreme weather conditions: strong winds (above 20 km/h / 12 mph), heavy rain, hail, snow, or

thunderstorms. Disassemble and store the ground blind in severe weather to prevent damage or injury from collapse.

3. The ground blind provides UV protection but is not a substitute for sunscreen. Wear appropriate sun protection (hat, sunglasses, sunscreen) when using it outdoors.

4. This hunting blind uses fire resistant material. This material is not flame proof. Do not allow open flames or other sources of ignition to come in contact with the material of this hunting blind.

5. Keep the ground blind away from sharp objects, branches, or rocks to prevent tearing or puncturing the fabric.

6. Do not use a heater in the blind. Unvented fumes can cause sickness or death.

7. Do not shoot a firearm through the shoot through screens, The muzzle flash could ignite the screen material

8. Do not use expandable broadheads with shoot through screens. The blades may open prematurely. Use fixed blade broadheads only.

9. Do not allow children to play with this blind without adult supervision.

Maintenance & Storage

1. Clean the fabric with a mild detergent and cold water. Do not use bleach, harsh chemicals, or abrasive cleaners, which may damage the fabric coating.

2. Allow the ground blind to completely dry before folding and storing to prevent mold, mildew, or fabric degradation.

3. Store the ground blind in a cool, dry place away from direct sunlight, moisture, and pests.

4. Do not drag the ground blind on the ground during transport or storage.

5. Use the provided carry bag (if included) to protect the product.

Liability Disclaimer

1. The manufacturer shall not be liable for any injuries, damages, or losses resulting from improper use, negligence, failure to follow

instructions, or unauthorized modifications to the product.

2. This product is sold subject to the manufacturer's limited warranty. For warranty claims, contact the manufacturer at the provided contact information.

COMPLIANCE STATEMENT

This product is manufactured in compliance with applicable safety standards and regulations for the European Union, United Kingdom, United States and Canada. and is not a toy.

CONTENTS

Blind Carry Bag	Ground Stake Bag
Hunting Blind	(8)Ground Stakes
Instruction Sheet	(4)Tie Down Cords

SETUP UP INSTRUCTIONS

- STEP 1:** Remove the blind form the carrying case
- STEP 2:** Warning: Blind contains spring steel under tension. Use caution when unfolding blind. Release the strap and buckle on the front of the chair blind. Unfold the chair to the sitting position.
- STEP3:** Take the spring steel bands inside the blind and pull them forward. You may have to compress the chair together to allow for the blind to be folded forward.
- STEP 4:** Fold the spring steel bands forward. The All About Game Blind Chair is ready to be used.
During windy conditions the blind stakes can be used to further secure the blind in place.



STEP1



STEP2



STEP3



STEP4

TAKE DOWN INSTRUCTIONS

STEP1: Remove any blind ground stakes. follow the set-up steps 1 through 5 in reverse to tear down your chair blind. Make sure to use the strap and buckle to compress the spring steel bands before trying to fit the chair blind back into its carrying case.



Never store wet or damp blind in its carrying case. Make sure blind is completely dry before storing.

Be sure blind is free of debris before packing into carrying case

