VEVOR

Upgrade · The Home Creator Way

SAFE BOX

USER MANUAL

MODEL: SS-700SM


VEVOR Support Center

SS-700SM

VEVOR
Upgrade·The Home Creator Way

SHIPPING SCALE

MODEL: SS-700SM

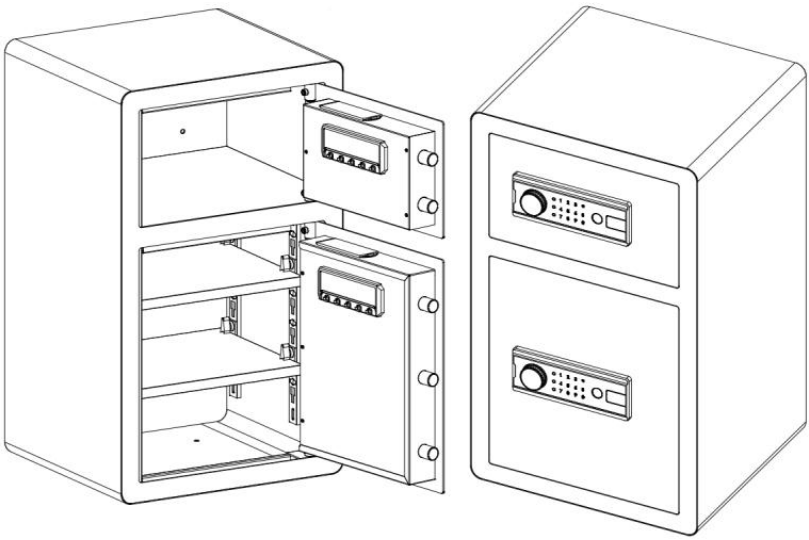

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

FCC Information:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

· Reorient or relocate the receiving antenna.

· Increase the distance between the product and receiver.

· Connect the product to an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for assistance.

SAFETY INSTRUCTIONS

1 Warning-To reduce the risk of injury, user must read instructions manual carefully.

2 The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

3 This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

4 Children shall not play with the product.

5 This product shall not be used by children. Keep the product and out of reach of children.

6 This product is intended to be used in household and similar applications such as:

– staff kitchen areas in shops, offices and other working environments;

– farm houses;

– by clients in hotels, motels and other residential type environments;

– bed and breakfast type environments.


7 Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.


8 Please use the product according to the intended use, warn of potential injury from misuse.

SAVE THIS MANUAL

PARTS LIST

Thank you very much for choosing this safe box. Please read all of the instructions before using it.The information will help you achieve the best possible results.

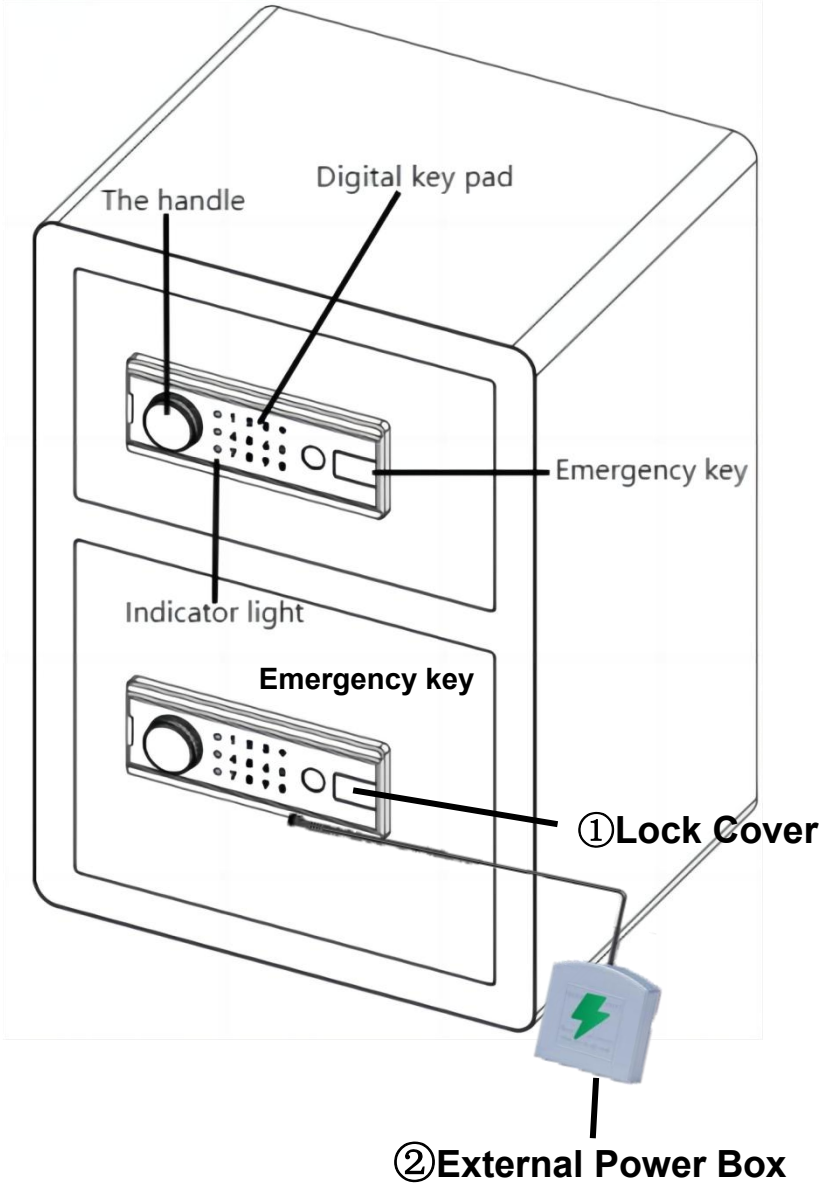

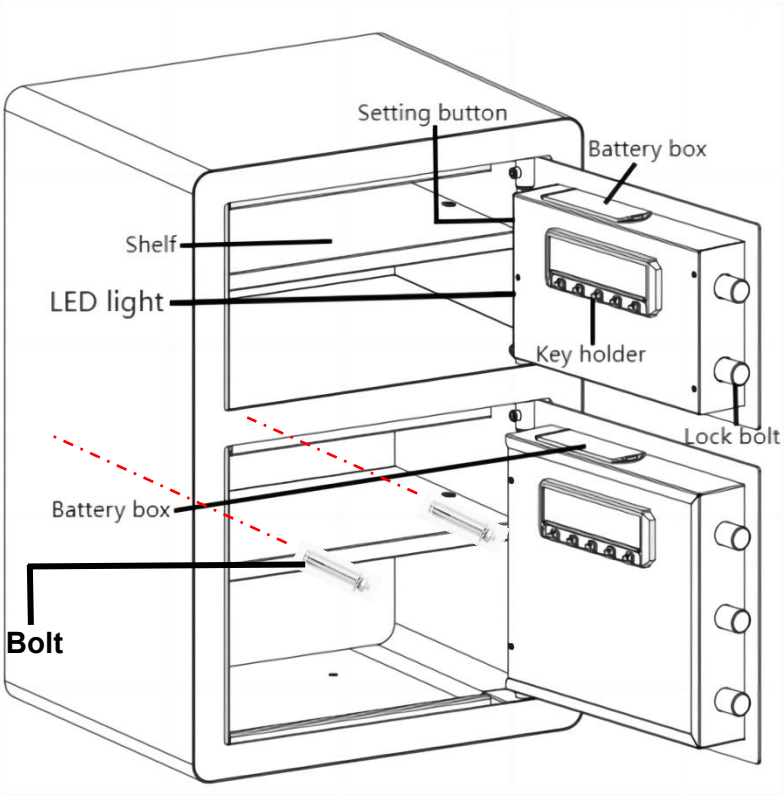

③ **Expansion Bolt**

①	**Lock Cover*1**	
②	**External Power Box*1**	
③	**Expansion Bolt*4**	
④	**Emergency Key*4**	
⑤	Fireproof Bag*1	
⑥	**English Manual*1**	

OPENING YOUR SAFE FOR THE FIRST TIME

Open the door for the first time, use the configured emergency key to open the door. The operation steps are as follows:

1. Slide right to open the emergency lock cover.	4.Install batteries into battery box.
2. Insert the emergency key into the keyhole and rotate it counterclockwise.	5.Make sure the battery matches '+' and '-' . (**not including 4 alkaline 1.5V batteries**)
3.Turn the handle clockwise to open the door.	6.Weak power, emergency method: Emergency key

DESCRIPTION:
Electronic lock factory default password is "123456"

PERSONAL PASSWORD SETTING

1. Press the green button in the box (code change switch), the buzzer drops, and the touch light is on.

2, Enter the password you need, the password length is 3-12 characters.

3, press the "#" key to confirm, the buzzer has a long sound, the light is off, indicating that the password is set and changed successfully.

Notice: After your password is set, please test the new password to make sure it is valid.

MANAGE PASSWORD SETTINGS

1. In the state of opening the door, press number key "0" twice, then press the internal setting button.

2, Enter the password you need, the password length is 3-12 characters.

3, Press the "#" key to confirm, the buzzer has a long sound, the light is off, indicating that the password is set and changed successfully.

Notice: Do not set personal password same with management code.

OPEN THE SAFE

1. Touch the wake up touch screen and enter the password you set.

2. Press the "#" key to confirm. The door opening indicator will light up and the buzzer will sound twice, indicating that the password is entered correctly.

UNDERVOLTAGE INDICATION

1, The system uses four 1.5V alkaline batteries, if the voltage is insufficient after opening the door will continuously remind "drip, drip, beep". "Drip, drip, beep" twice, reminding the user to replace the battery in time.

2, If the battery voltage is insufficient, can use the emergency power supply or mechanical emergency key operation.

3, The electronic lock has power down protection password never disappear function.

VIBRATION ALARM SETTING

1. Vibration alarm electronic lock alarm has the function of setting alarm and eliminating alarm.

2. Setting alert method: First touch the touch screen to wake up, press the "*" key computer board automatically enter the alert state. Alarm when safe vibrates.

3. Disalarm method: After the safe alarm, enter the password set, press the "#" key to open the door, you can eliminate the alarm.

NOTE: After entering the correct password to eliminate the alarm sound, you need to restart the alarm to enter the alert state.

ALARM OPERATION

This electronic lock has 3 (5) password errors, automatic alarm 30 seconds or 1 minute after the alarm is eliminated, the panel is locked screen, wait 4 minutes, enter the correct password can be opened.

SOUND ON AND OFF

Touch the touch screen to wake up. Enter "11#" and the buzzer "drip ~" makes a long sound, indicating that all sounds are successfully enabled or disabled.

SYSTEM INITIALIZATION

Press and hold the green button on the organization for 5 seconds, and the system will restore the initial Settings and clear all passwords.

HOW TO WALL OR FLOOR MOUNTING

* Drill the appropriate size holes for the anchors you are using
* Mount the safe by running screws from inside of the safe and securing to anchors
* Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete)

SAFETY AND COMPLIANCE

1. Reduce the risk of theft, the safe must be fixed on the wall or floor to ensure safety.
2. Please take good care of the emergency key and store it in a secret place away from the safe. Do not put the emergency key into the safe, whether the emergency key will not be used to open the safe when the battery runs out.
3. Do not place the product on an unsafe overhead, so as to avoid falling, damaging the product or injuring people.
4. Do not spill liquid on the control panel, or it may cause electric shock to the internal electronic components and prevent them from working properly.

WARMLY REMINDER

1. Because it is purely handmade, inside solder joint or rust stains are normal phenomenon.
2. Please keep emergency keys, secret cabinet keys and external power supply box safe.
3. The emergency key cannot open the safe of other brands or the same brand, which is unique.
(Please do not try, to avoid damage to the safe and the unmatched key cannot be taken out)
4.The protective film on the knob cover can be torn off.
5. Before closing the door, do not remove the emergency key or adjust its

direction, which can avoid the lock bolt from jamming, and knob operation will be more smooth.

6. The door won't shut: Make sure there are no obstructions. If the door bolts are extended, re-enter the user code and turn the knob clockwise to retract them.

TECHNICAL PARAMETERS

Model	SS-700SM
Working Voltage Range	4.2-6.8Vdc
Product Size	420*380*700mm
Working Power	**4 xAA (1.5V) Alkaline Batteries**

