VEVOR

Upgrade · The Home Creator Way

SAXOPHONE

MODEL:JAS－201 JTAS－401 JASS－301

VEVOR
Support Center

JAS－201 JTAS－401 JASS－301

VEVOR
Upgrade·The Home Creator Way

SAXOPHONE

MODEL:JAS—201 JTAS—401 JASS—301






This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

INSTRUCTIONS

Saxophone Flute Head Assembly





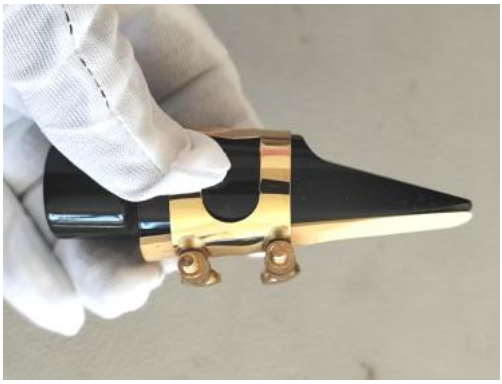

Saxophone Flute Head Assembly



SAVE THIS MANUAL


Model	JAS－201	JTAS－401	JASS－301
type	Alto saxophone	Tenor saxophone	High pitched saxophone
Product size	660*210*120mm	840*500*150mm	710*95*95mm
accessory	Tube body * 1 Portable bag * 1 Blow mouth * 1 Straps 1 set(2 pieces) Cleaning cloth * 1 Cleaning rod * 1 Gloves * 1 Oil * 1 Neck strap * 1 Neck tube * 1	Tube body * 1 Portable bag * 1 Blow mouth * 1 Straps 1 set(2 pieces) Cleaning cloth * 1 Cleaning rod * 1 Gloves * 1 Oil * 1 Neck strap * 1 Neck tube * 1	Tube body * 1 Portable bag * 1 Blow mouth * 1 Straps 1 set(2 pieces) Cleaning cloth * 1 Cleaning rod * 1 Gloves * 1 Oil * 1 Neck strap * 1 Straight Neck tube * 1 Curved Neck tube * 1
picture			

CARE INSTRUCTIONS

Neck pipe lubrication



Poor airtightness, calibrate when the spring loosens

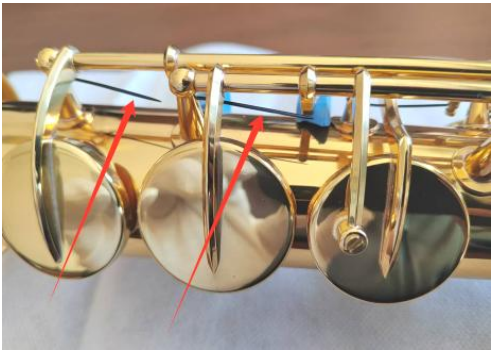



Warning-To reduce the risk of injury, user must read instructions manual carefully.

The product complies with relevant standards and regulations.
Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children shall not play with the appliance.

This product is suitable for indoor use.

Please use the product according to the intended use, warn of potential injury from misuse.

Read this manual before use to properly use and maintain the instrument.
Adult supervision is required when children use it to prevent injury or choking.
Do not put the instrument or parts into mouth, nose or ears to avoid suffocation.
Not suitable for children under 3 years due to small parts.
Do not drop, hit or bend the instrument to avoid damage or injury.
Keep away from high temperature, humidity, direct sunlight, fire and unstable high places.
Handle with care when moving to prevent falling and injury.
Do not disassemble or modify the instrument.
Stop using immediately if the instrument is cracked, damaged or loose.



