VEVOR

Upgrade · The Home Creator Way

POPCORN MACHINE

MODEL: NP08F


VEVOR Support Center

NP08F(US) **NP08F(EU)**

VEVOR
Upgrade·The Home Creator Way

POPCORN MACHINE

MODEL: NP08F

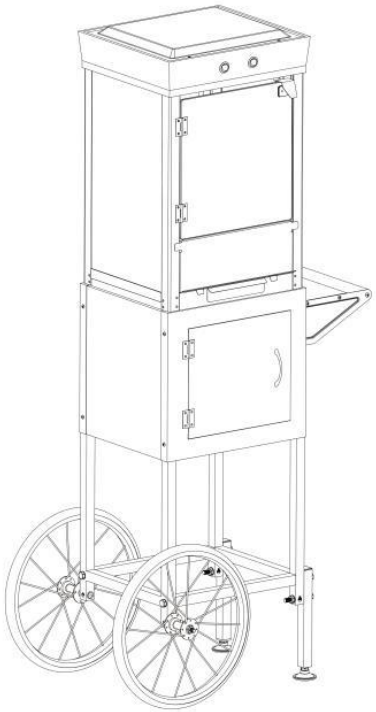

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor use only.
	Pay attention to high temperatures to prevent burns.
	**CORRECT DISPOSAL** This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	Compliance is a North America security certification.
	Compliance is a EC & UK security certification.

SAFETY WARNINGS AND PRECAUTIONS

Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please read the precautions and safety rules on this page to ensure your safe use. This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that

may occur. Caution and common sense are not built into this product, since we believe that the uses will comply with these codes.

When using electrical appliances, basic safety precautions should always be followed including the following，FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN ELECTRIC SHOCK, FIRE, SEVERE BURNS, OR PERSONAL INJURY. This appliance is intended for commercial/residential food heating and cooking only; improper use voids all warranties and liabilities**.**

⚠GENERAL HAZARD WARNINGS

◎ **HOT SURFACE / BURN HAZARD –** Cooking plate, housing, edges, and knobs may reach extreme temperatures during operation and cooling. Do not touch hot surfaces with bare hands. Use heat-resistant gloves, oven mitts, or designated handles only. Keep clothing, hair, utensils, and flammable materials away from hot surfaces.

◎ **ELECTRIC SHOCK HAZARD –** Never immerse the appliance, power cord, plug, control panel, or electrical components in water or any liquid. Do not operate with wet hands. Do not pull, twist, or place the power cord near hot edges, sharp corners, or heated surfaces.

◎ **FIRE HAZARD –** Do not leave the appliance unattended while in use. Do not use on or near flammable surfaces (curtains, paper, plastic, wood, cardboard). Regularly remove grease buildup to prevent fire risks. Do not use flammable aerosols or cleaners near the operating appliance.


◎ **CHILD & VULNERABLE PERSON SAFETY –** This appliance is not intended for use by young or infirm persons unless supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the product. Pets should stay away from the product.

⚠WARNING:


1. Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
2. Do not let children and minors and pet get close to or touch the machine.
3. Do not touch the hot surface directly with your hands. Always use the handle or knob for operation.
4. To prevent electrical shock, do not immerse the cord or plug into water or other liquids.
5. Do not immerse the appliance in water or any other liquid.
6. Unplug the machine from the outlet when not in use and before cleaning. Cool

the appliance before installing or removing parts and before cleaning.
7. Cool down the HOT parts before operation and cleaning.
8. Do not operate the device with damaged cord or plug, malfunction or with any mechanical damage. Send it to your nearest authorized service centre for examination and repair (ONLY technicians should open up the unit).
9. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
10. If the machine is not to be used for a long period of time, unplug it, clean and cover it and store it in a dry and safe place.
11. Do not leave the power cord hanging over the edge of table or counter or let it come into contact with any hot surfaces.
12. Do not place the unit on or near hot air, electric burners or heaters.
13. Always switch off the power to the socket before plugging in or unplugging. Hold the plug instead of pulling on the cord.
14. Do not apply this unit to any other purposes than the indicated usage.
15. **KEEP IT OUT OF CHILDREN'S REACH.** Never leave it unattended while in use.
16. **DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.**
17. Always check that this machine is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
18. Ensure that the power outlet, plug and cord being used are in good working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even if your power cord is functioning properly, keep it away from water and avoid letting it run over carpets or heating devices.
19. Avoid using it in the presence of flammable liquids, gases, dust or other explosive situations.
20. Do not move the machine before cooling and during heating
21. Do not operate the machine in an appliance garage or under a wall cabinet. Always unplug the unit from the electrical outlet when storing in an appliance garage. Otherwise, it would cause a risk of fire, especially if the machine touches

the garage wall or the door touches it as it closes.
22. Type Y attachment: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
23. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
24. **Inspect before every use.**

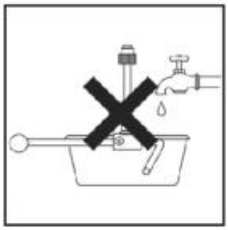

25. DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.
26. Never leave it unattended while in use. Never leave the child unattended.
27. Pet urine and feces can damage the product, please keep away.

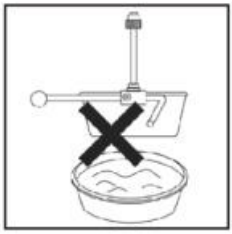

28.Do not pop the kernel with a dry pot (without oil).
29.Do not immerse the popping pot set into water.
30.Since the pot surface is hot during popping or just after use,do not touch it directly with your hands.
31. To avoid overheating,always add oil before putting the kernels in.
32. Extreme care must be taken when unloading popcorn.
33.This popper will not shut off automatically To avoid overheating,add corn and oil before operating.
34. Extreme caution must be used when unloading popcorn.Always turn the unit over a counter-top so that residual hot oil or water running out will not cause burns.

⚠**WARNING: This appliance is not intended for use by young or infirm persons unless supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the product. Pets should stay away from the product.**

COMPLIANCE STATEMENT

This product is manufactured in compliance with applicable safety standards and regulations for the European Union, United Kingdom, United States and Canada.This product is for indoor adult use only and is not a toy.

SAVE THESE INSTRUCTIONS


PRODUCT PARAMETERS

MODEL	Region	Voltage	Power	Plug Type
NP08F	North America	AC120 V 60Hz	800W	American PLUG
	Europe	AC220-240V 50Hz	800W	European PLUG
	Australia	AC220-240V 50Hz	800W	Australia PLUG

Attention:


1. The voltage used for this device must be the same as the power supply voltage.
2. Users need to install it near the power switch and fuse.
3. **If the machine is not powered, remove the plug from the electrical outlet and check whether the fuse is blown.**
4. It is recommended that products use separate lines and sockets to avoid circuit breaker or time delay fuse overload.

PRODUCT COMPONENTS

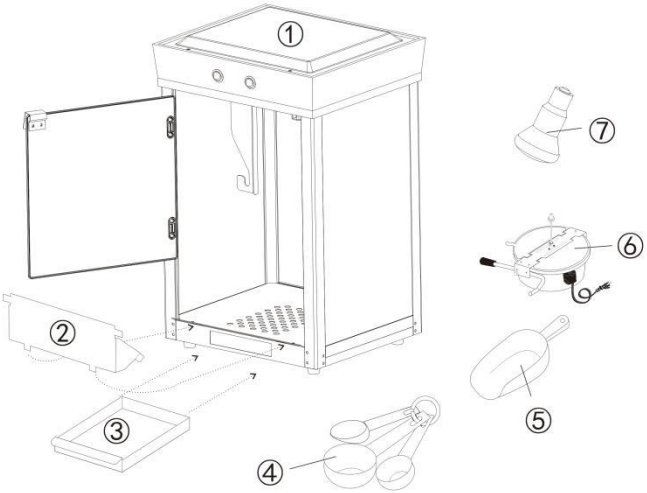

①Main unit ② Block plate ③ Crumb Tray ④ Kernel scoop + Oil spoon






⑤ Popcorn scoop ⑥ Kettle ⑦ bulb light

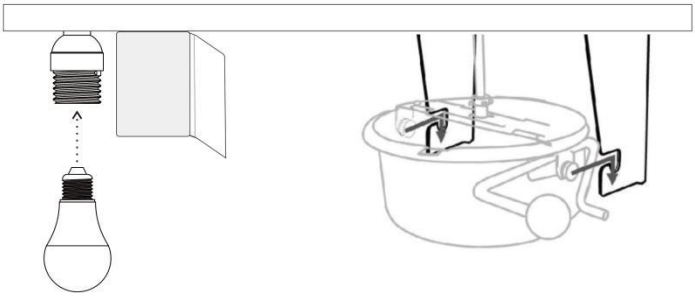


Attention:· Install the light bulb to the socket.

·Assemble the kettle on the supporters which are built into the main unit, and then connect the socket.

HARDWARE

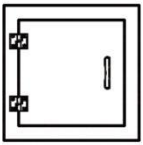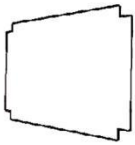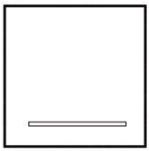
			
Rubber Feet (A) x 2 pcs	Support Legs (B) x 2 pcs	Support Stand right side（**C**）x 1pc	Support Stand left side（**D**）x 1pc
			
Wheels(**E**) x 2 pcs	Horizontal Supports Base(**F**) x 2 pcs	Cabinet Front with Door(**G**) x 1 pc	Cabinet Base(**H**) x 1 pc
			
Cabinet Back(**I**) x 1 pc	Working Platform(**J**) x 1 pc	Working Platform Brackets (**K**) x 2 pcs	Push Handle(**L**) x 1 pc

			
Wheel Bolt M8x95 (**O**) x 2 pcs	Self-locking Nut M8(**P**) x 2 pcs	Nut M8(**Q**) x 8 pcs	Washers (**R**)x 14 pcs
			
Bolt M8x60(**S**) x 4 pcs	Bolt M8x35(**T**) x 2 pcs	Bolt M8x16(**U**) x 4 pcs	Screw M4x8(**V**) x 8 pcs


Screwdriver(1 pcs)and Wrench(2 pcs)are also included

Note: the quantity of parts shown in the manual is the actual usage and the unused parts are spare parts.

EXPLODED VIEW OF THE CART

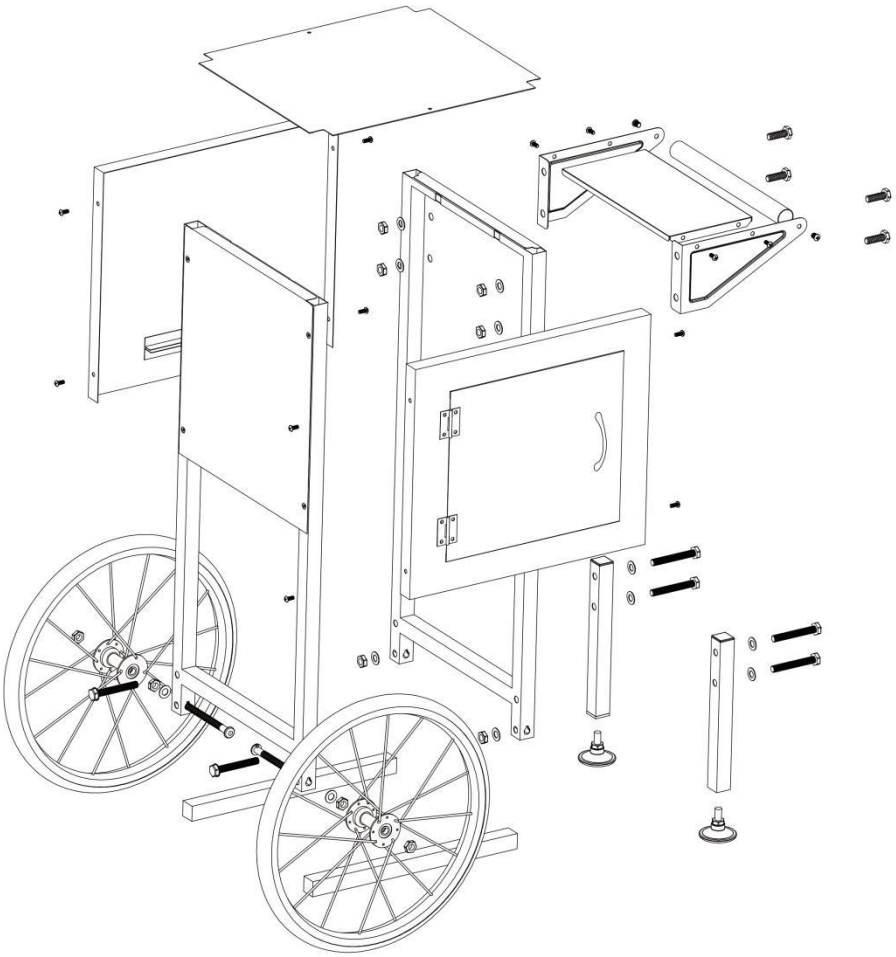


POPCORN CART ASSEMBLY

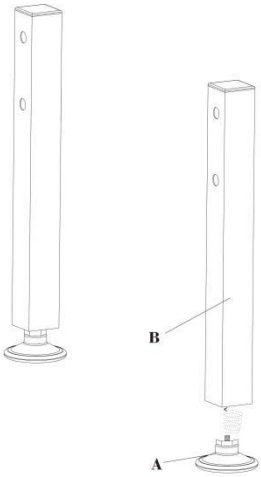


STEP1

Screw one of the **RUBBER FEET** (A) into the bottom of each **SUPPORT LEG** (B). Tighten both rubber feet.


STEP2

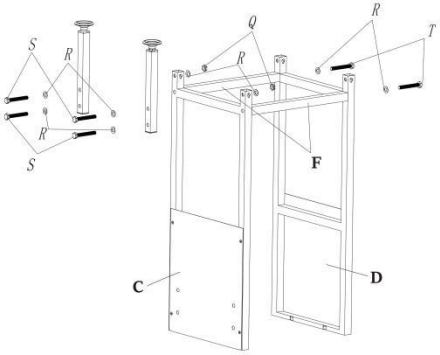

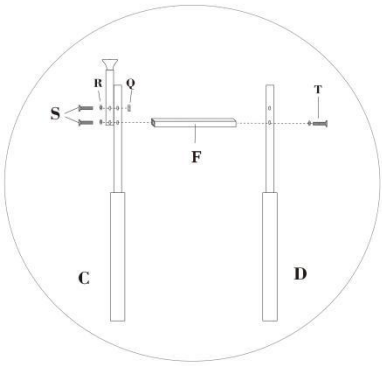

Put the assembled **SUPPORT LEG** (B) together with the **SUPPORT STAND** (C). The holes should be aligned.

Assemble **HORIZONTAL SUPPORTS-BASE** (E) between the **SUPPORT STAND** (C) and **SUPPORT STAND** (D). Secure the **SUPPORT STAND** (C) with **BOLTS** (S) and NUT(Q). The **BOLTS** (T) are screwed to other side.

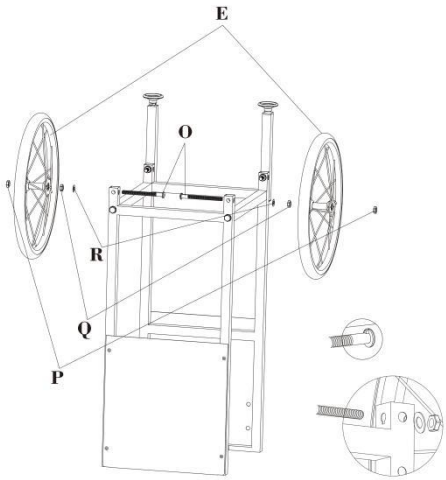


STEP 3

Insert one **WHEEL BOLT** (O) into the bottom holes located on each side of the SUPPORTSTAND(D)

NOTE: Insert the bolt from the inside out,then secure the wheel bolts with one NUT(Q) and **WASHER** (R) on each side and tighten them with the wrench.

Hang one **WHEEL** (E) onto one **WHEEL BOLT** (O) and secure it with one **Self-locking NUT** (P). Tighten them with the wrench. Then, repeat this step for the other wheel.


NOTE: Do not over tighten.Make sure both wheels can spin freely.

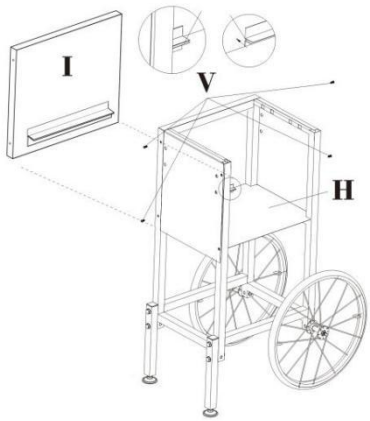

STEP 4


NOTE: Before assembling the front and back panels, determine which side you want the cabinet door facing outward. Insert the **CABINET BACK** (I). Secure the panel to the support stands with **SCREWS** (V) as shown in the figure.Tighten the screws with the screwdriver.

Insert the **CABINET BASE** (H) into the groove. Place the lipped side facing down and line the cabinet base up between the support stands**.**

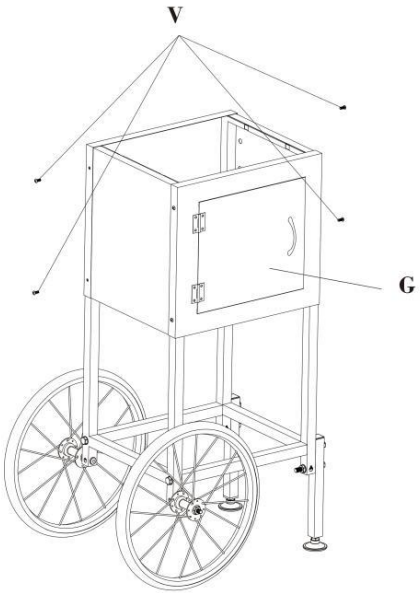


STEP 5

Insert the **CABINET FRONT** (G). Secure the panel to the support stands with **SCREWS** (V) as shown in the figure.

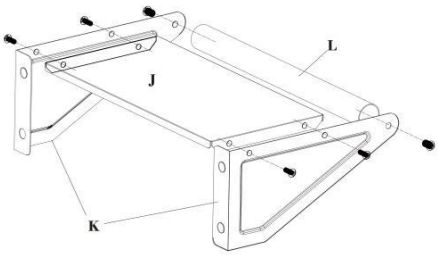


STEP 6

Remove the pre-assembled screws from the **PUSH HANDLE** (L). Attach one of the **WORKING PLATFORM BRACKETS** (K) to one end of the handle. Insert the **WORKING PLATFORM** (J) to the same bracket using the pre-assembled screws. Repeat the steps above to attach the remaining bracket on the other side.

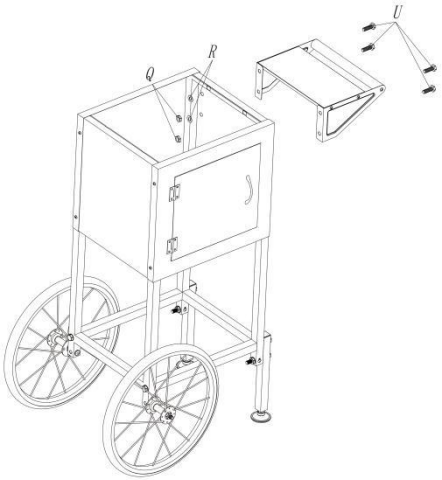

STEP 7

Insert the assembled WORKING PLATFORM on the right side of the cart (opposite side of the wheels) with four **BOLTS** (U), **WASHERS** (R) and **NUTS**(Q).

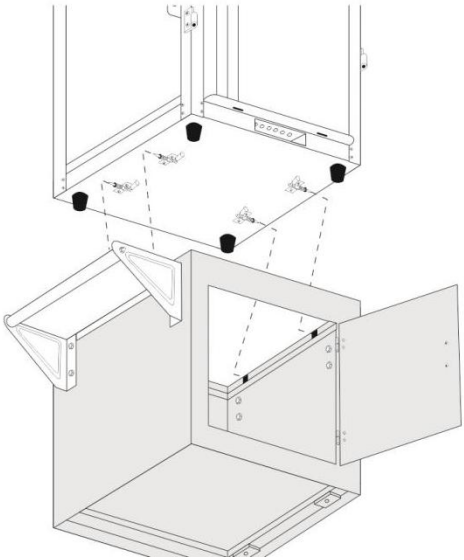

STEP 8

Place the main popper onto the cart assembled. Use the four spring loaded latches to secure the popping unit to the storage cabinet.

OPERATING INSTRUCTIONS

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the product are clean and free of dust. If necessary, wipe them over with a damp cloth. Spread over with an absorbent kitchen towel and wipe off any excess oil. **When your appliance is heated for the first time, it may emit slight smoke or odor, which is normal for many heating appliances, and will not affect the safety of your appliance.** Place the machine on a clean, dry, level surface near a plug base outlet.

1. Make sure the popcorn maker is unplugged before you do any of the following.
2. Before operation, please check carefully if its voltage is suitable to your country. (Please check if the voltage is matching with rating label specified next to the power cord).
3. Clean the internal surface of the kettle and the external surface of the main unit.
4 .The main unit has 2 function switches as follows:



Spot Light and Warmer (I)



Stainless Steel Kettle Heater & Stirrer(II)

5. Hook up the kettle onto the hanger of the main unit.
6. Plug in the power cord to the popcorn maker.
7. Push the **WARM** and **KETTLE** (I& II)switch on, and then fill in suitable amount of butter or oil (Shown as Fig.1).You can fill the amount of oil (Max.15g) subject to your own preference.

8.The kettle should be pre-heated for 3 to 4 minutes with oil (until steam comes out from it). When oil is heated, open lid **[CAUTION: LID IS HOT!]** and add up to 1-1/2 kernel scoops (3/4 cup) of popcorn kernels. Do not add seasoning or toppings into kettle.

9. Close the door carefully.

10. Popcorn starts popping out through the lid after about 2 minutes (Shown as Fig.4).

11. Switch off the **KETTLE** (II) when popping completed (no more popping sound from kettle). Rotate the roller arm on the kettle to dump popcorn. Leave the **WARM** (I) on to keep the popcorn warm,dry and tasty.

12. Serve your popcorn with popcorn scoop provided.

13. Remove plug from power supply if the unit is not being used for a long time.

14. Repeat steps 7 to 10 for continuous popping.

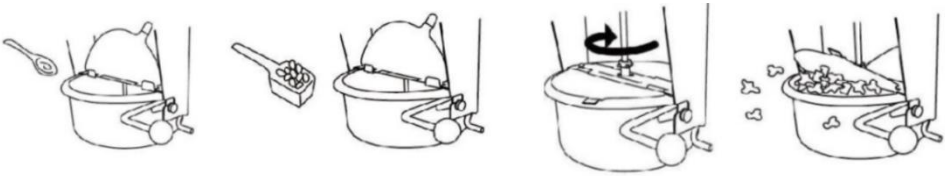


Fig.1 Fig.2 Fig.3 Fig.4

USING YOUR POPCORN MACHINE

We recommend to follow the measurement equivalents list below. And measure the amount of kernels and oil with scoops provided.

TIPS: General rule for quantities of oil and popcorn grain 3:1

KETTLE	KERNELS	OIL
2.5oz	1/3 cup	3/4 Tp (12ml)
4oz	1/2 cup	1-1/2 Tp (20ml)
6oz	3/4 cup	2 Tp (30ml)
8oz	1 cup	2-1/2 Tp (40ml)
10oz	1-1/4 cup	3 Tp (50ml)
12oz	1-1/2 cup	4 Tp (60ml)
16oz	2 cup	5 Tp (80ml)
20oz	2-1/2 cup	6-1/2 Tp (100ml)

1 person = (+/-)1oz



a. b. c.

a. Oil Spoon

b. Kernel Scoop

c. Popcorn Scoop

TROUBLESHOOTING

Kettle Not Heating	-Kettle need to be replace
Popcorn is burning	-Check the oil quantity (refer to operating instruction section)
Popcorn doesn't come off	-Check the temperature of the kettle
	-Check the HEAT SWITCH POSITION (ON)
No light on the switches	-Check if the plug is fully inserted into to wall outlet
	-Check your circuit breaker tripped
Popcorn remains trapped	-Check if the plastic gear housing is broken
	(inside the top of the machine) -Check if the kernels quantity is not exceed the kettle capacity
Stirrer jumps	-Check if the plastic gear housing is broken (inside the top of the machine)
Stirrer doesn't work	-Check if the Stir button is turned at the ON position -Check if the Stir button is glowing

CLEANING AND MAINTENANCE

1. Wipe the doors,glass and metal surface with a clean damp cloth. DO NOT use any acidic,citrus based cleaners or abrasive cleaners on the acrylic doors as they might cause scratching or dullness.
2. Frequently empty the catch tray of unpopped popcorn kernels and clean it with soap and water. Dry it thoroughly afterwards.
3. Frequent cleaning of the popcorn kettle is strongly recommended. This will help prevent burning of excess oils on the bottom of the kettle.
4. Let the unit cool down before cleaning.
5. Clean the kettle surface inside and out with wet cloth. To thoroughly clean the popcorn kettle,turn off the unit and add 1-1/2 to 2 cups of hot water into the kettle(no detergent is necessary),then place a towel at the bottom of the main unit and place a large bowl or container on the towel (the container must be large enough to easily pour water from the popcorn kettle).Turn on the Stirrer &Heater (2) and boil the water for 1 to 2 minutes.After that,turn off the stirrer and heater and carefully pour the water from the popcorn kettle to the bowl or container.Repeat same procedure 2 to 3 times for the best cleaning effect.

CAUTION:

1. Kettle and water will be HOT!
2. Never immerse the kettle into water or place it in the dishwasher.

Manufacturer: FOSHAN EDEN ELECTRICAL CO, LTD.
Address: No .4 West Street, Panxie Vilage,
Zhongbian, Dali Town, Nanhai District, Foshan City,
Guangdong Province, China
E-mail: support@vevor.com

