



Upgrade · The Home Creator Way

PARCEL MAILBOX


MODEL:PB-16S

VEVOR Support Center



PB-16S

MODEL:PB-16S

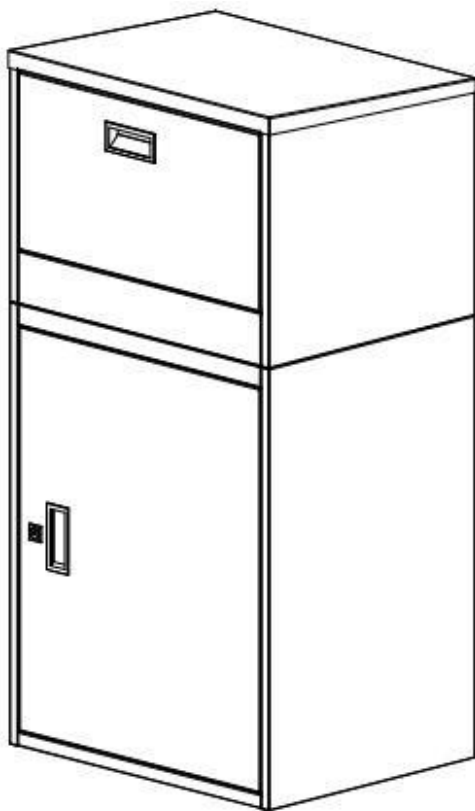

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Warning-To reduce the risk of injury, user must read instructions manual carefully. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

Assembly precautions


1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Parcel Mailbox.
8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Use precautions

1. DO NOT SIT OR STAND ON THIS ITEM.
2. This product is not a toy. Do not allow children to play with or near this item.
3. Do not exceed specified weight capacities.
4. Use as intended only.
5. Inspect before every use; do not use if parts are loose or damaged.

SAVE THIS MANUAL


PARTS LIST

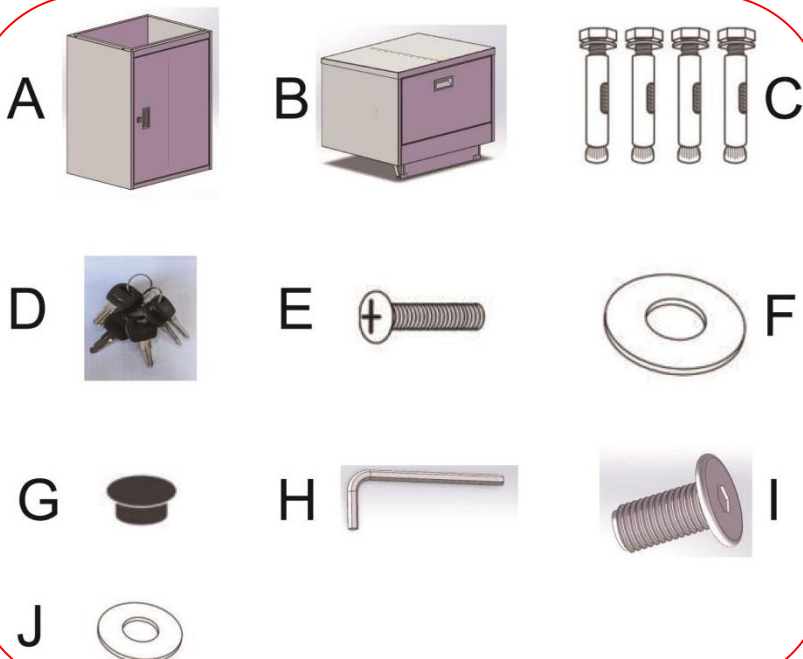

A	Lower box body x1pcs
B	Upper box body x1pcs
C	Expansion screws x4pcs
D	Keys x6pcs
E	M5×10mm screws x2pcs
F	Washers x2pcs
G	Plastic hole plugs x4pcs
H	Inner hexagon wrench x1pcs
I	large flat - head screws x6pcs
J	rubber sealing rings x6pcs


ASSEMBLY STEP

Step-1

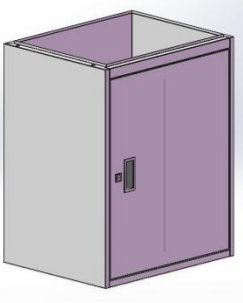


Place the courier box on a flat surface with the top facing up, and then take out the packing box.

Step-2

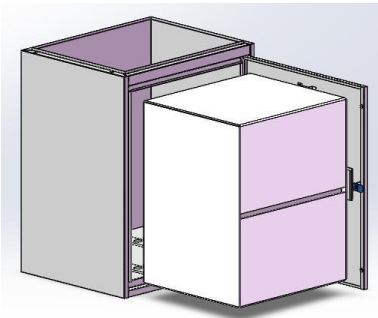


Please open the door of the lower box body and take out the upper box inside. The accessories are placed at the bottom of the lower box body or inside the lower cardboard box.

Step-3

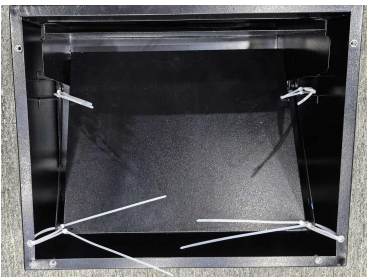


The sliding expansion plate accessories are fixed inside the upper box body. Please cut off eight cable ties for removal.

Step-4

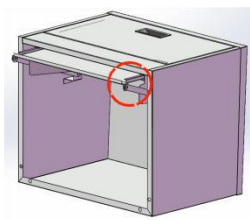


Put the sliding expansion plate into the sliding groove, noting that incorrect front and back directions will prevent assembly. As shown in the diagram on the left.

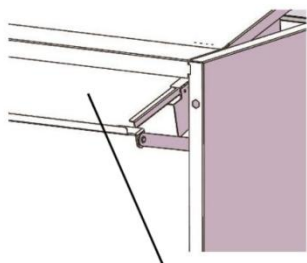


sliding expansion plate

Step-5

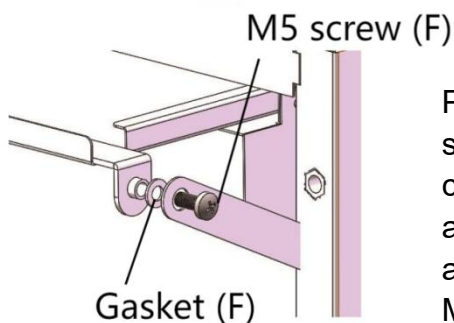

Put the rotating hanging lug of the sliding expansion plate into the circular boss of the connecting rod and put the gasket (F) in the middle, and finally tighten and fix it with the M5 screw (F).


Step-6

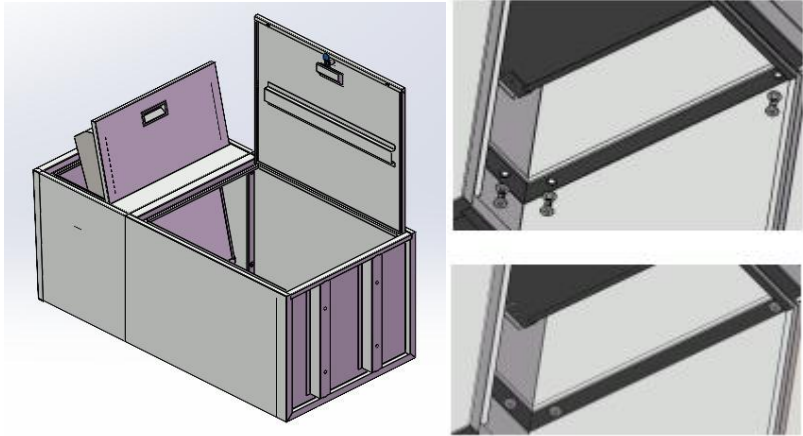


First, lay the product flat on the carpet, open the delivery port of the upper box, and open the cabinet door of the lower box, as shown in the diagram.

There are screw fixing holes on the top surface of the lower box. Find the rubber sealing ring (I) and install it on the large flat-head screw (J), insert it into the nut pre-installed on the upper box and tighten it.

Step-7

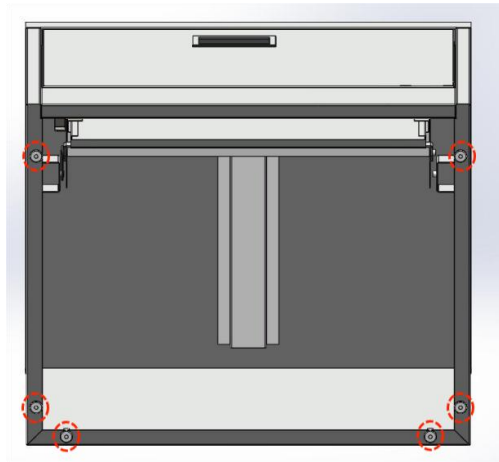

Install screws in the 6 marked places as shown in the diagram. Check whether there is a step difference at the connection between the upper and lower boxes of the cabinet. After self-adjusting, lock the screws, and it can be used normally.

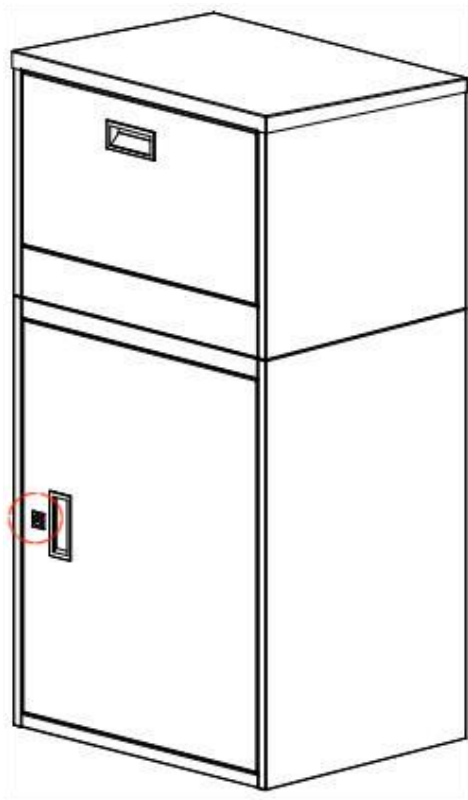

open to the left/close to the right


PRODUCT PARAMETER

Model	PB-16S
Colour	Black
Product Size	500*400*980mm

Fixing Method



- ① Drill 4 holes ($\Phi 8\text{mm} \times \text{depth } 55\text{mm}$)
- ② Align the holes of the courier box with the drilled holes and place the courier box.
- ③ Insert the anchor bolts for fixation into the 4 holes and tighten the bolts of the anchor bolts.
- ④ If necessary, install hole covers on the attached base plate.

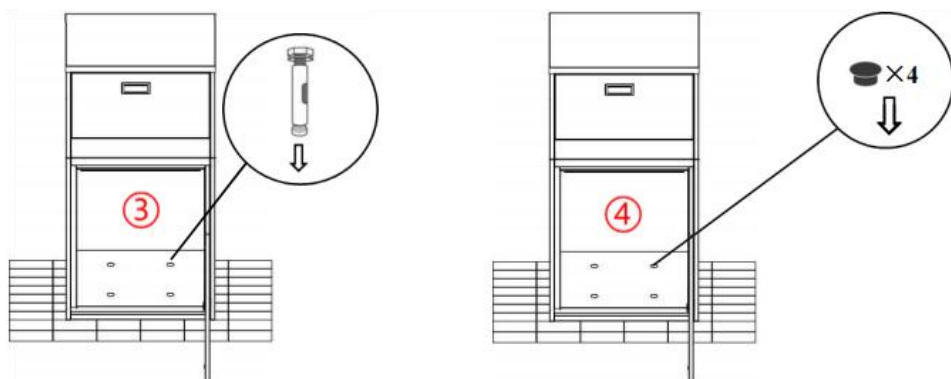

※Please prepare a socket wrench (10 mm) for fixation by yourself.

