



Upgrade · The Home Creator Way

GARDEN TRAILERS

MODEL: BTC-001D

VEVOR Support Center




BTC-001D

VEVOR

Upgrade · The Home Creator Way

GARDEN TRAILERS

MODEL: BTC-001D

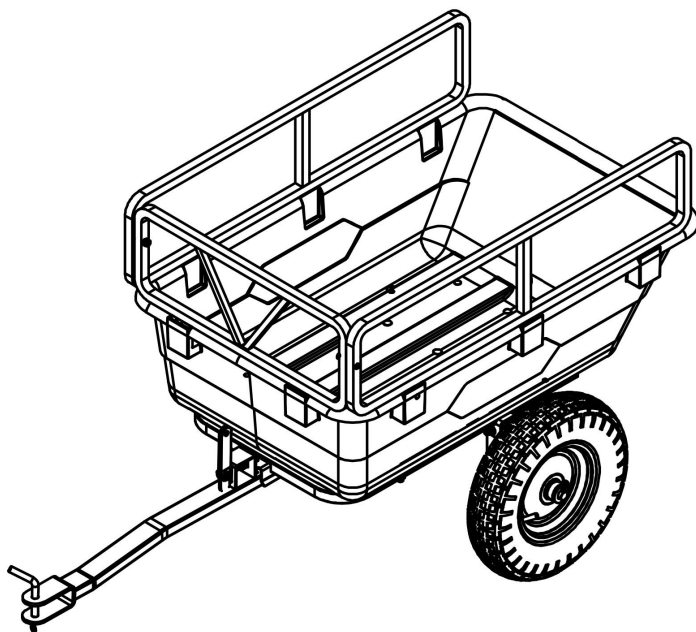

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Assembly precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.

Assemble on a flat, level, hard and smooth surface capable of safely supporting the Garden Trailers









7. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.





Use precautions


1. DO NOT SIT OR STAND ON THIS ITEM.
2. This product is not a toy. Do not allow children to play with or near this item.
3. Do not exceed specified weight capacities.
4. Use as intended only.
5. Inspect before every use; do not use if parts are loose or damaged.

SAVE THIS MANUAL

PARTS LIST

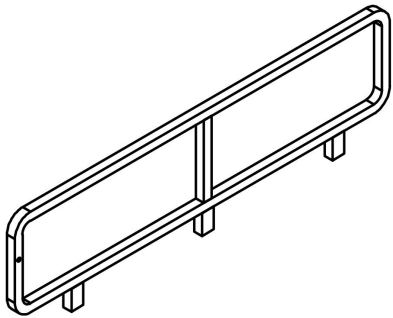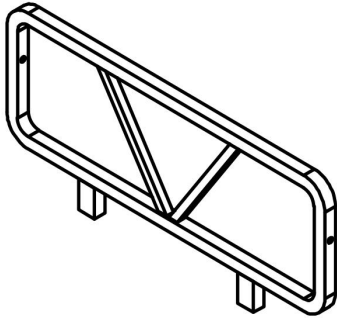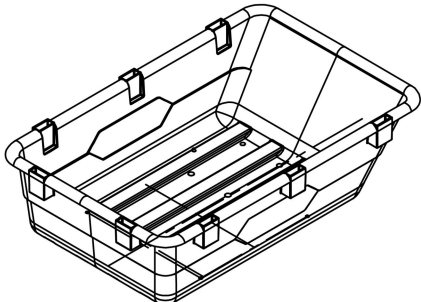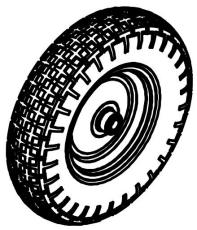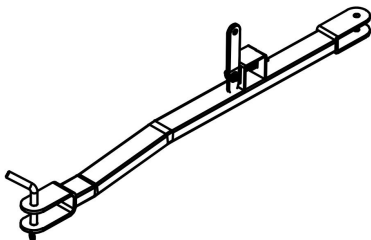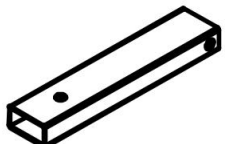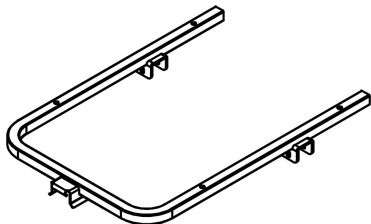
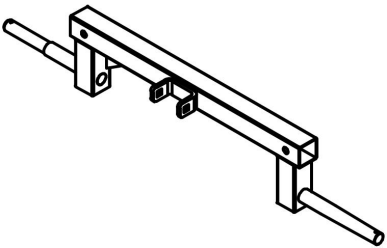
1		2	
	Left and right guardrails ×2		Front guardrail ×1
3		4	
	Plastic bucket ×1		Wheels ×2
5		6	
	Trailer rod ×1		Connecting rod ×1
7		8	
	Bottom bracket ×1		Axle bracket ×1

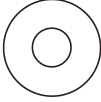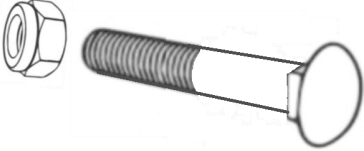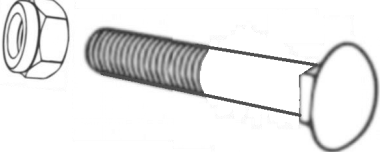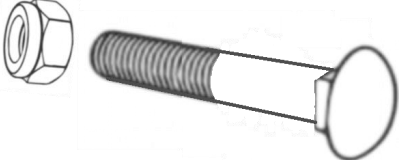9	 Washer ×4	10	 Pin ×2
11	 Carriage bolt screw M10*65 ×2	12	 Screw M8*50 ×2
13	 Screw M10*50 ×4	14	 Carriage bolt screw M10*55 ×1
15	 Carriage bolt screw M10*85 ×1		

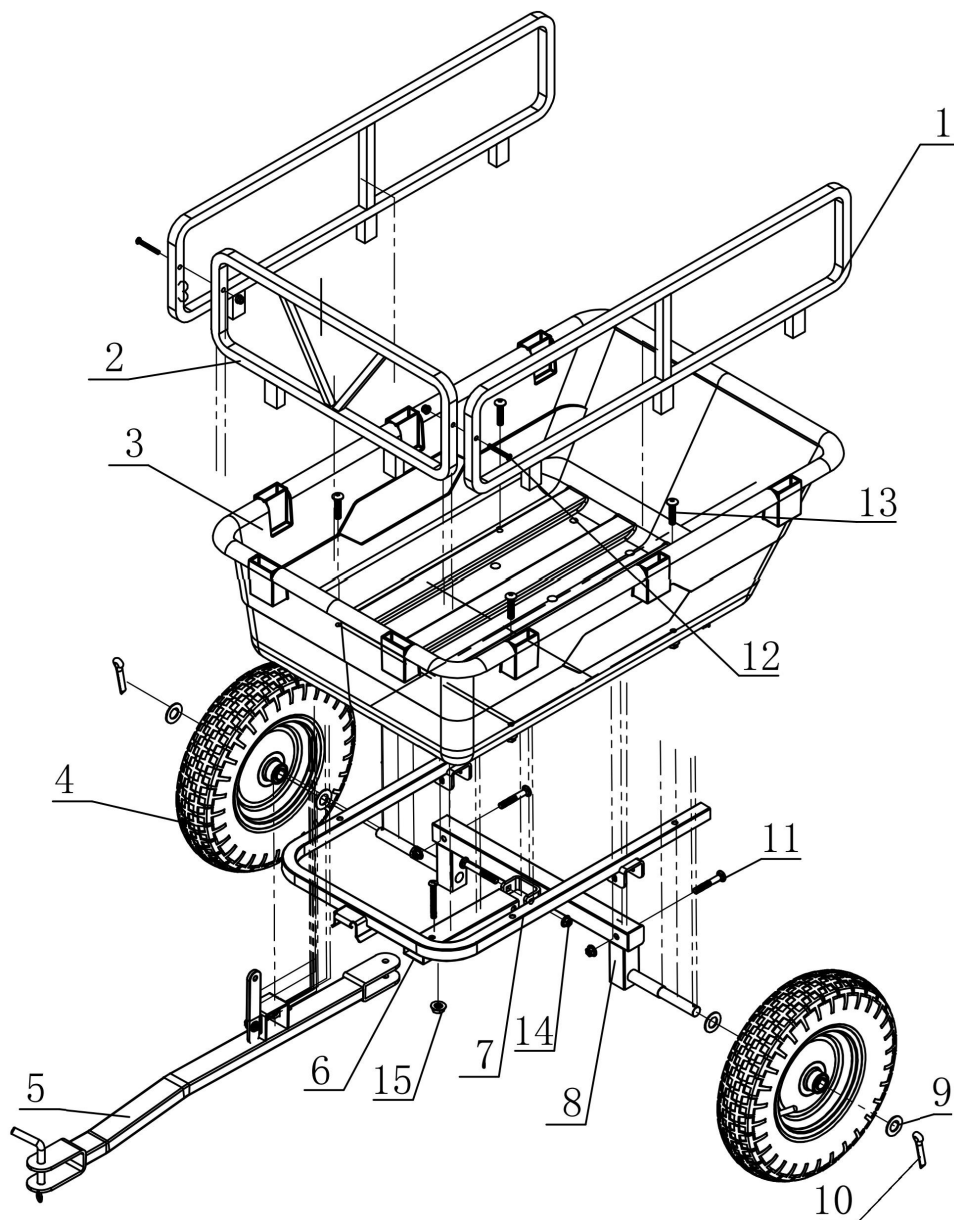




ASSEMBLY STEP

STEP 1

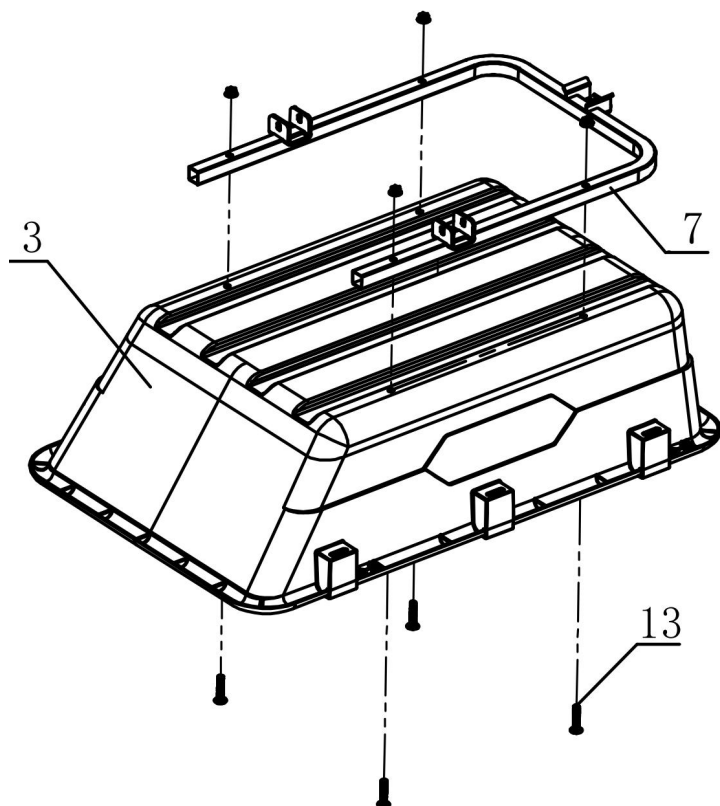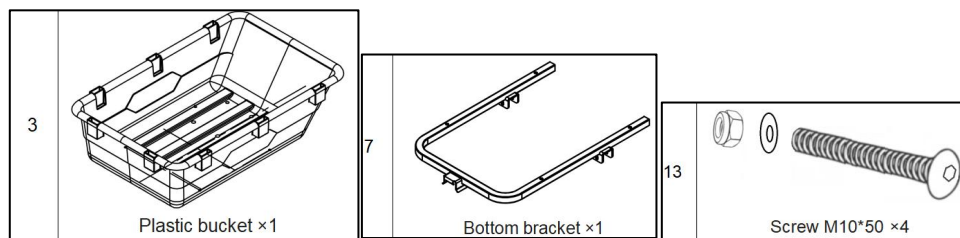





1. Place the plastic bucket(No.3) above the bottom bracket(No.7) and align the installation holes of the two.
2. Use a screwdriver to screw M10*50(No.13 x4) screws into the corresponding installation holes respectively. Tighten the screws to firmly connect the plastic bucket(No.7) and the bottom bracket(No.7).

STEP 2

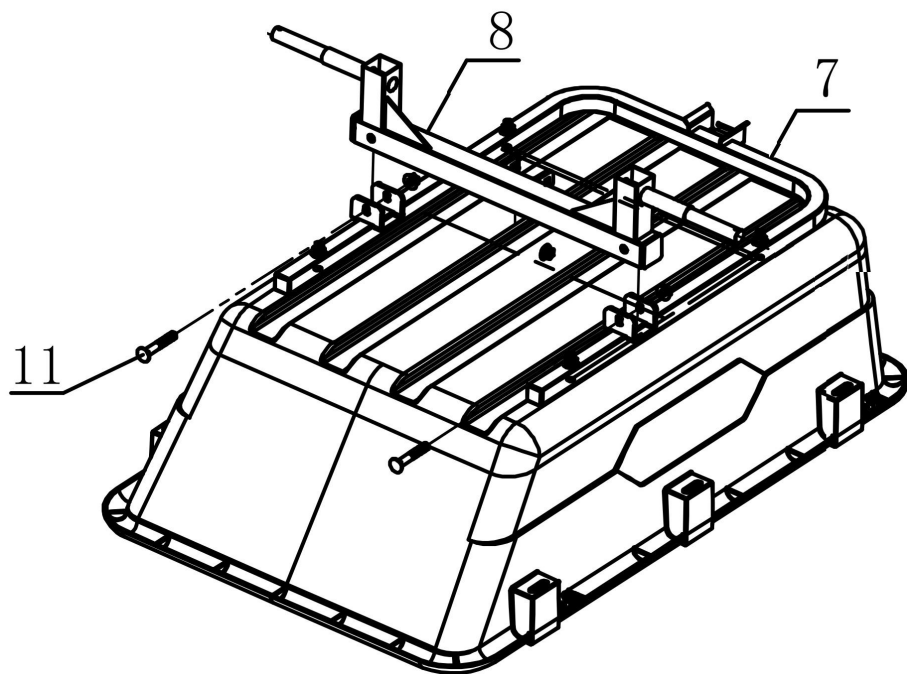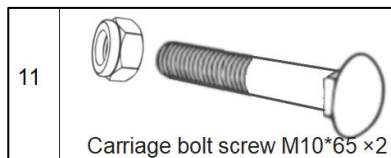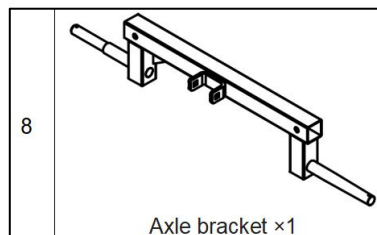




1. Install the axle bracket(No.8) in the corresponding position on the bottom bracket(No.7).
2. Pass carriage bolt screws M10*65((No.11 x2) through the installation holes of the axle bracket(No.8) and the bottom bracket(No.7), and make them protrude from the bottom upwards.

STEP 3

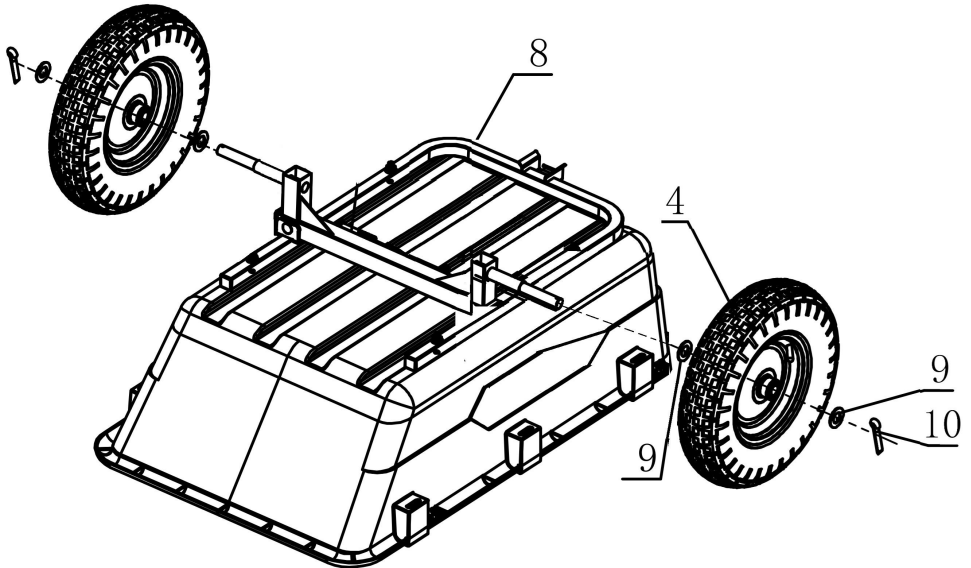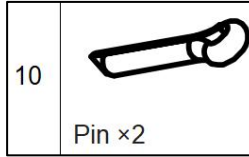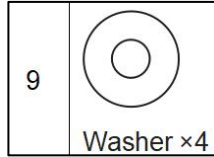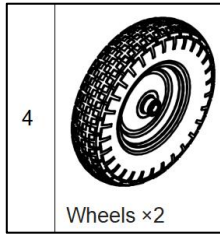




1. Put one washer(No.9 x2) on each side of the axle of the wheel shaft.
2. Install the wheels(No.4 x2) (with the inflation port facing outwards) onto the axle.
3. Put another washer(No.9 x2) on each side of the axle of the wheels.
4. Insert pins(No.10 x2) into the end holes of the axle of the wheel shaft bracket to fix the wheels.

STEP 4

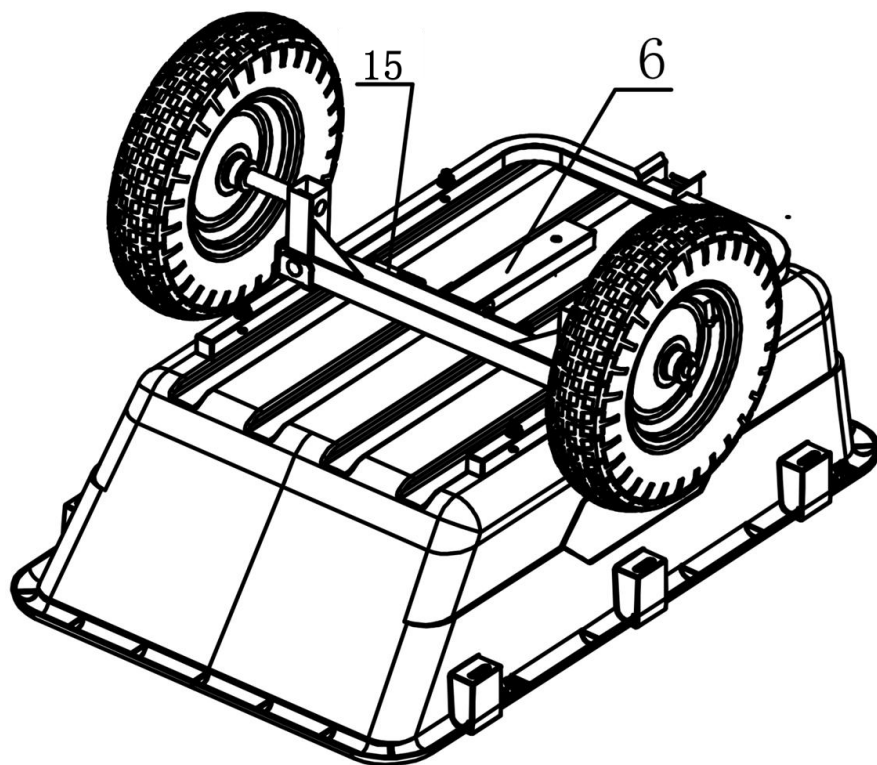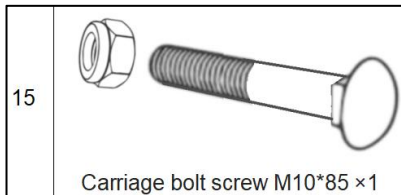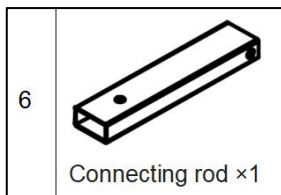



1. Install the connecting rod(No.6) at the specified position on the bottom bracket(No.7).
2. Use screws M10*85(No.15 x1) to lock the connecting rod(No.6) and the bottom bracket(No.7).

STEP 5

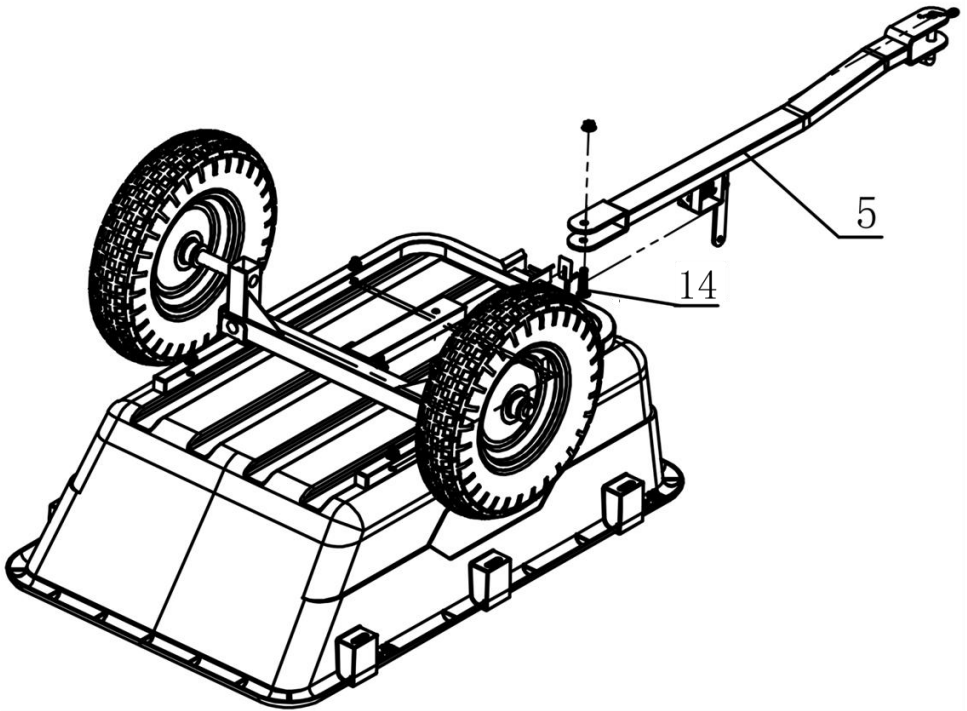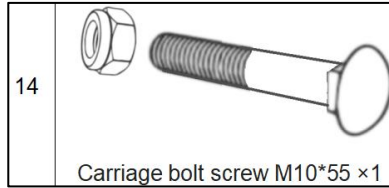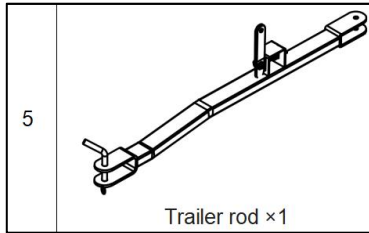


1. Install the trailer rod(No.5) in the corresponding position.
2. Fix the trailer rod with a carriage bolt screw M10*55(No.14 x1) and tighten the screw.

STEP 6

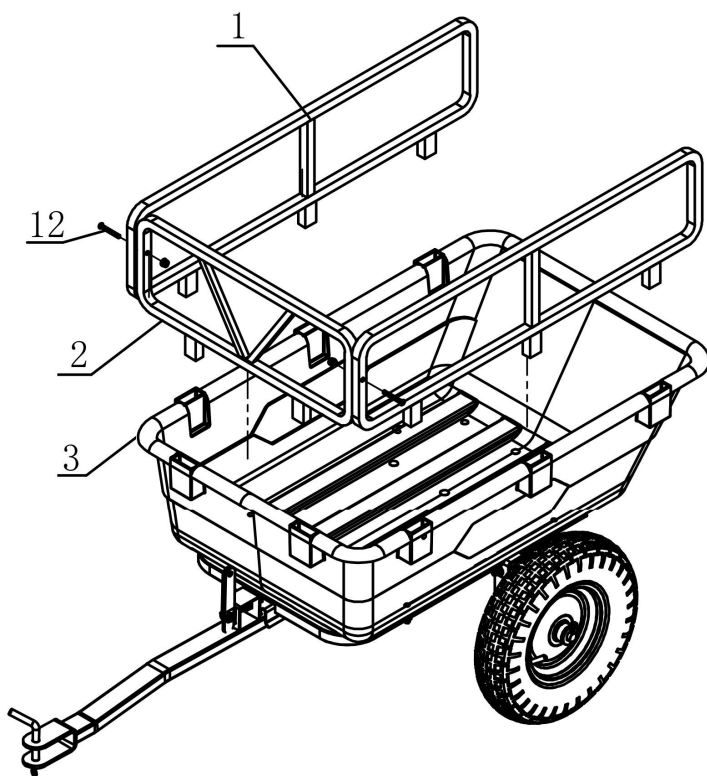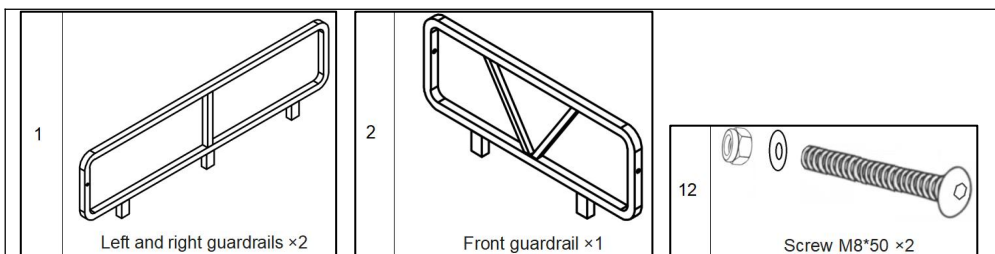

1. 1. Turn the cart over.
2. 2. Install the left and right guardrails(No.1 x2) and the front guardrail(No.2) at the edge of the plastic bucket(No.3), aligning the installation holes of the guardrails with those on the plastic bucket(No.3).
3. 3. Use a screwdriver to screw M8*50(No.12 x2) screws into the corresponding installation holes respectively to fix the guardrails.

It is assembled and completed.

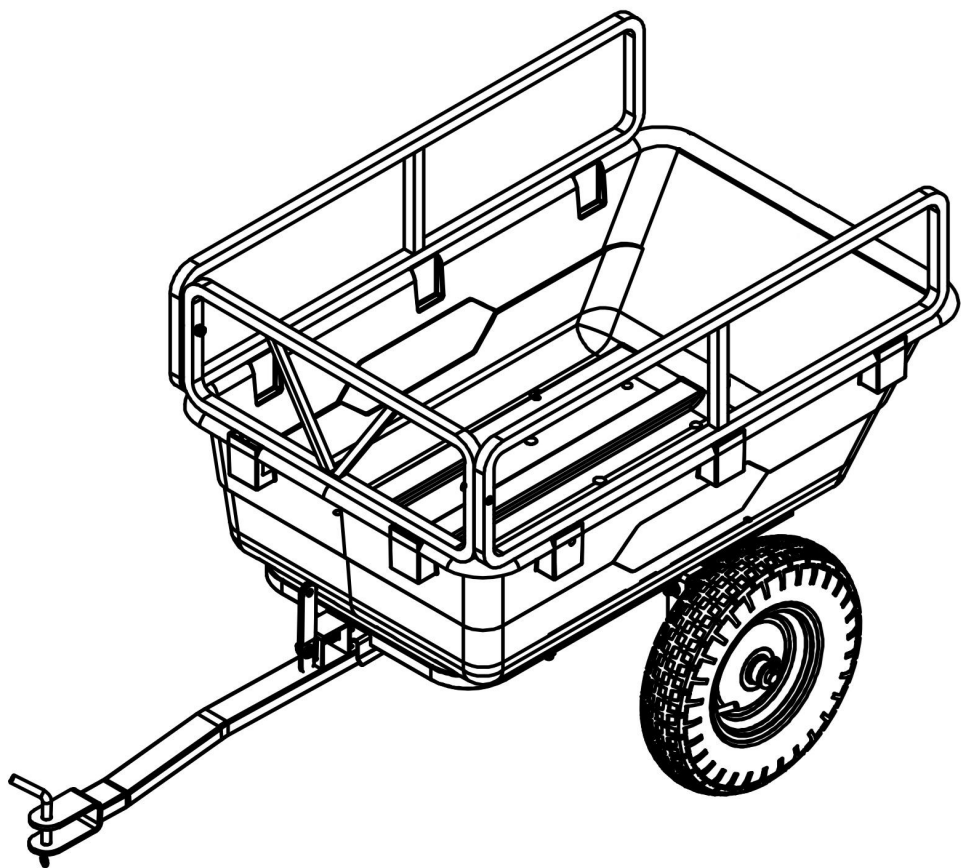

PRODUCT PARAMETER

Model	BTC-001D
Volume	10 cu.ft
Carriage size	940*575*490mm 37*23*19.3inch
Maximum loading capacity	500 LBS

