



Upgrade · The Home Creator Way


WALL MOULDING TRIM

**MODEL: JX36#-L2438/JX88#-L2690/JX88#-L2165/
JX36#-L1920/JX60#-L3842/JX88#-L1920/
JC956#-JC960-L2044**


VEVOR Support Center

1	JX36#-L 2438		5	JX36#-L1 920	
2	JX88#-L 2690		6	JX60#-L3 842	
3	JX88#-L 2165		7	JX88#-L1 920	
4	JC956#- JC960-L 2044				


Model:JX36#-L2438

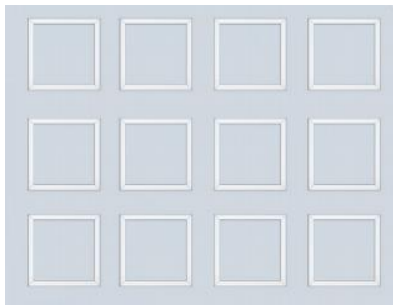


Model:JX88#-L2690

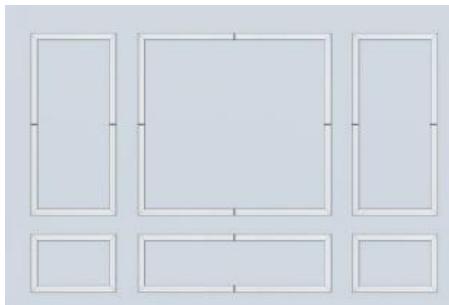


Model:JX88#-L2165

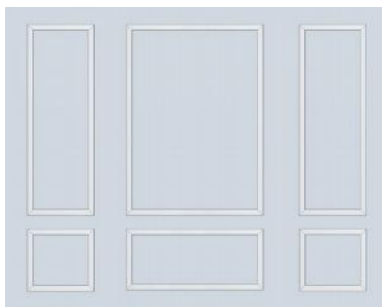


Model:JC956#-JC960-L2044

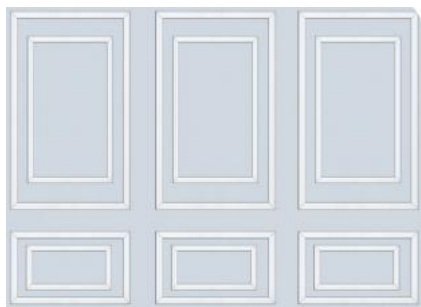


Model:JX36#-L1920

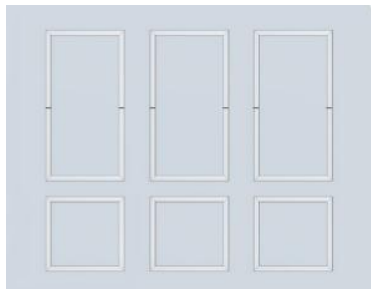

Model:JX60#-L3842

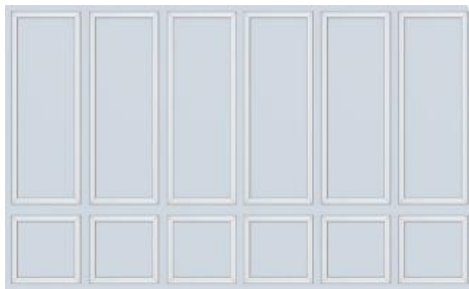

Model:JX88#-L1920

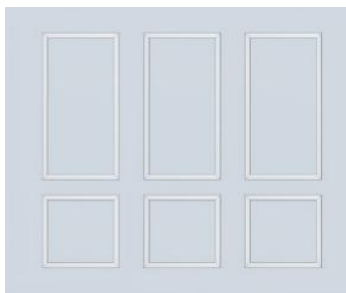

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

- The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
- Please use the product according to the intended use, warn of potential injury from misuse.

- Not suitable for environments with high humidity, explosive atmospheres, salt spray, acidic or alkaline conditions.
- This product is combustible. Keep away from open flames, heaters, and other ignition sources during installation.
- The panels must be installed on a flat, dry, and solid wall surface. Improper installation may cause deformation, cracking, or detachment.
- Cut edges may be sharp during installation. Wear protective gloves to prevent cuts.
- This product is not a toy. Keep children away from the installation area to prevent contact with sharp tools and materials.
- Clean gently with a soft cloth. Do not wash with water or use strong acids, alkali, or abrasive cleaners.
- Prolonged exposure to UV radiation may cause fading or aging of the panels. Avoid direct sunlight.
- Dispose of the product in accordance with local construction waste regulations. Do not discard irresponsibly.
- Packaging materials (such as plastic bags) may pose a choking hazard to children. Keep packaging out of reach of children and dispose of in accordance with local waste sorting regulations.

WALL MOULDING DIMENSIONS

Measure your wall before ordering to ensure correct amount ordered






Thank you very much for choosing this Wall Moulding Trim . Please read all of the instructions before using it. The information will help you achieve the best possible results.




TOOLS REQUIREMENT INTRODUCTION



Construction Adhesive	Tape Measure	Pencil
		
Towel	Marking Tape	Gloves

SAVE THIS MANUAL

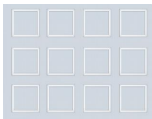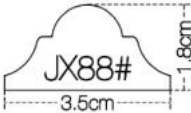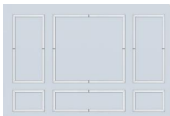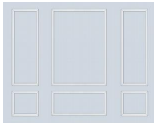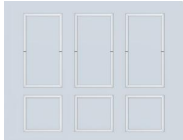Model	Strip pattern	Collage effect
JX36#-L2438		
JX88#-L2690		
JX88#-L2165		
JX36#-L1920		
JX60#-L3842		

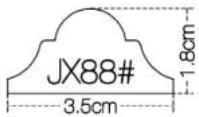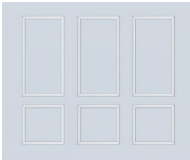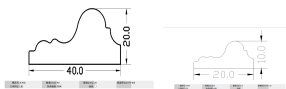JX88#-L1920		
JC956#-JC960-L2044		

BEFORE INSTALLATION: FOUNDATION PREPARATION

Wall condition inspection: Ensure that the "base is qualified"




The installation of decorative strips relies on flat, dry, and sturdy walls, and needs to be checked one by one in the early stage:



Flatness: Use a 2-meter ruler to test the wall surface, with an error of $\leq 3\text{mm}$. If there are protrusions, depressions, or cracks on the wall surface, apply putty to level it first (it is recommended to use water-resistant putty, especially in damp areas such as bathrooms and kitchens). After drying, use sandpaper to polish it smooth.

Drying degree: The new wall surface should be completely dry (it is recommended to ventilate for at least 7 days after painting latex paint walls, and maintain for 28 days for cement walls), to avoid moisture regain on the wall surface in the later stage, which may cause the decorative strips to fall off or mold.


Cleanliness: Remove dust, oil stains, and floating ash from the wall surface. Use a damp cloth to wipe and air dry to prevent a decrease in adhesive adhesion.

INSTALLATION STEPS

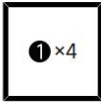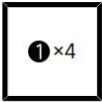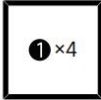JX36#-L2438				 1 20" 48 Pieces
				
				
				

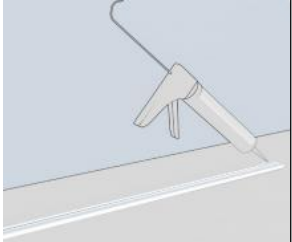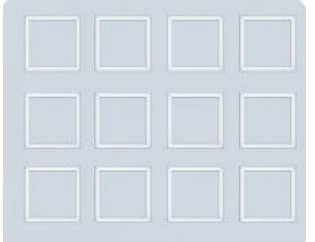		
Step 1: After measuring the dimensions,use a pencil and ruler to mark the correct positions.	Step 2: Apply construction adhesive to the back of the molding trims.	Step 3: Attach them to the wall according to their numbers. Use tape to hold them in place until the adhesive cures.

JX88#-L2690

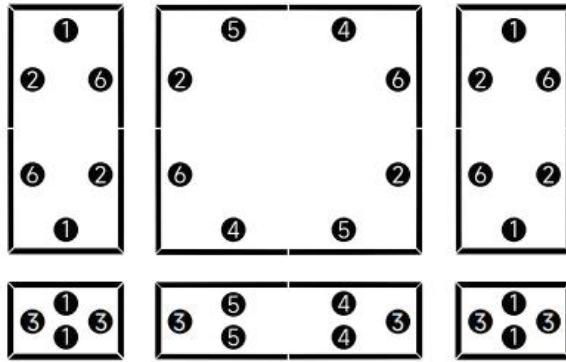

1 31"

8 Pieces



2 31.5"

6 Pieces



3 24"

6 Pieces



4 36"

4 Pieces




5 36"

4 Pieces




6 31.5"


6 Pieces

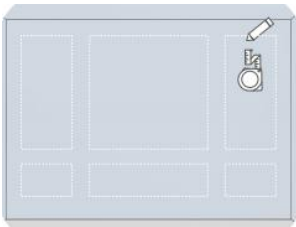

Step 1: After measuring the dimensions, use a pencil and ruler to mark the correct positions.

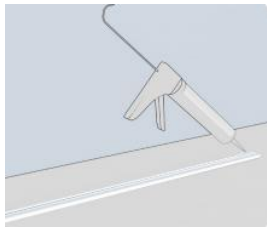


Step 2: Apply construction adhesive to the back of the molding trims.

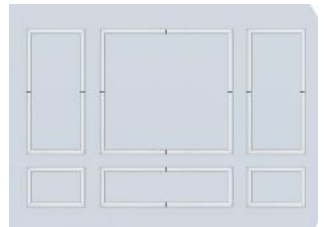

Step 3: Attach them to the wall according to their numbers. Use tape to hold them in place until the adhesive cures.

JX88#-L2165

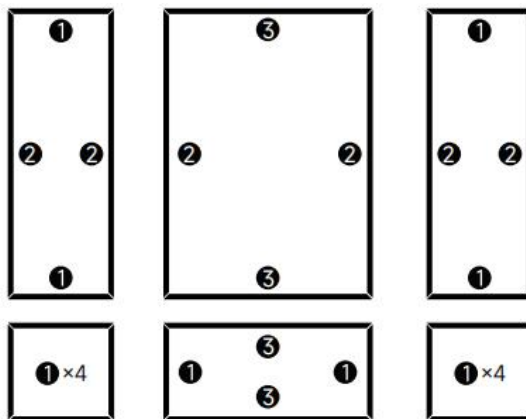

1 23"

14 Pieces




2 56.3"

6 Pieces




3 48"


4 Pieces

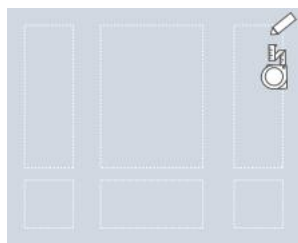

Step 1: After measuring the dimensions, use a pencil and ruler to mark the correct positions.

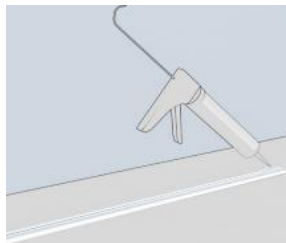


Step 2: Apply construction adhesive to the back of the molding trims.

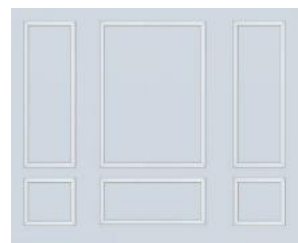

Step 3: Attach them to the wall according to their numbers. Use tape to hold them in place until the adhesive cures.

JX36#-L1920

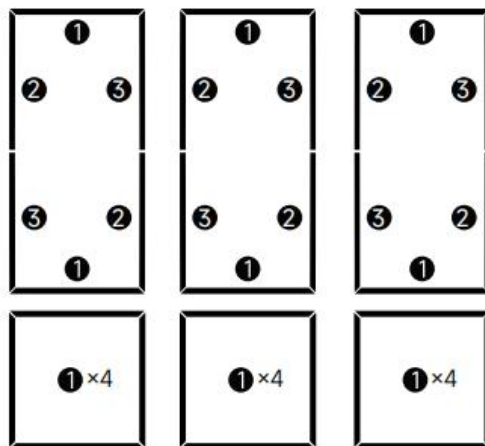

1 24"

18 Pieces




2 27"

6 Pieces




3 27"


6 Pieces

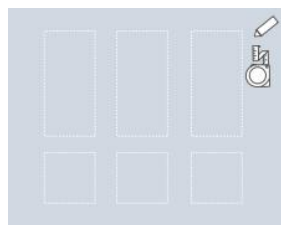

Step 1: After measuring the dimensions, use a pencil and ruler to mark the correct positions.

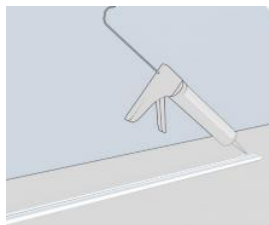


Step 2: Apply construction adhesive to the back of the molding trims.

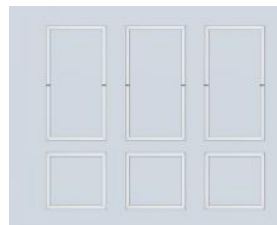

Step 3: Attach them to the wall according to their numbers. Use tape to hold them in place until the adhesive cures.

JX60#-L3842

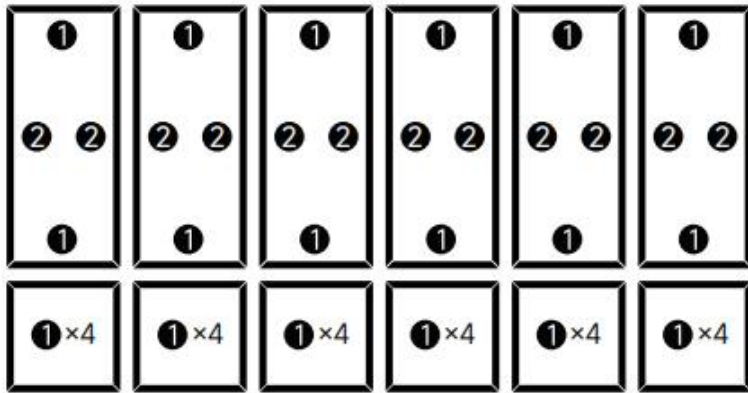




24"

36 Pieces



54"

12 Pieces

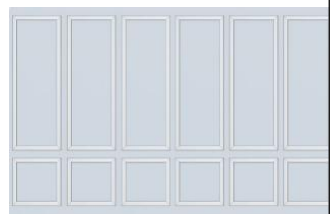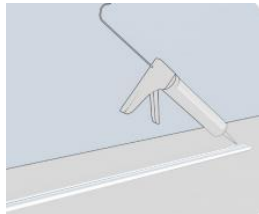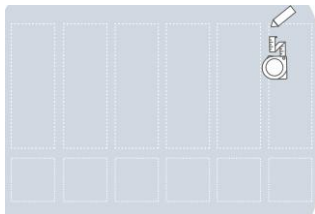


Step 1: After measuring the dimensions, use a pencil and ruler to mark the correct positions.

Step 2: Apply construction adhesive to the back of the molding trims.

Step 3: Attach them to the wall according to their numbers. Use tape to hold them in place until the adhesive cures.

JX88#-L1920

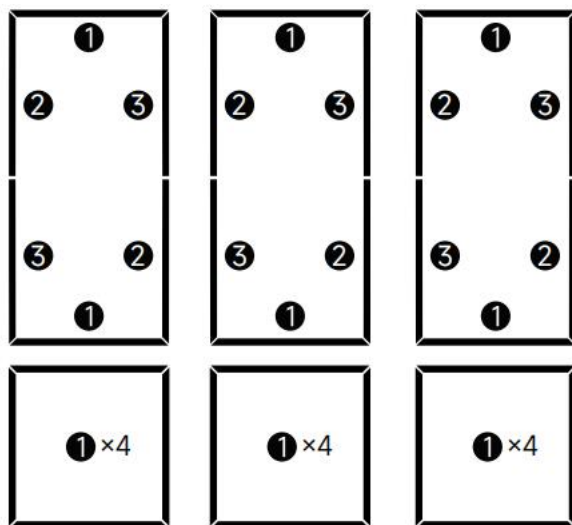

1 24"

18 Pieces




2 27"

6 Pieces




3 27"


6 Pieces

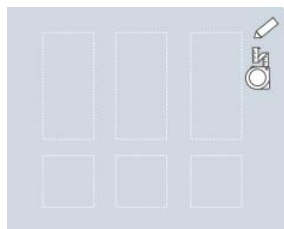

Step 1: After measuring the dimensions, use a pencil and ruler to mark the correct positions.

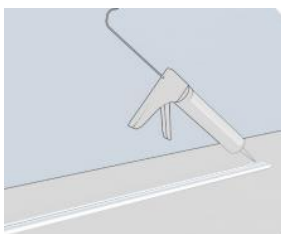


Step 2: Apply construction adhesive to the back of the molding trims.

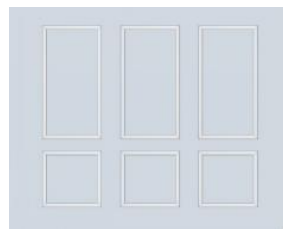

Step 3: Attach them to the wall according to their numbers. Use tape to hold them in place until the adhesive cures.

JC956#-JC960-L2044

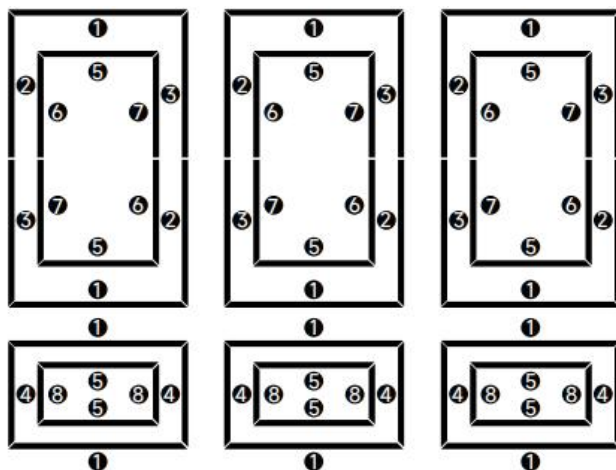

1 31"

12 Pieces



2 27"

6 Pieces



3 27"

6 Pieces



4 18"

6 Pieces



5 19"

12 Pieces



6 19"

6 Pieces






7 19"

6 Pieces



8 6"

6 Pieces

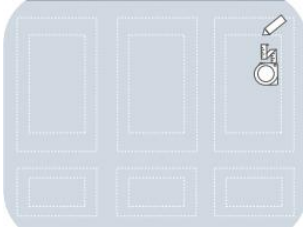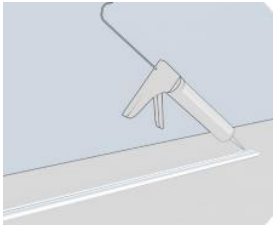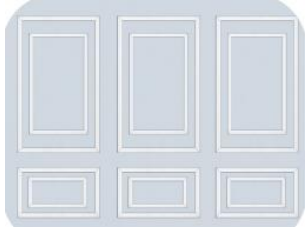		
Step 1: After measuring the dimensions, use a pencil and ruler to mark the correct positions.	Step 2: Apply construction adhesive to the back of the molding trims.	Step 3: Attach them to the wall according to their numbers. Use tape to hold them in place until the adhesive cures.

SUMMARY

The core of installing wall decorative strips is "Per measurement, mid-term fixation, and later repair". It is necessary to match the wall conditions and tools according to the material of the decorative strips, especially paying attention to details such as internal and external corner splicing and adhesive selection, in order to achieve a "smooth, seamless, firm and durable" decorative effect and avoid rework or aesthetic decline due to improper operation.

