

VEVOR

Upgrade · The Home Creator Way

STEERING WHEEL STAND


MODEL:QY-GL08

VEVOR Support Center



QY-GL08

MODEL:QY-GL08

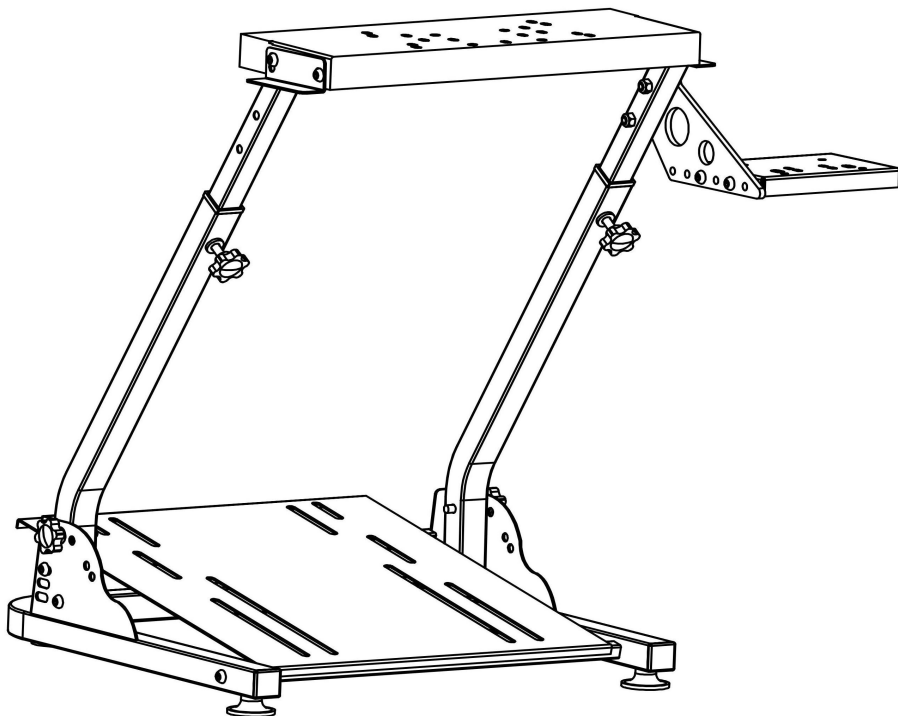

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

The product complies with relevant standards and regulations.


Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

Maximum load: 15 kg (steering wheel + accessories)

Use only on stable, level surfaces. Do not stand or climb on the stand.

Not suitable for children under 14 years old.


Part List

1		Rack	1
2		Left and right support rods	2
3		Left and Right Armrests	2
4		Wheel Plate	1
5		Shifter Plate	1
6		Shifter Mounting Arm	1
7		Knob M8*20	2
8		Knob M8*40	2


9		Feet	4
10		Screw M6*16	12
11		Screw M8*40	4
12		Screw M8*16	4
13		Nut M6	2
14		Nut M8	8
15		Washer 8	8
16		Hex key 5	1
17		Hex key 4	1
18		Wench 9-13	1
19		Binding Strap	6

Product Installation


STEP 1: Use 4 rubber screws to fix the bottom of the bracket to adjust the balance of the bracket.

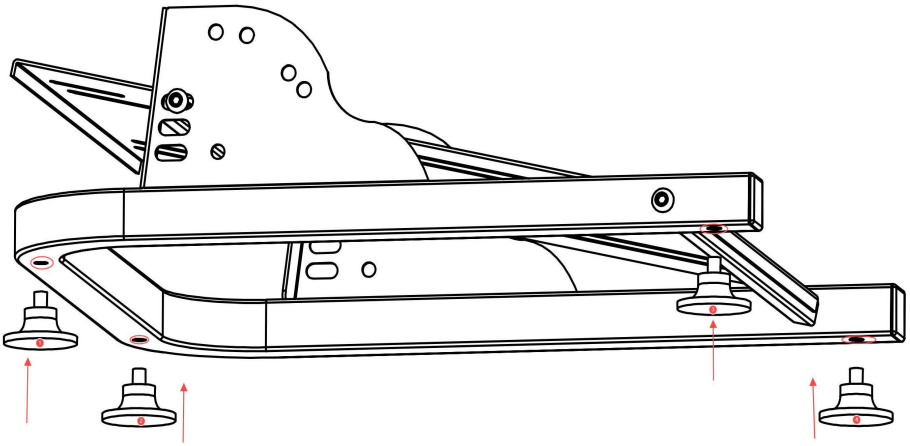



STEP 2:Two Knob M8*40 and two M8*40 screws are used to fix the bracket support bar respectively.

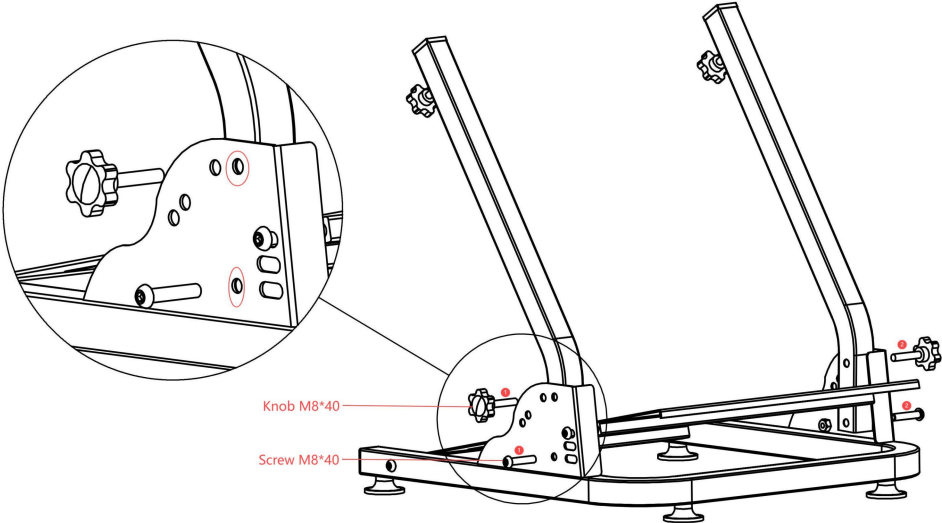


STEP 3:Insert the telescopic pole and fix it with knobM8*20 screws, the telescopic pole can be adjusted in height.

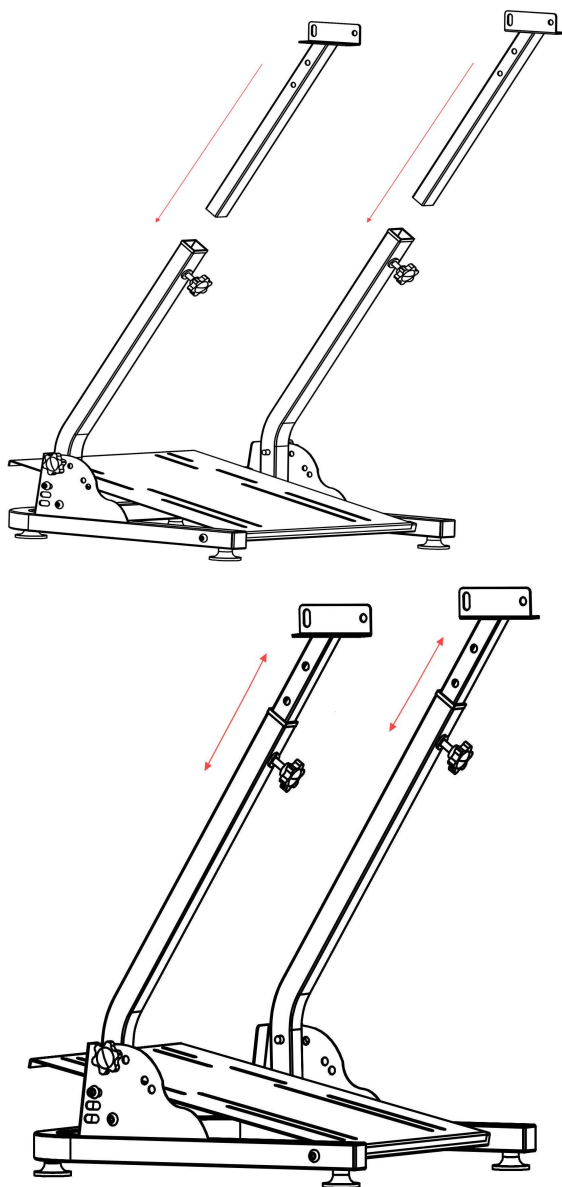


STEP 4: Put it into the steering wheel panel and fix it with 4 M8*16 screws and M8 nuts. The angle of the steering wheel panel can be fine-tuned.

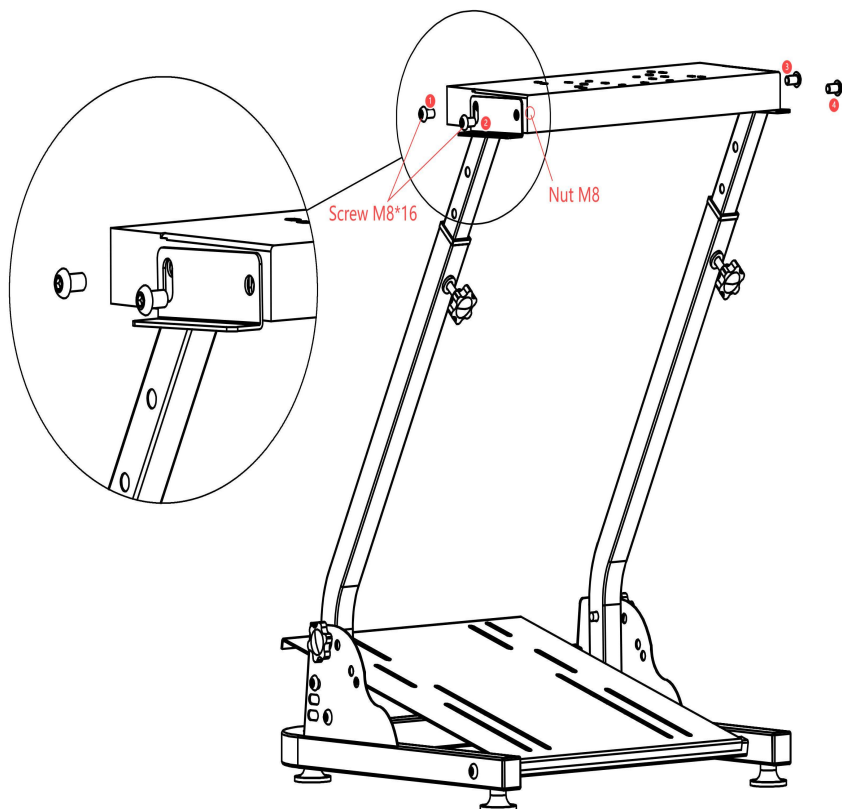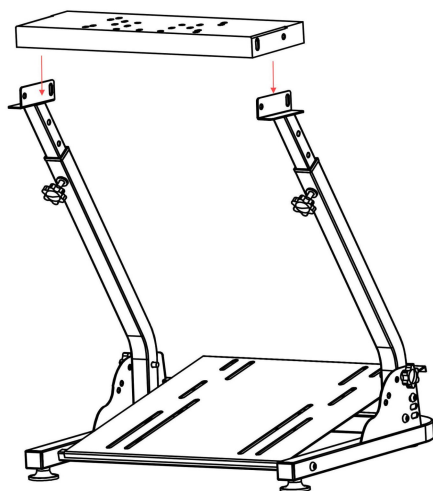


STEP 5: Install the partner tray connection plate, fix it with 2 M8*40 screws and nuts.

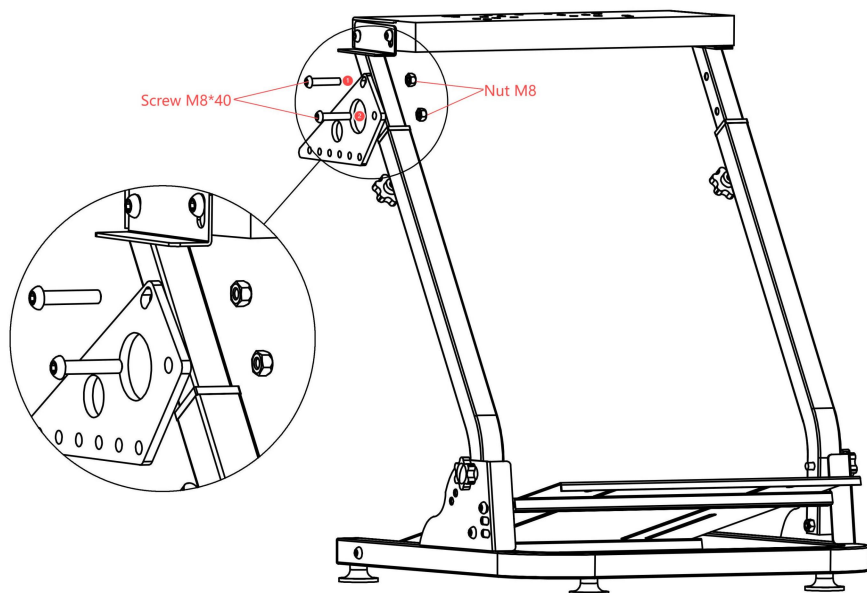

STEP 6: Install the partner disk panel and fix it with 2 M6*16 screws and nuts.

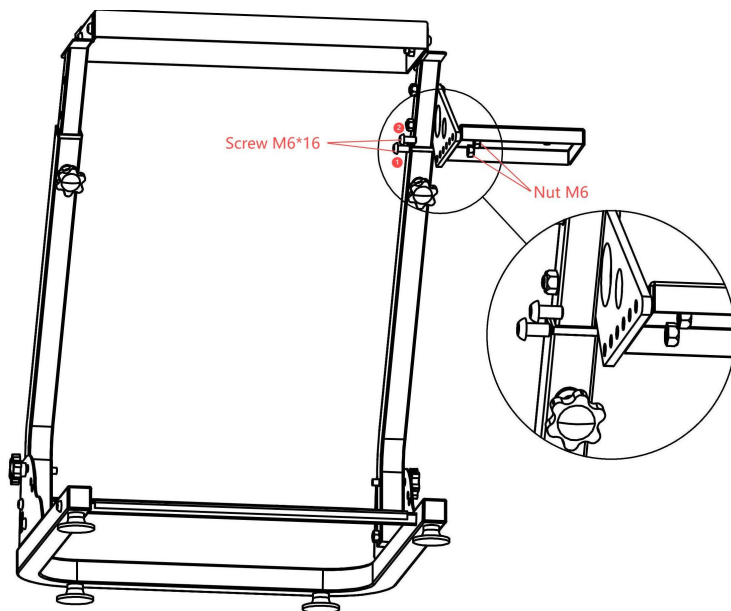

Installation completed

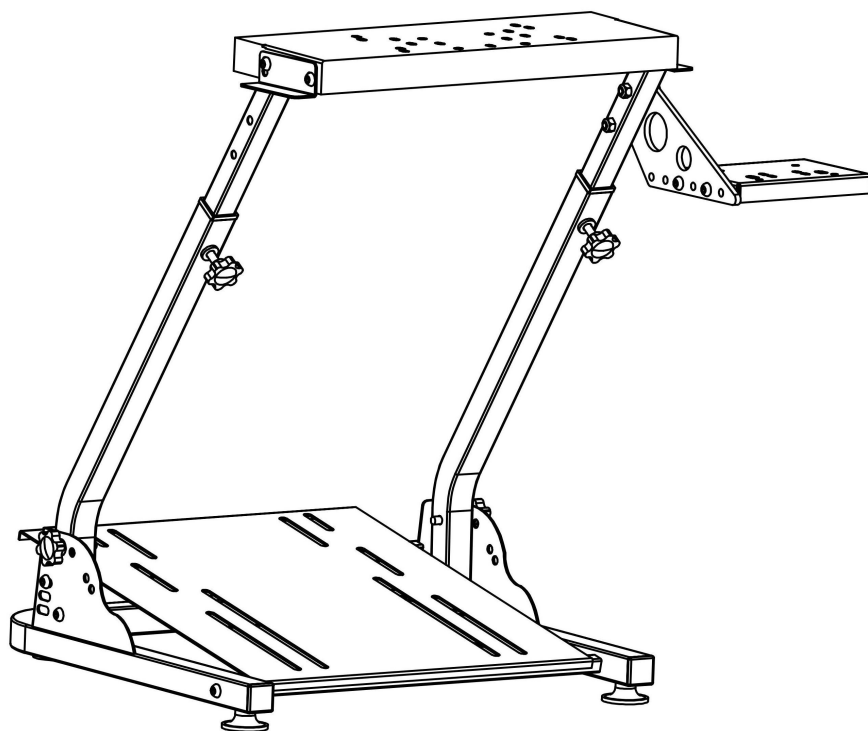

Folding steps of bracket

1. Unscrew the 2 knob M8*40 screws on the left and right below the bracket.
2. Fold the stand and store it against the wall.

