VEVOR

Upgrade · The Home Creator Way

ARTIFICIAL IVY FENCE

MODEL:JNF01201/JNF01202/JNF010/JNF009/ JNF008/JNF007/JNF013/JNF006/JNF011/JNF015

VEVOR Support Center

1	JNF01202		2	JNF01201	
3	JNF010		4	JNF009	
5	JNF008		6	JNF007	
7	JNF013		8	JNF006	
9	JNF011		10	JNF015	

MODEL:JNF01201/JNF01202/JNF010/JNF009/JNF008/JNF007/JNF013 /JNF006/JNF011/JNF015



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

This product is flammable. Keep away from open flames, candles, cigarettes, heaters, and other ignition sources.
This product contains small parts which may pose a choking hazard. Keep out of reach of infants and young children.
This product is not a toy. Do not allow children to play with or climb on it.

Place the product on a stable, firm surface to prevent tipping, which may cause personal injury or property damage.
This product is intended for indoor use or under eaves. Prolonged exposure to direct sunlight may cause fading or material degradation.
Clean gently with a soft cloth or duster. Do not wash with water or use chemical cleaners.
Avoid contact with sharp objects to prevent scratching or damaging the product surface.

1. Technical Parameters

Model	Product Size(inch)	Product Weight(kg)
JNF01202	39"x98"	1.25
JNF01201	39"x98"	1.45
JNF013	59"x98"	1.85
JNF011	96"x72"	2.66
JNF010	39"x158"	2.35
JNF009	39"x198"	2.95
JNF008	59"x98"	2.16
JNF007	59"x118"	2.55
JNF006	59"x158"	3.46
JNF015	96"x72"	2.26

2. Safety Precautions

WARNING:
Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL
Assembly Precautions

1.Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3.Keep the assembly area clean and well-lit.
4.Keep bystanders out of the area during assembly.
5.Do not assemble when tired or under the influence of alcohol, drugs or medication.
6.Product capabilities apply to correctly and completely assembled products only.


Use Precautions
1. Do not sit or stand on this item .
2. This product is not a toy. Therefore, do not allow children to play with this item .
3. Use as intended only.

3. Instructions for Use

Assembly(No tools required)
1.Observe the direction of the foliage
-Boxwood & Fem : Multi-directional
-ivy &Lavender. Follow the direction of the foliage.

2. Connect panels using the easy snap-to-lock system.


3. For simple and quick installation, from strips 2 panels wide by the desired height.

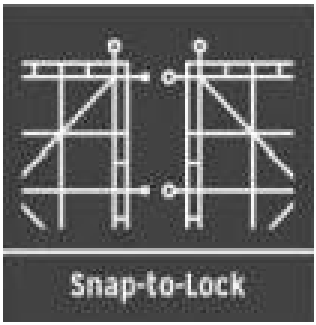

Chain Link, Wire Mesh & Wrought Iron

Tools: Green zip ties(Not Included)


1. Fasten the first panel or connected set or panels directly to the support.
2. Repeat progressing laterally (clip panel sections together before fastening to the support for a perfect fit.)

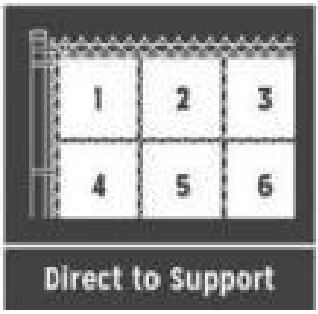

Drywall and Wood

Tools:1/2in.*1/2in. Crown 20 Gouge Staples & Stapler (Not Included)


1. Fasten the first panel or connected panels directly to the
2. top of the wall or service. Use additional staples on the
3. top panel in each column hung.
2. Place 2 Staples on the edges of each panel, making your
3. way down to the bottom panel.
4. Repeat progressing laterally (clip panel sections together
5. before fastening to the support for a perfect ft.)

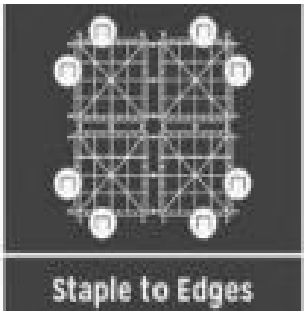

Concrete, Brick or Block

Tools: 3/ 16 in.*13/4 in. Washer Head Concrete Screw Anchors, Drill Bit & Drill (Not Included)

1. Hold a single panel in place at the top of the wall or surface. Then, using your drill and drill bit, drill one hole in the top left & suitable square holes found on the backing grid of the panel. Drill each hole approximately 1/4 inch deeper than the anchor screw being used.
2. Screw a washer head concrete anchor in each hole, securing the panel to the surface.
3. Repeat processing downward til a single column is complete ensuring the panels are securely fastened as you progress. 4. Repeat steps 1-3 until your installation is complete.

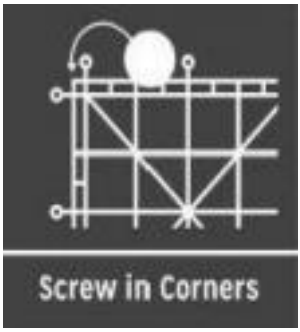

Metal/Aluminum
Tools: 3/4 in. Truss Head Self-Tapping Screws & Drill (Not Included)
1. Hold a single panel in place at the top of the wall or surface. Using your drill and 3/4 in self-tapping screws, place a screw in the top left & suitable square holes found on the backing grid of the panel.
2. Repeat processing downward til a single column is complete ensuring the panels are securely fastened as you progress.
3. Repeat steps 1 & 2 till your installation is complete.

