VEVOR

Upgrade · The Home Creator Way

Wall Chaser

Model: KC160/KC125/KC133

VEVOR Support Center

1	KC160		2	KC125 (EU)	
3	KC125 (US)		4	KC133	

VEVOR
Upgrade·The Home Creator Way

Wall Chaser

Model: KC160/KC125/KC133



<Picture Only For Reference >

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Sincerely thank you for choosing our products, you will get the company's comprehensive technical support and service guarantee.
Product Description: This tool is suitable for the cutting and forming of old fire brick, cement brick, light brick, concrete wall (ground) and the cutting of granite, marble, ceramic tile and other building materials.

PARAMETER

Model	Voltage Frequency	Rated Power (W)	Load power (W)	Max power (W)	Rated Current (A)	Load current (A)	Suggested circuit breaker (A)	Max rotation (r/min)	Saw blade specification	Most cutting capacity (D*W)
KC133	AC120V 60Hz	1560	2600	3300	13	20	20	6800	⌀ 133*⌀ 20*4 mm	41*42 mm
	AC230V 50Hz	2000	3800	4800	9	18	20	6500		
KC160	AC120V 60Hz	1800	2700	3300	15	25	30	6800	⌀ 160*⌀ 22.2*2.4 mm	50*40mm
	AC230V 50Hz	2500	3200	5000	11	14	20	5460		
KC125	AC120V 60Hz	1560	2900	3300	13	25	30	6800	⌀ 125*⌀ 20*2.5 mm	34*40mm
	AC230V 50Hz	2000	3000	5000	9	20	20	6750		

SYMBOL INSTRUCTIONS

Warning symbol means any failure to follow the operating procedures in this manual will result in personal injury or damage to the machine.

Le symbole d'avertissement signifie que tout écart par rapport aux procédures d'opération décrites dans ce manuel entraînera des blessures personnelles ou des dommages à la machine.

Prevent electric shock symbol, means that any operation not in accordance with the operating procedures in this manual, will cause electric shock damage.

Symbole de prévention de choc électrique, signifiant que toute opération non conforme aux procédures d'utilisation indiquées dans ce manuel pourra causer des dommages par choc électrique.

Fire symbol means any failure to follow the operating instructions in this manual will result in fire hazard.

Le symbole de feu signifie que tout échec à suivre les instructions d'utilisation contenues dans ce manuel entraînera un risque d'incendie.



The eye protection symbol may be modified by adding other personal protective equipment such as ear protection, dust mask, etc.

Le symbole de protection des yeux peut être modifié en ajoutant d'autres équipements de protection individuelle tels que la protection auditive, le masque anti-poussière, etc.

WARNING

To reduce the risk of injury, use only accessories rated at least equal to the maximum speed marked on the tool.

The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

"This equipment may generate noise levels exceeding 85 dB(A) during operation. Hearing protection must be worn by the operator.

Prolonged use of this equipment may lead to hand-arm vibration syndrome. Take regular breaks and ensure proper handling.

High-pressure jets can cause serious injury. Do not direct the spray gun at people, animals, live electrical equipment, or the appliance itself.

Keep children and pets away from the work area during operation.

Do not use this equipment in confined spaces or flammable/explosive environments.

Gasoline engines produce carbon monoxide, a deadly odorless toxic gas.

Do not operate the equipment indoors or in poorly ventilated areas.
The engine and muffler surfaces become extremely hot. Do not touch during operation or immediately after shutdown.
Gasoline is highly flammable. Stop the engine and keep away from ignition sources before refueling. Refuel only outdoors in well-ventilated areas.
Dispose of waste fuel in accordance with local environmental regulations. Do not pour into drains or the environment.
AVERTISSEMENT
Pour réduire le risque de blessure, utilisez uniquement des accessoires dont la vitesse maximale est au moins égale à celle indiquée sur l'outil.
Le produit est conforme aux normes et réglementations pertinentes. L'installation de cet appareil doit respecter toutes les réglementations applicables et ne doit être utilisée que dans des zones bien ventilées. Veuillez lire le manuel d'utilisation avant d'installer et d'utiliser cet équipement.
Cet équipement peut générer des niveaux de bruit dépassant 85 dB(A) pendant son fonctionnement. L'opérateur doit porter un protège-oreilles.
L'utilisation prolongée de cet équipement peut entraîner un syndrome de vibration main-bras. Prenez des pauses régulières et assurez-vous d'une manipulation correcte.
Les jets à haute pression peuvent causer des blessures graves. Ne dirigez pas le pistolet pulvérisateur vers des personnes, des animaux, des équipements électriques sous tension ou l'appareil lui-même.
Maintenez les enfants et les animaux de compagnie éloignés de la zone de travail pendant l'opération.
Ne pas utiliser cet équipement dans des espaces confinés ou des environnements inflammables/explosifs.
Les moteurs à essence produisent du monoxyde de carbone, un gaz toxique inodore et mortel. Ne faites pas fonctionner l'équipement à l'intérieur ou dans des zones mal ventilées.
Les surfaces du moteur et du silencieux deviennent extrêmement chaudes. Ne les touchez pas pendant le fonctionnement ou immédiatement après l'arrêt.

L'essence est hautement inflammable. Arrêtez le moteur et éloignez-vous des sources d'ignition avant de faire le plein. Ne faites le plein que dehors, dans des zones bien ventilées.
Éliminez les combustibles usagés conformément aux réglementations environnementales locales. Ne les versez pas dans les canalisations ou l'environnement.

General Safety Rules

Dust generated from cutting concrete, masonry, and other materials may contain crystalline silica. Prolonged inhalation can cause serious respiratory diseases such as silicosis. Use dust extraction equipment and wear respiratory protection.
When using the wet cutting function, prevent water from entering the motor.
Operators must wear insulated gloves and shoes to avoid electric shock.
Use only reinforced resin or diamond cut-off wheels with a rated speed at least equal to the maximum speed of this tool. Do not use damaged wheels.
Kickback may occur during operation, leading to loss of control and severe injury. Always hold the tool firmly with both hands and position yourself safely.
Operators must wear safety goggles, dust mask, hearing protection, non-slip gloves, and safety shoes.
This product is not a toy. Children must not operate or approach the machine. Store it out of reach of children.
If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazard.
This equipment must be connected to the power supply via a leakage protection plug. If the plug is damaged, replace it immediately.
WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference. The term "power tool" in all of the warnings listed below refers to your

mains-operated (corded) power tool or battery-operated (cordless) power tool.

Règles générales de sécurité

La poussière générée par le découpage du béton, de la maçonnerie et d'autres matériaux peut contenir de la silice cristalline. Une inhalation prolongée peut causer de graves maladies respiratoires telles que la silicose. Utilisez un équipement d'extraction de poussière et portez une protection respiratoire.

Lors de l'utilisation de la fonction de coupe humide, empêchez l'eau d'entrer dans le moteur. Les opérateurs doivent porter des gants et des chaussures isolants pour éviter les chocs électriques.

Utilisez uniquement des disques en résine renforcée ou des disques de coupe diamantés dont la vitesse nominale est au moins égale à la vitesse maximale de cet outil. Ne pas utiliser de disques endommagés.

Un retour de force peut se produire pendant l'utilisation, entraînant une perte de contrôle et des blessures graves. Tenez toujours l'outil fermement avec les deux mains et placez-vous en position de sécurité.

Les opérateurs doivent porter des lunettes de protection, un masque anti-poussière, un protège-oreilles, des gants antidérapants et des chaussures de sécurité.

Ce produit n'est pas un jouet. Les enfants ne doivent pas manipuler ou s'approcher de la machine. Conservez-le hors de portée des enfants.

Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, son agent de service ou des personnes similaires qualifiées pour éviter tout danger.

Cet équipement doit être branché à l'alimentation via une prise de protection contre les fuites. Si la prise est endommagée, remplacez-la immédiatement.

AVERTISSEMENT ! Lisez toutes les précautions de sécurité et toutes les instructions. Le non-respect des avertissements et des instructions peut entraîner un choc électrique, un incendie et/ou des blessures graves.

Conservez les avertissements et les instructions pour référence future. Le terme "outil électrique" dans tous les avertissements suivants fait référence

à votre outil électrique alimenté par le secteur (câblé) ou à votre outil électrique à batterie (sans fil).

1) Work area safety

a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.

b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2) Electrical safety

a) Power tool plugs must match the outlet. Never modify the plug in any way.

Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply. Use of an GFCI reduces the risk of electric shock.

3) Personal safety

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

4) Power tool use and care

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
Special requirement for cutting off tool.

6) Cut-off machine safety warnings

a) The guard provided with the tool must be securely attached to the power tool and positioned for maximum safety, so the least amount of saw blade is exposed towards the operator.
Position yourself and bystanders away from the plane of the rotating saw blade.
The guard helps to protect operator from broken wheel fragments and accidental contact with saw blade.
b) Use only bonded reinforced or diamond cut-off saw blades for your power tool. Just because an accessory can be attached to your power tool,

it does not assure safe operation.
c) The rated speed of the accessory must be at least equal to the maximum speed
marked on the power tool. Accessories running faster than their rated speed can break and fly apart.
d) Saw blades must be used only for recommended applications. For example: do not grind with the side of cut-off saw blade. Abrasive cut-off wheels are intended for peripheral grinding,side forces applied to these wheels may cause them to shatter.
e) Always use undamaged saw blade flanges that are of correct diameter for your selected saw blade. Proper saw blade flanges support the saw blade thus reducing the possibility of saw blade breakage.
f) Do not use worn down reinforced wheels from larger power tools. Saw blades intended for a larger power tool are not suitable for the higher speed of a smaller tool and may burst.
NOTE The above warning does not apply for tools only designated to be used with diamond wheels.
g) The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool. Incorrectly sized accessories cannot be adequately guarded or controlled.
h) The arbour size of saw blades and flanges must properly fit the spindle of the power tool.
Saw blades and flanges with arbour holes that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.
i) Do not use damaged wheels. Before each use, inspect the saw blades for chips and cracks. If power tool or saw blade is dropped, inspect for damage or install an undamaged saw blade. After inspecting and installing the saw blade, position yourself and bystanders away from the plane of the rotating saw blade and run the power tool at maximum no load speed for one minute. Damaged saw blades will normally break apart during this test time.
j) Wear personal protective equipment. Depending on application, use face

shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and shop apron capable of stopping small abrasive or work piece fragments.
The eye protection must be capable of stopping flying debris generated by various operations.
The dust mask or respirator must be capable of filtration particles generated by your operation.
Prolonged exposure to high intensity noise may cause hearing loss.
k) Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment.
Fragments of work piece or of a broken wheel may fly away and cause injury beyond immediate area of operation.
l) Hold the power tool by insulated gripping surfaces only, when performing an operation where the cutting accessory may contact hidden wiring or its own cord. Cutting accessory contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.
m) Position the cord clear of the spinning accessory. If you lose control, the cord may be cut or snagged and your hand or arm may be pulled into the spinning saw blade.
n) Never lay the power tool down until the accessory has come to a complete stop. The spinning wheel may grab the surface and pull the power tool out of your control.
o) Do not run the power tool while carrying it at your side. Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.
p) Regularly clean the power tool’s air vents. The motor’s fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
q) Do not operate the power tool near the flammable materials. Sparks could ignite these materials.
r) Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in electrocution or shock.

FURTHER SAFETY INSTRUCTIONS FOR ABRASIVE

CUTTING-OFF OPERATIONS

Kickback and related warnings

Kickback is a sudden reaction to a pinched or snagged rotating saw blade. Pinching or snagging causes rapid stalling of the rotating wheel which in turn causes the uncontrolled power tool to be forced in the direction opposite of the saw blade's rotation at the point of the binding.

For example, if an abrasive saw blade is snagged or pinched by the work piece, the edge of the wheel that is entering into the pinch point can dig into the surface of the material causing the saw blade to climb out or kick out. The saw blade may either jump toward or away from the operator, depending on direction of the saw blade's movement at the point of pinching. Abrasive saw blades may also break under these conditions.

Kickback is the result of power tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

a) Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces. Always use auxiliary handle, if provided, for maximum control over kickback or torque reaction during start-up. The operator can control torque reactions or kickback forces, if proper precautions are taken.
b) Never place your hand near the rotating accessory. Accessory may kickback over your hand.
c) Do not position your body in line with the rotating wheel. Kickback will propel the tool in direction opposite to the wheel's movement at the point of snagging.
d) Use special care when working corners, sharp edges etc. Avoid bouncing and

snagging the accessory. Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.
e) Do not attach a saw chain, woodcarving blade, segmented diamond wheel with a peripheral gap greater than 10 mm or toothed saw blade. Such blades create frequent kickback and loss of control.
f) Do not ″jam″ the wheel or apply excessive pressure. Do not attempt to make an
excessive depth of cut. Over stressing the wheel increases the loading and susceptibility to twisting or binding of the wheel in the cut and the possibility of kickback or saw blade breakage.
g) When wheel is binding or when interrupting a cut for any reason, switch off the power tool and hold the power tool motionless until the wheel comes to a complete stop. Never attempt to remove the wheel from the cut while the wheel is in motion otherwise kickback may occur. Investigate and take corrective action to eliminate the cause of saw blade binding.
h) Do not restart the cutting operation in the work-piece. Let the saw blade reach full speed and carefully re-enter the cut. The saw blade may bind, walk up or kickback if the power tool is restarted in the work-piece.
i) Support panels or any oversized work-piece to minimize the risk of saw blade pinching and kickback. Large work-pieces tend to sag under their own weight. Supports must be placed under the work-piece near the line of cut and near the edge of the work-piece on both sides of the saw blade.
j) Use extra caution when making a “pocket cut” into existing walls or other blind areas.
The protruding wheel may cut gas or water pipes, electrical wiring or objects that can cause kickback.

Part list


No.	Name	Picture	KC133	KC160	KC125

1	Press plate		9 Total (8pcs already assembled,1pcs accessory)		
2	φ10×5000±50mm water pipe		1	1	1
3	Socket wrench		1	1	1
4	Hexagonal wrench M8, M4, M3 each		1	1	1
5	Open-end wrench		1	1	1
6	Instruction manual		1	1	1
7	1/2" female thread to 3/4" male thread reducer connector		1	1	1
8	3/4" female thread to 5/8" male quick-connect		1	1	1

	connector				
9	5/8" female quick-connect connector to φ10mm hose quick-connect		3	3	3
10	Two-end 5/8" male quick-connect switch		1	1	1
11	Water pipe clamp		1	1	1
12	Fender		/	/	1
13	Spacer		/	/	1

NAME OF THE COMPONENT

1 switch;	5 front handle	9 bearing
2 handle cover	6 Aluminum head shell	10 base plate
3 rotary button	7 movable shield	11 faucet
4 chassis	8 saw blade	12 brush cover

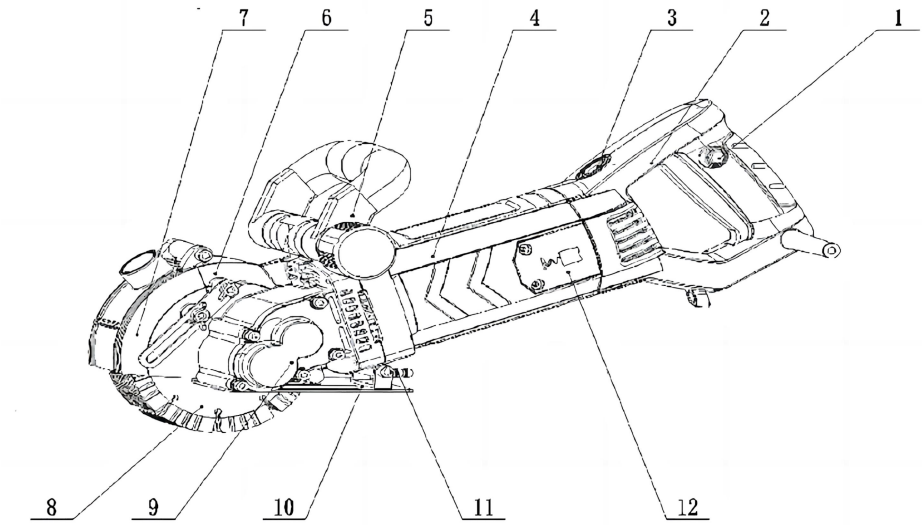

SAFE OPERATION INSTRUCTIONS

Working environment

1)The work area should be clean, light and well-ventilated.

2) Do not use this machine in places with inflammable and explosive materials.

3) When the machine is working, be sure to keep away from children, bystanders and animals.

4) Do not use the power cord to pull the machine. Otherwise, it may be damaged and cannot.

Work properly.

1) The machine uses the leakage protection plug, please use the plug as the warning label requirements

2) The socket type of the power supply should be matched with the plug provided by this machine.It is not allowed to make any change to the plug structure, and use this machine under the condition of power supply with grounding wire.

3) Do not use this machine outdoors in the rainy day.

4) Do not use the power cord to pull the machine, so as to avoid the machine is not good and cannot work properly
5) We should avoid the power cord contact with hot, wet, sharp class material and moving parts.
6) When the machine is used outdoors, please use the power cord

extending 4 ㎟ above and outdoor, and keep the connection reliable.

7) After turning on the machine, avoid any part of the body touching the wall surface.

PERSONAL SAFETY



1) When operating the machine, always be on guard and never use the machine under conditions of fatigue, alcohol abuse, drugs or medication to avoid accidents caused by inattention during operation.
2) When operating, be sure to use protective equipment, such as dust masks, goggles, earmuffs and so on. To avoid splashing sand and dust to contuse eyes and face, or hearing loss due to strong noise.
3) To avoid starting accidentally, make sure the machine's switch is off before turning on the power. Ensure the appropriate connection to the power Do not put your finger on the switch button to prevent accidents.
4) Before starting the machine, check that the adjusting lock wrench and tool have been removed from the machine.
5) When operating, the body should not stretch forward too much, please always keep your body balanced.
6) When operating, please do not wear loose clothing, do not wear jewelry, users with longer hair should discard hair into the protective caps, so as not to touch the moving parts during operation,causing accidents.

THE USE OF THE MACHINE AND PRECAUTIONS

1)Before using, check the safety of the power supply. Poor socket and power cord can cause poor contact. In severe cases, it may cause electric shock, fire and other accidents.

2) During the slotting operation, keep the machine straight and advance uniformly.
3) Operators should wear insulated gloves and insulated shoes when using water-cut operation,
so as to avoid electric shock accidents.
4)Draw the guide wire on the work surface to improve the efficiency and accuracy of slotting.
5) The machine is high-power with heavier work load, so please ensure the interconnecting components solid and reliable before using.
6) Waterless cutting operations should be equipped with dust removal equipment, so as to ensure a good working environment
7) When turning the machine, you should open the cover while paying special attention to the protection of flying sands. Slotting work without protection is very dangerous. In serious cases, it will cause personal injury.
8) When using the water connectors for cutting, be careful not to let water flow into the machine.

OPERATION INSTRUCTIONS
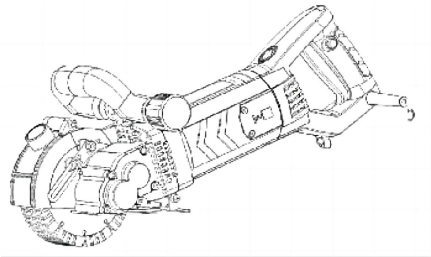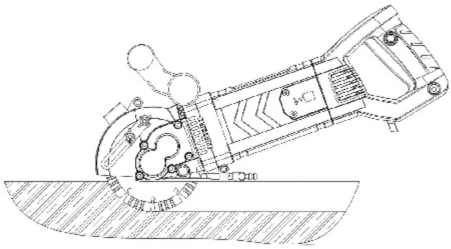
<table>
<tr><td colspan="2">A
Facing the slot when operation</td></tr>
<tr><td>Side handle forward

The state of a cover when the cover is closed</td><td>
A plane wall for cutting (slotting) when the cover is closed</td></tr>
</table>


B

When the corner slotted operation


Unscrew the screws

Flipping shield

Side handle backdrop

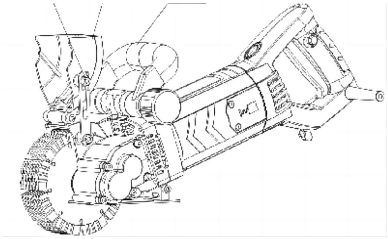


The state of the overturn.

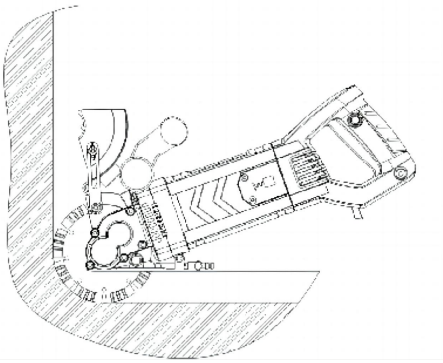


When the cover is turned over, it is used for cutting (slotting) wall corner.

THE USE OF WATER CONNECTORS

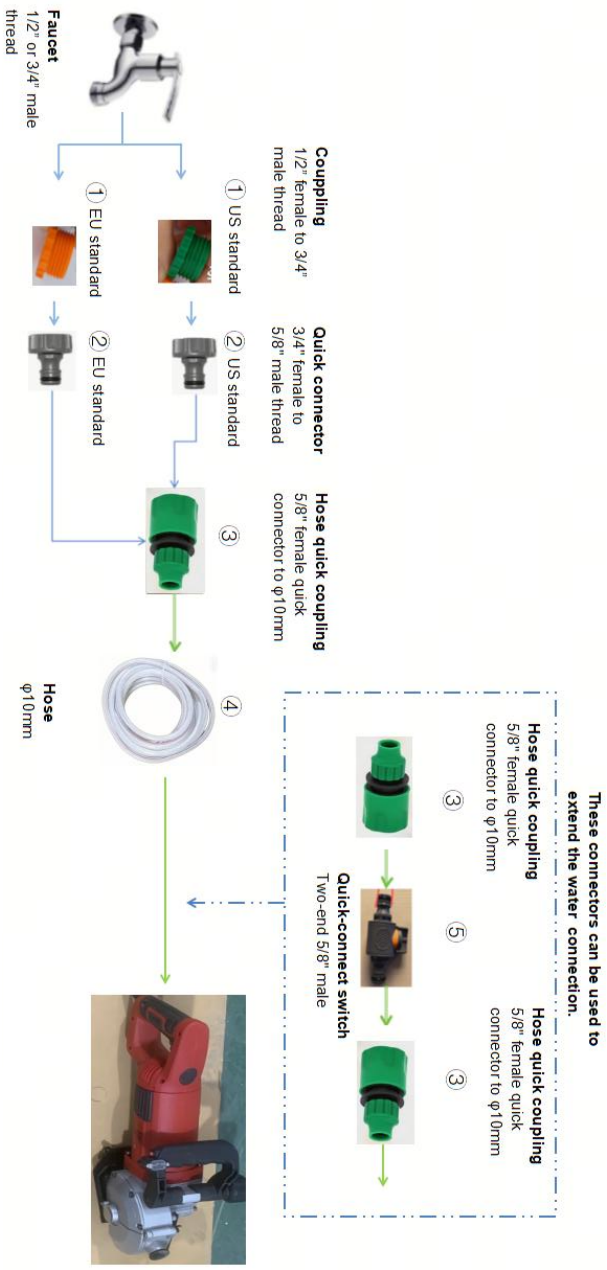


Note: When the faucet is 3/4” thread, item ① is not needed.


REPLACE THE CUTTING PIECE

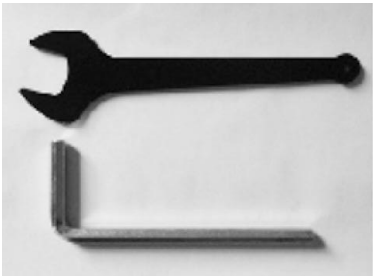

1. Disassembly tools

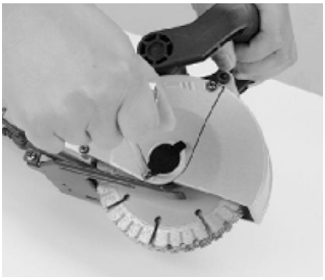


2. Open the cover sheet

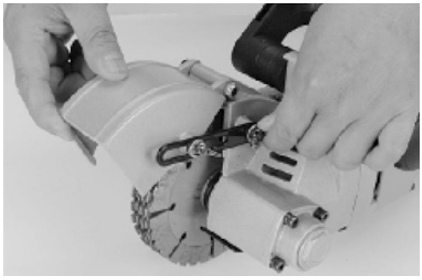

3.Loosen the screw and flip the activity shield




4.Unfold counterclockwise

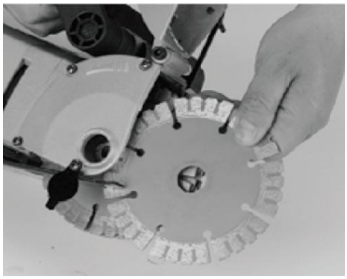

5. Remove the pressure plate and saw blade



6.Remove the spacer between the saw blades

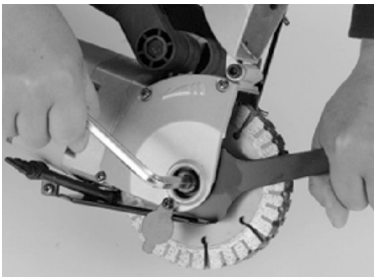 7. Remove the order of reverse installation, to complete the replacement. (Lock clockwise)	

THE MACHINE'S MAINTENANCE AND REPAIR


Before any maintenance and care of this machine, you must disconnect the power, unplug the plug!

1) The machine is manufactured according to safety standards and should not be disassembled if the machine fails to work.

2) When repairing, the accessory must be the spare parts provided by our company, otherwise the machine will be damaged or hurt.

3) After each use of the machine, be sure to clean the gravel and dust on the machine and keep all operating parts such as switches, plugs and handles clean and keep it out of the reach of children,keep it dry. Avoid rust on the machine can not work or accident.

MACHINE COMPONENTS DIAGRAM

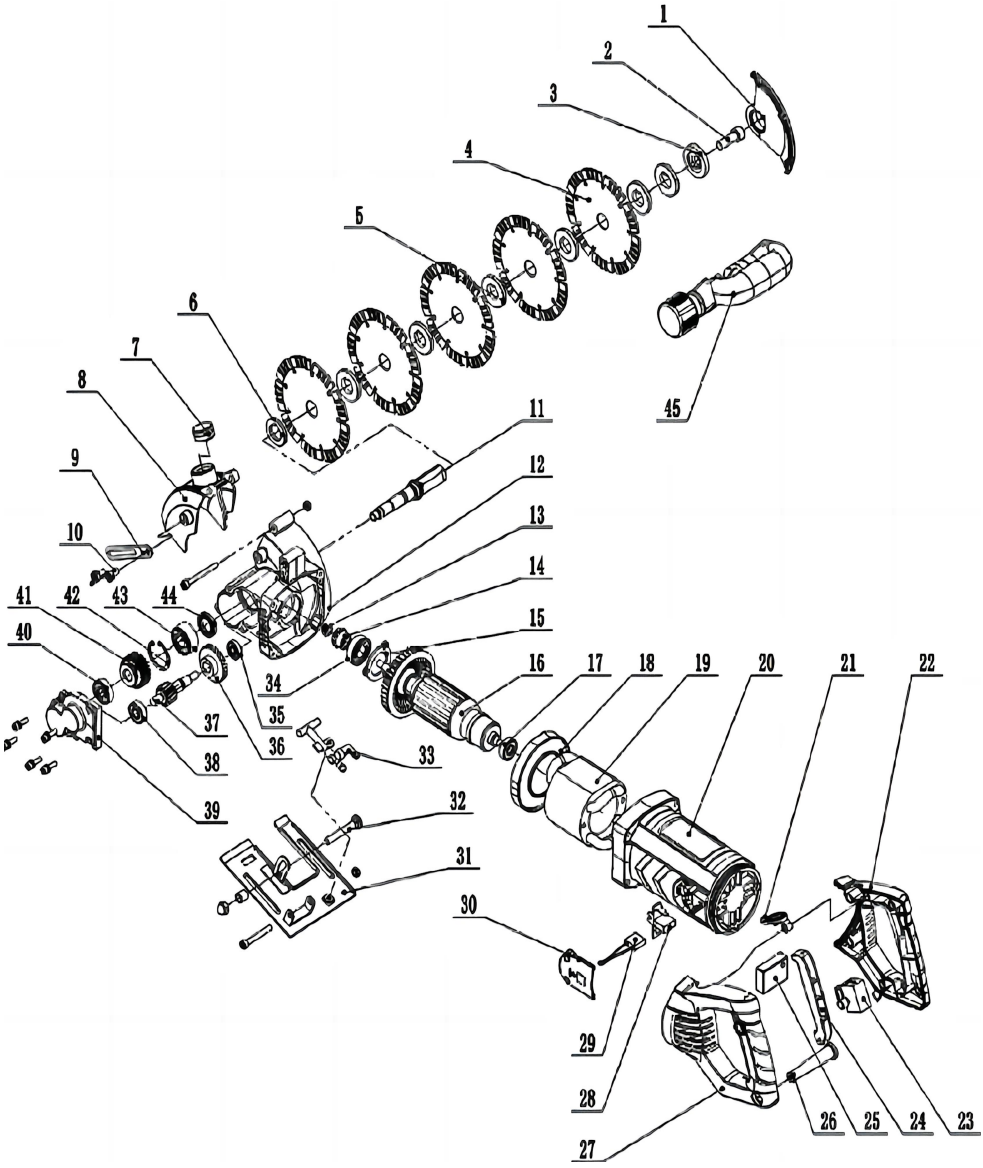

No.	Description	Q'ty	No.	Description	Q'ty
1	Side cover	1	24	Switch button	1
2	Internal six angle screws M10X25	1	25	soft start	1
3	Upper pressure plate	1	26	Wire sheath	1
4	Saw blade	5	27	Left handle	1
5	Shim	7	28	Carbon brush frame	2
6	Lower pressure plate	1	29	Carbon brush	2
7	Rubber plug	1	30	Brush holder cover	2
8	Protection cover	1	31	floor	1
9	Fast limit	1	32	Carriage screw	1
10	Butterfly screw	2	33	Water tap	1
11	output shaft	1	34	Bearing 6202	1
12	Head	1	35	Bearing 608	1
13	Looser nut M8	1	36	Large parachute tooth	1
14	Small beach tooth	1	37	Gear shaft	1
15	press plate	1	38	Bearing 6000	1
16	rotor	1	39	Bearing seat	1
17	Bearing 629	1	40	Bearing 6200	1
18	Guide ring	1	41	Gear	1
19	Stator	1	42	Hole gear ring	1
20	Shell	1	43	Bearing 3202	1
21	Rotary button	1	44	Skeleton oil seal	1
22	Right handle	1	45	Side handle assembly	1

23	switch	1			

CORRECT DISPOSAL

This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.

Manufacturer: WUYI BOHAI ELECTRIC TOOLS CO., LTD
Address: Che MenTou,Tongqin Industrial Park, Jinhua, Zhejiang 321200 China
E-mail: support@vevor.com



