



Affordable. Reliable. Home Improvement.

ENDOSCOPE

MODEL:SM7

Technical Support and E-Warranty Certificate
www.vevor.com/support

VEVOR

Affordable. Reliable. Home Improvement.

ENDOSCOPE

MODEL:SM7



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	CORRECT DISPOSAL This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.
	FCC Information: CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2) This product must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product. Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be


	determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.
--	--

SAFETY INSTRUCTIONS

WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Product Details

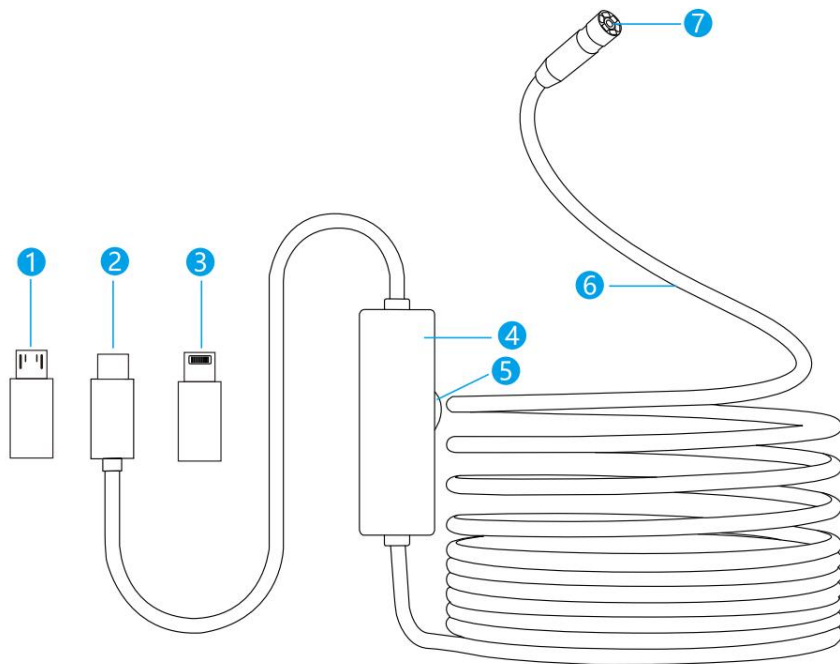

1. Type-c to Micro-USB

2. Type-c

3. Type-c to Lightning

4. Control box

5. Dimming gear: Adjust the brightness of the camera LEDs lighting

6. Cable

7. HD Camera

APP Download

Please use the built-in browser on your phone to scan the QR code below to install the app, Android>Android (google)>to download,iOS>iOS App Store>to download




Useeplus



How to use

Insert the endoscope into your smartphones or Pad, paying attention to the interface type of the device. Please refer to the following Schematic diagram.

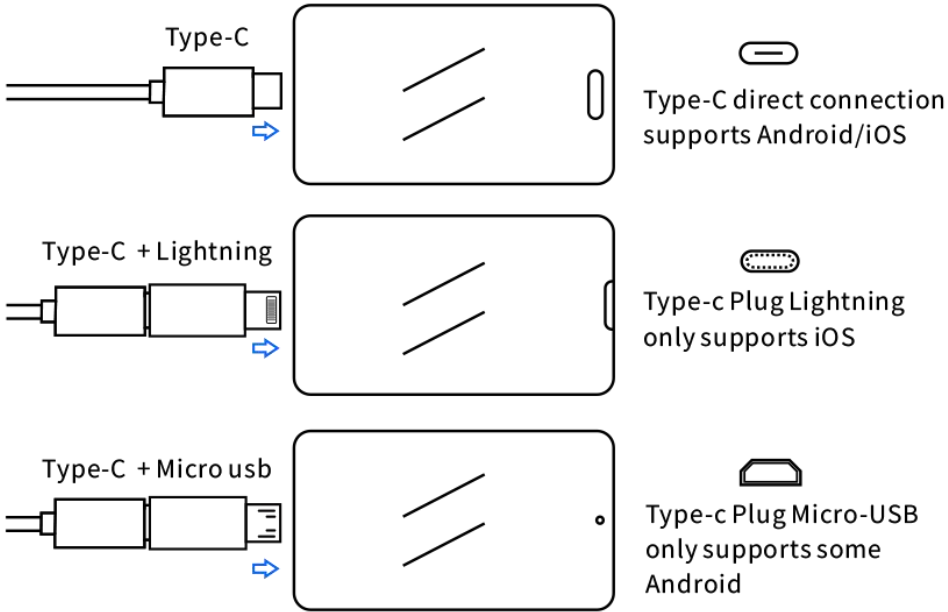


Run the APP

1
Run UseePlus




2
After the image appears, it can be used

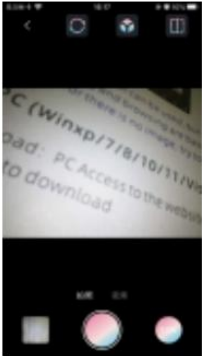

Note: Taking photos/videos can be done within the app

Accessory installation

There are many models of this product, subject to actual receipt

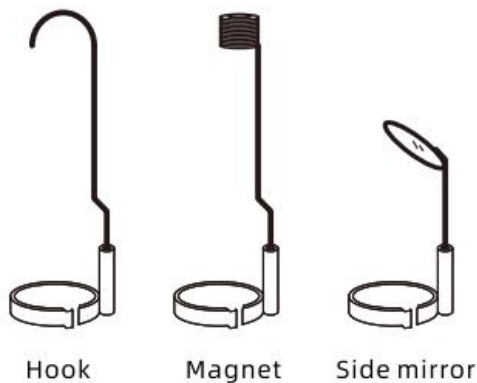

Installation for snap Fit Accessories

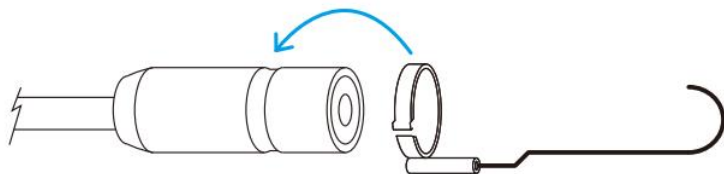


Figure1

Step 1: Align the accessory with the slot position of the Camera




Figure2




Figure3

Step2: Close the clip of the accessory(see Figure 2-3)

Product parameters

Model	SM7		
Camera diameter	Φ8.5mm	Φ8.5mm	Φ8.5mm
Photo/video	Support	Support	Support
Light source	8 LED adjustable brightness	8 LED adjustable brightness	8 LED adjustable brightness
Focal length	2-7cm	2-7cm	2-7cm
View angle	70°	70°	70°
USB interface	Lightning type-c Micro	Lightning type-c Micro	Lightning type-c Micro
Support os	Android 6.0+, iOS9.0+	Android 6.0+, iOS9.0+	Android 6.0+, iOS9.0+
cable length	15m	5m	3m

FAQ

1. Images are blurry
 - A. Adjust the focus range
 - B. Wipe the lens with a clean cloth
 - C. Adjust the camera light brightness
 - D. If the camera is flooded, dry it in a ventilated place before use
- For other questions, please contact the supplier

Warm reminder

1. It is prohibited to use as a medical product

2. here are many models of this product,the spec ificsubject to the physical receipt,including but not limited to Packaging, color,appearance, etc., but the direction of use is basically the same
3. Please keep this product out of reach of children to avoid unnecessary use Want damage and property damage

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP	YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX
EC	REP	E-CrossStu GmbH Mainzer Landstr.69, 60329 Frankfurt am Main.



Technical Support and E-Warranty Certificate
www.vevor.com/support