



Upgrade · The Home Creator Way

## MESSAGE CHAIR

MODEL: BH-8318

1. Leg Installation Video Commentary:  
[https://www.youtube.com/playlist?list=PL0BwQM2Ykbl5ZPkGsTeGnr1fB0kUs\\_bK](https://www.youtube.com/playlist?list=PL0BwQM2Ykbl5ZPkGsTeGnr1fB0kUs_bK)
2. Knob button operation and usage video explanation:  
[https://www.youtube.com/playlist?list=PL0BwQM2Ykbl6vcx5LXjv7GhUS\\_G93\\_ooJ](https://www.youtube.com/playlist?list=PL0BwQM2Ykbl6vcx5LXjv7GhUS_G93_ooJ)
3. Bluetooth Operation and Usage Instructions:  
[https://www.youtube.com/playlist?list=PL0BwQM2Ykbl4spQ\\_ObsN2Koy-HMjPyQvz](https://www.youtube.com/playlist?list=PL0BwQM2Ykbl4spQ_ObsN2Koy-HMjPyQvz)
4. Zero Gravity Operation Usage Video:  
<https://www.youtube.com/playlist?list=PL0BwQM2Ykbl5uHcSXbZAVbfe2XJXFUISS>
5. Thai stretching operation video explanation:  
<https://www.youtube.com/playlist?list=PL0BwQM2Ykbl4-obk-s-ovGRkjMa6XDcew>
6. Offline Voice Operation Video Explanation:  
<https://www.youtube.com/playlist?list=PL0BwQM2Ykbl6QZYrMCrNWrr3zON37Yi8v>
7. Airbag and speed adjustment explanation:  
<https://www.youtube.com/playlist?list=PL0BwQM2Ykbl7JeZnkN66fC6s9Ybi3LXFw>
8. Manual Control Video Operation Explanation:  
<https://www.youtube.com/playlist?list=PL0BwQM2Ykbl7dN7sz0LhWQtMUAYkytALo>



VEVOR Support Center



BH-6208 (US)



BH-6208 (EU)

**MODEL: BH-8318**



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

|                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                       | Warning-To reduce the risk of injury, user must read instructions manual carefully.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                                                      | Compliance is a CE security certification.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <br> | <p><b>CORRECT DISPOSAL</b></p> <p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                                                                      | <b>Warning-</b> For Indoor Use Only                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                                                    | <p><b>FCC Information:</b></p> <p><b>CAUTION:</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> <li>1) This product may cause harmful interference.</li> <li>2) This product must accept any interference received, including interference that may cause undesired operation.</li> </ol> <p><b>WARNING:</b> Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</p> <p><b>Note:</b> This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.</p> <p>This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the</p> |

|  |                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.</p> |
|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

## SAFETY INSTRUCTIONS

### Read all warnings carefully before using

1. Read all warnings carefully before using.
2. Precautions and warnings listed below will help to ensure proper operation of this appliance.
3. The classes of accidents caused by incorrect use are classified into WARNING and CAUTION.
4. Read all WARNINGS and CAUTIONS below and follow all instructions within this manual.

| Symbol                                                                                       | Meaning                                                            |
|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| <br>WARNING | Improper operation may cause injury to users.                      |
| <br>CAUTION | Improper operation may cause injury to users or damage to product. |
|             | Prohibited                                                         |
|             | Do Not Disassemble                                                 |

Not suitable for below persons. We recommend that those with any of the following conditions should consult your physician before using.



#### **WARNING**

- ◆ Those with pacemakers or electronic devices implanted in their body.
- ◆ Those undergoing treatment, especially those who are not feeling well.
- ◆ Those with malignant tumors, malignant abscesses, hypertension or heart disease(should to be supervised).
- ◆ Women who are pregnant or menstruating.
- ◆ Those with osteoporosis, distorted joints, dysfunction or recent fracture.
- ◆ Those with serious or injured skin conditions.
- ◆ Those with bad fever.
- ◆ This Massager is equipped with heat function, persons with reduced sensory of heat should pay attention to it.(should to be supervised)
- ◆ Close supervision is necessary when this product is used by, on, or near children, invalids, or disabled persons.

#### **Control Panel Precautions**



#### **CAUTION**

- ◆ Don't operate the controller with wet hands or pull the controller wire by force.
- ◆ Don't spill water or other liquid into the controller to avoid fault.
- ◆ Don't lay heavy items on the controller.

#### **Cautions regarding the power connectors and power cord**



#### **CAUTION**

- ◆ Verify that the power voltage stated on the rating label corresponds to your local electricity supply.
- ◆ Do not use hand to unplug the power cord to avoid electric shock.
- ◆ Do not drag the cord, reach to the front plastic end to unplug it.
- ◆ Do not squeeze the AC Cord by the appliance or other heavy objects.
- ◆ Do not damage, overbend, pull hard or twist the power cord.
- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

## Best Circumstances



### CAUTION

- ◆ Do not use this appliance where temperature is over 40°C.
- ◆ Do not use this appliance in moist or dusty environment.
- ◆ Unplug from outlet during thunder or lightning storms.
- ◆ Do not use outdoors.
- ◆ Please place the product on the flat level floor.
- ◆ Do not store near heat or open flame.

## Best practices for safe use



### CAUTION

- ◆ Only for users weighs below 120kg.
- ◆ Do not use other therapeutic device together with this product.
- ◆ Use this product only for its intended use as described in this manual.
- ◆ Appliance should only be used by one person, do not use by two or more persons at the same time to avoid damage to the product.
- ◆ Do not use the product after meal, it may cause discomfort.
- ◆ Remove the accessories from the arms and empty the pockets while using the massage services.
- ◆ Check the upholstery under the cushions and other spots, if any damages are present, do not use it and refer to a qualified service professional for servicing.
- ◆ If you feel any abnormal discomfort during the operation of this product, stop use immediately.
- ◆ Use the appliance for 20 minutes each time is highly recommended.
- ◆ Make sure there is no obstacles behind the chair and there is enough clearance before adjusting the backrest or footrest angle.
- ◆ Make sure no other excessive load pressed on the backrest or footrest, keep children, pets or any other barrier away from the unit reclining backrest /extending footrest to prevent any accidental injury.
- ◆ Do not sit on the appliance to avoid injury to the user or damage to the appliance.
- ◆ Do not drag or push the chair or roll on its casters on wood floor or carpet to avoid damage. Only for users weighs below 120kg.

- ◆ Do not use other therapeutic device together with this product.
- ◆ Use this product only for its intended use as described in this manual.
- ◆ Appliance should only be used by one person, do not use by two or more persons at the same time to avoid damage to the product.
- ◆ Do not use the product after meal, it may cause discomfort.
- ◆ Remove the accessories from the arms and empty the pockets while using the massage services.
- ◆ Check the upholstery under the cushions and other spots, if any damages are present, do not use it and refer to a qualified service professional for servicing.
- ◆ If you feel any abnormal discomfort during the operation of this product, stop use immediately.
- ◆ Use the appliance for 20 minutes each time is highly recommended.
- ◆ Make sure there is no obstacles behind the chair and there is enough clearance before adjusting the backrest or footrest angle.
- ◆ Make sure no other excessive load pressed on the backrest or footrest, keep children, pets or any other barrier away from the unit reclining backrest /extending footrest to prevent any accidental injury.
- ◆ Do not sit on the appliance to avoid injury to the user or damage to the appliance.
- ◆ Do not drag or push the chair or roll on its casters on wood floor or carpet to avoid damage.

## **PROHIBITED**

- ◆ Never operate this product if it has damaged/ exposed parts or power leakage.
- ◆ Do not stand on or stack heavy objects on the footrest.
- ◆ Children should be supervised to ensure that they do not play with the massage chair.
- ◆ Do not fall into sleep while the product is operating ·
- ◆ Avoid using the product under the influence of alcohol ·
- ◆ Do not put hands or foreign objects in the openings of the appliance to avoid injury to the user or damage to the appliance.
- ◆ If there is any smoke or unusual smell during operation, stop using immediately.

## **DO NOT DISASSEMBLE**

- ◆ Do not disassemble this product to avoid failure.
- ◆ Do not attempt to repair or dismantle the appliance without permission. Please contact authorized dealer or service agent.

## **UNPLUG POWER CORD**

- ◆ Pull out the power cord from the power strips before maintenance.
- ◆ Never plugin or pullout power cord with wet hand to avoid shock or injury.
- ◆ Pullout the power cord from the power strips after use.
- ◆ Unplug from outlet when the power supply is cut.


## **CAUTION**

- ◆ Do not cover the product with blankets to avoid accidents due to overheat.
- ◆ The plug should match with the socket outlet. Do NOT use a power strip to avoid electric shock, short circuit or fire.
- ◆ Do NOT use this product in areas of high concentrations of volatile compounds to avoid fire or damage to the product.
- ◆ Do not use solvents rubbing alcohol to clean your product; Do not spray insecticides into the product.
- ◆ Paralyzed people cannot use this product to avoid physical discomfort or injury
- ◆ Do NOT coil the power cable to avoid damaging, fire or short-circuit.
- ◆ Users can't be naked while using the massage chair.

- ◆ Do NOT sit on the footrest or arrest to avoid accident.
- ◆ Do NOT use this product near heat, open flame or on heating floor.
- ◆ No smoking in the massage chair to avoid fire.
- ◆ Do NOT use the massage chair when you are wet to avoid electric shock.
- ◆ It is not recommended to use the unit for more than 5 minutes for particular part of the body.
- ◆ Continue to massage on the same part of body at 30 minutes intervals.
- ◆ Never operate this product if water or any foreign object enter into the product, or there is damage to the product.
- ◆ Check the power switch before use to avoid accident.

## SAVE THIS MANUAL

### PRODUCT STRUCTURE DIAGRAM

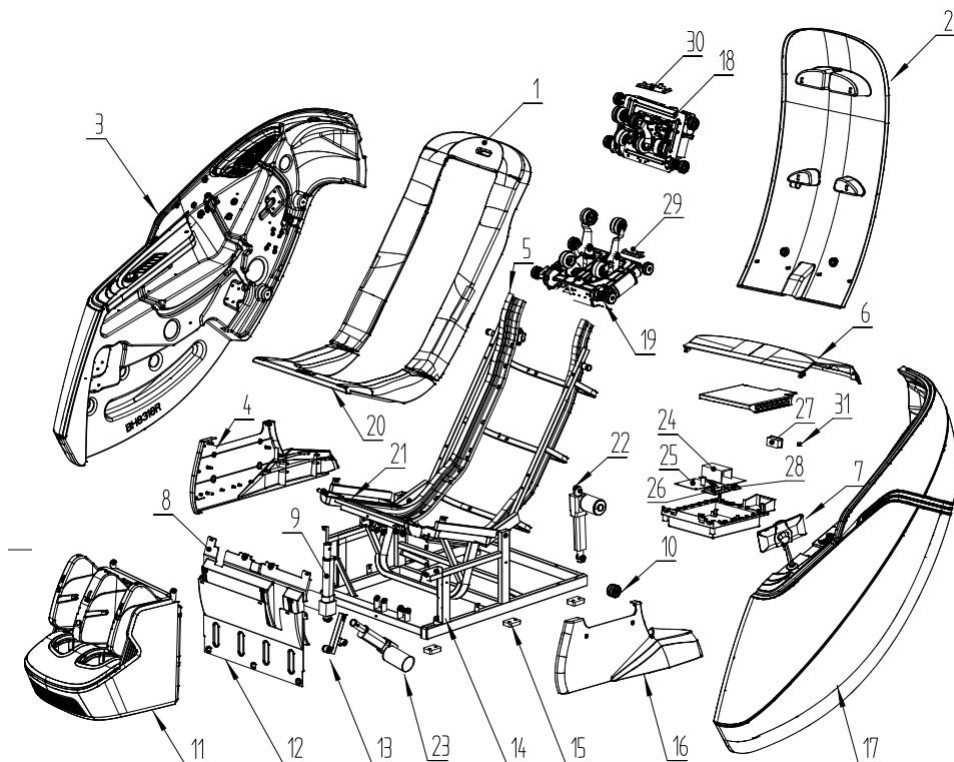


| NO. | Name                         | NO. | Name                           |
|-----|------------------------------|-----|--------------------------------|
| 1   | Backrest                     | 17  | Left Armrest Assembly          |
| 2   | Rear Cover                   | 18  | 3D Mechanical Handset Assembly |
| 3   | Right Armrest Assembly       | 19  | 2D Mechanical Handset Assembly |
| 4   | Right Foot Cover Assembly    | 20  | Seat Surface                   |
| 5   | Iron Frame Backrest          | 21  | Seat Cushion Frame             |
| 6   | Distribution Box Assembly    | 22  | Electric Push Rod 200 - 35     |
| 7   | Remote Control               | 23  | Electric Push Rod 280 - 120    |
| 8   | Front Chassis Baffle - Upper | 24  | Switching Power Board          |
| 9   | Electric Push Rod            | 25  | Main Board                     |
| 10  | Caster                       | 26  | Bluetooth Board                |
| 11  | Leg - Beautifying Assembly   | 27  | Power Socket                   |
| 12  | Front Chassis Baffle - Lower | 28  | Charging Step - Down Board     |

|    |                          |    |                     |
|----|--------------------------|----|---------------------|
| 13 | Connecting Rod Assembly  | 29 | Movement A Board    |
| 14 | Iron Frame Seat Frame    | 30 | Movement A Board HX |
| 15 | Foot Pad                 | 31 | Fuse                |
| 16 | Left Foot Cover Assembly |    |                     |



PARTS LIST

|                                                                                                 |                                                                                                 |                                                                                                 |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
|  <p>1PCS</p>   |  <p>1PCS</p>   |  <p>1PCS</p>   |
|  <p>1PCS</p>  |  <p>1PCS</p>  |  <p>1PCS</p>  |
|  <p>2PCS</p> |  <p>2PCS</p> |  <p>2PCS</p> |

## NAME AND FUNCTION OF EACH COMPONENT

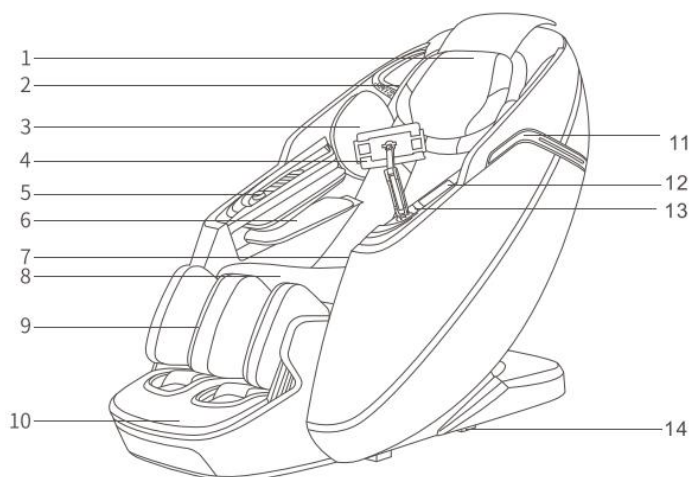


1. Head pillow
2. Speaker
3. Shoulder massage unit
4. Controller
5. Shortcut buttons
6. Armrest massage unit
7. Health detection device
8. Seat cushion
9. Leg massage unit
10. Foot massage unit
11. Atmosphere lights
12. Wireless charger
13. USB
14. Bottom plate





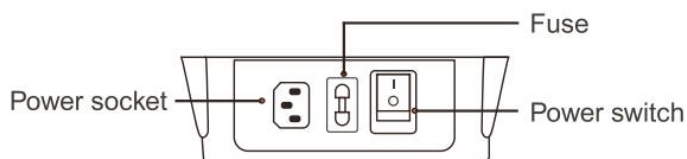
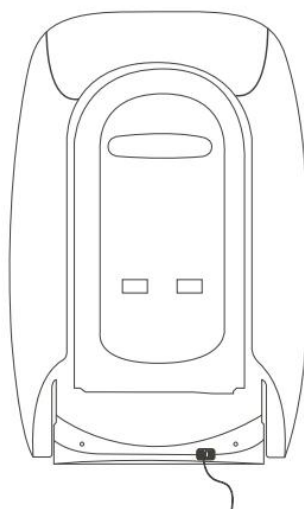



## INSTALLATION OF MASSAGE CHAIR

1. Unpack the carton and take all massage chair units out of the carton.

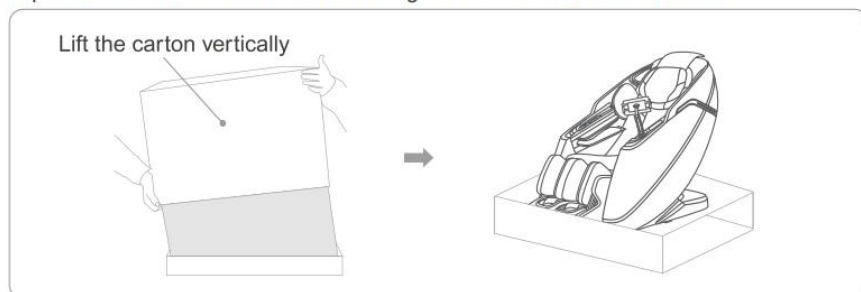

2. Insert the lower end of controller stand into the socket and turn clockwise to secure the stand into place, connect the controller connectors.
3. Place the control panel on the tablet holder.
4. Connect the legs to the massage chair (as shown below)

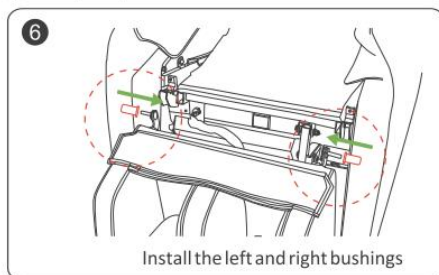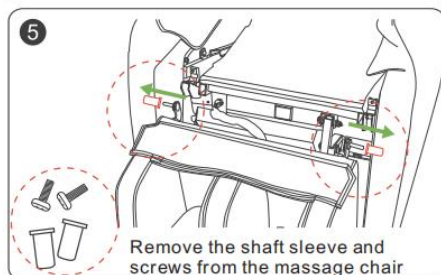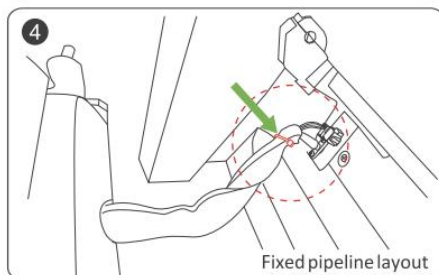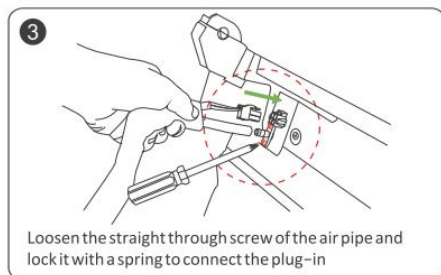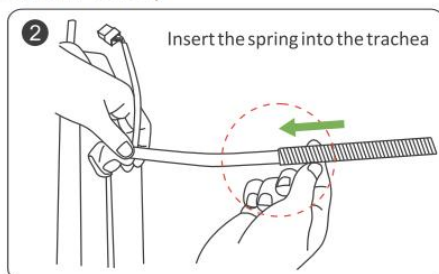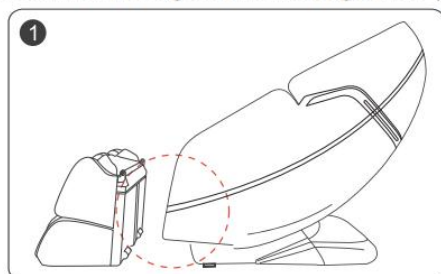

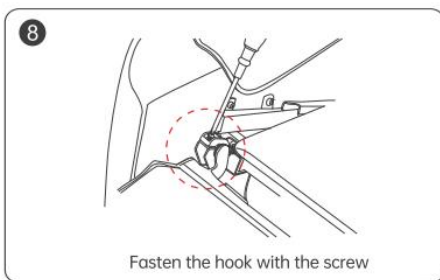


5. Plug the power cord into the chair and connect to the power outlet, turn on the main power switch, you are set to go.

## MOVING THE MASSAGECHAIR

Push down on the backrest and tilt the chair about 45° (see right figure), roll the chair on its casters to the desired location.


### Attention!

- Do not move the chair when there is user inside.
- Moving the chair may scratch the floor, we recommend placing a piece of carpet or softmat underneath it.
- Please hold the backrest firmly when moving the massage chair to avoid falling.

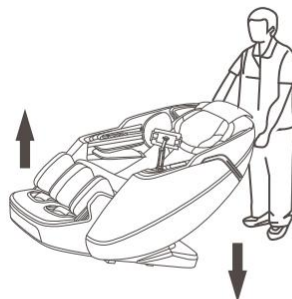

### PLACING THE MASSAGE CHAIR


- Please allocate clearance to the front and back(a minimum 10-centimeter clearance behind the backrest and 25-centimeter clearance in front of the leg unit) of the product. (see right figure)

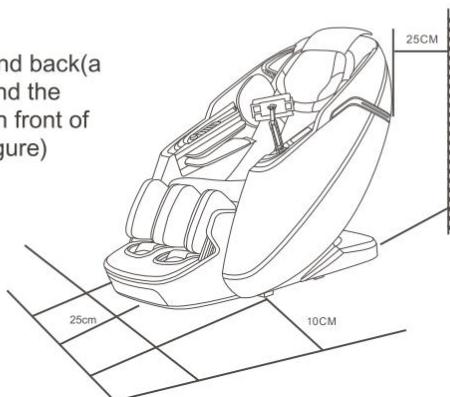

## BUTTON DISTRIBUTION OF CONTROL PANEL



## CONTROLLER INSTALLATION INSTRUCTIONS

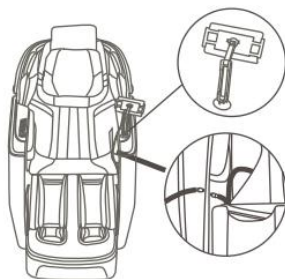

- Insert the lower end of tablet holder into the socket and turn clockwise to secure the holder into place.
- Lift up the seat cushion, find the controller connector port, connect the controller connector to the port, and screw it tightly;
- Place the control panel on the tablet holder, then the controller installation is complete.
- Do not spill water or other liquids on the massage chair or controller.
- Do not operate with wet hands.
- Do not sit on the controller, or drop it, step on it, or forcibly pull the controller's wires.
- Do not press and touch the panel with sharp or hard objects. (Otherwise, it may cause damage)

## HOW TO USE

### 1.Shortcut Button




- Power button: Long press this button to turn on and off the power supply; Short press this button to pause or resume massage
- 4D strength control: Turn the control clockwise to increase the 4D strength and turn anticlockwise to decrease the 4D strength.
- Auto mode: Short press this button to switch between the first 5 auto modes on the screen
- Heating: Press this button to turn on the heating on the waist and leg, and press this button again to turn off the heating function.
- Backrest up: Press and hold to raise the backrest, and release the button to stop.
- Backrest down: Press and hold to recline the backrest, and release the button to stop.
- Calf up: Press and hold to raise the footrest unit, and release the button to stop.
- Calf down: Press and hold to lower the footrest unit, and release the button to stop.

#### Audio Function

Bluetooth: You may turn on Bluetooth on your mobile device, choose "BH-8318" to pair. You can enjoy music when Bluetooth is connected.


## 2. Power-on Interface

Press the "⏻" button on the controller to power on. Enter the power on interface, select the corresponding icon, and enter the corresponding operation mode.

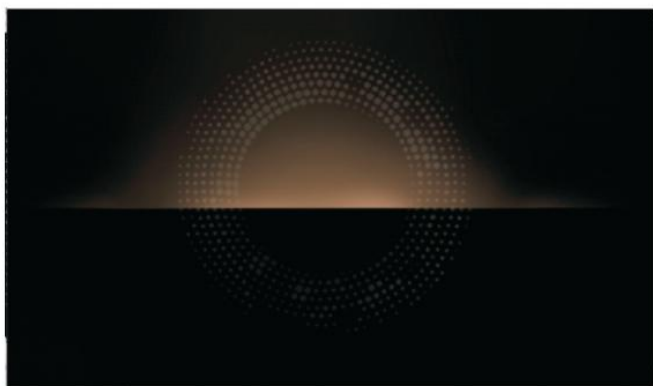


## 3. Startup Procedure

Once powered on, the massage chair will initiate a self-check process on its interface.

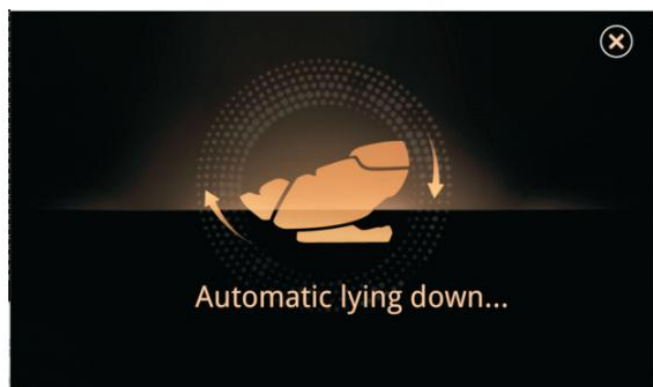


#### 4. Smart Posture Detection

Upon startup, the chair initiates the smart posture detection process. This function automatically adapts the massage position to the user's body size for optimal comfort. Press "▶" to pause the detection, "✕" to skip it, and "⏻" to power down directly.

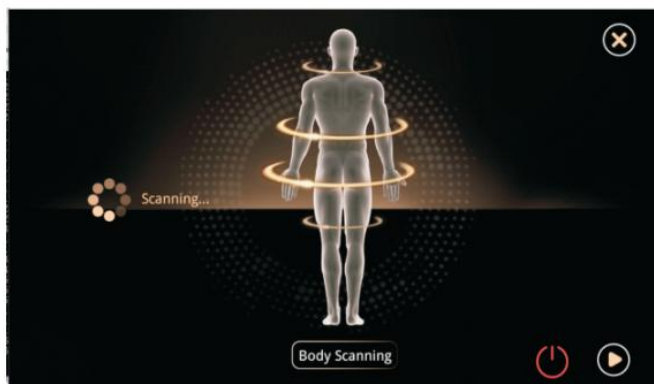

#### 5. Shoulder Position Detection

After the posture detection is completed, the massage chair will automatically enter the shoulder position detection. Then, use the "Up/Down" buttons to control the upward and downward movement of the rollers. When the rollers are in the ideal position, press "ok" to confirm the position, "▶" to pause the detection, "✕" to skip the detection, and "⏻" to shut down directly.

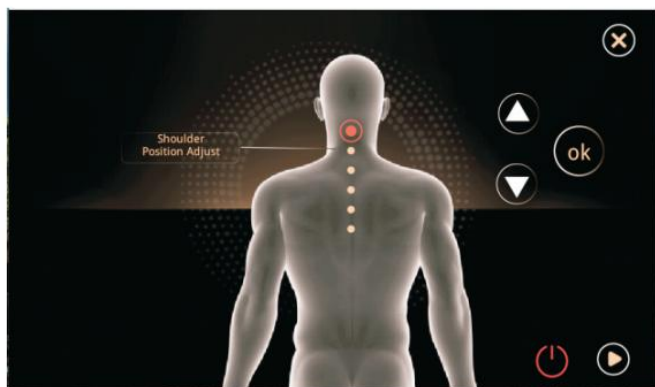

## 6. Techniques

In manual mode, the upper or lower movement can be selected; Upper Poller: 11 techniques (4D technique can be combined with 5 other techniques) and 3 massage widths, allowing manual adjustment of speed, 4D intensity, and massage intensity below; Down Poller: 6 techniques and 3 massage widths, allowing manual adjustment of speed and massage intensity below;



## 7. Focus Zone

In manual mode, press the "Focus Zone" button to choose among Spot, Region, Whole Body. The position of the massage balls can be adjusted up and down using "▲" and "▼" buttons. (Upper Roller and Down Roller, operate in the same steps on their respective interfaces)



## 8. Airbag Massage

Enter the manual mode and select from various airbag positions for Calf, Arm, and Shoulder.



## 9. Sitting Posture Adjustment

Enter the sitting posture adjustment page by clicking the button. There are three levels of zero gravity mode. The backrest up&down, leg extend&retract, leg up & down and calf kneading switch can be freely adjusted. Press the "+" and "-" buttons to adjust the lifting angle of the entire machine.




## 10. Settings

Enter the settings interface and adjust the brightness, ambient music volume, Bluetooth on/off, ambient light on/off, screen off time, and massage time.




## 11. Health Detection

Find the healthy button and click it to enter the health detection page. The massage chair will slowly reset. Then, please completely cover the detection device with your fingertip. Do not use strong intensity or leak light. After 20 seconds, the test will complete and the page will show various health data.

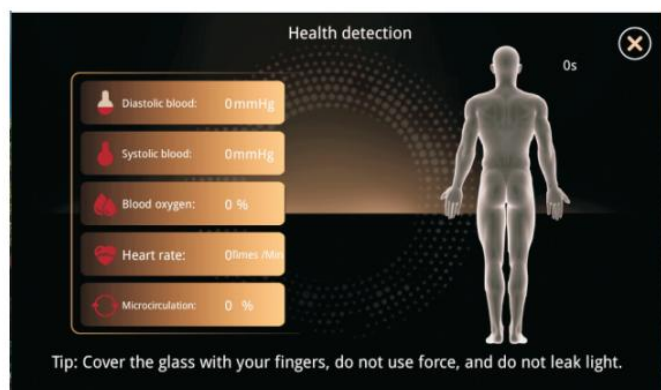

## 12. Shutdown Interface

Click "⏻" to enter the shutdown interface and perform massage chair reset.

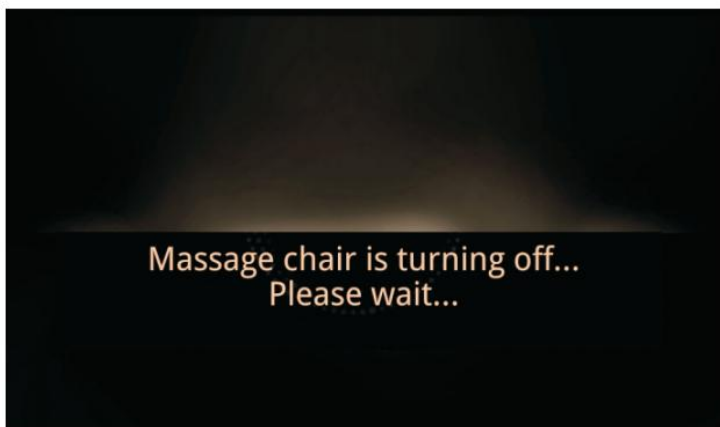

### CAUTIONS

- When adjusting the leg massage unit, please do not sit in the massage chair. Pressing down suddenly on the leg component can cause damage to the mechanism.
- Moreover, it may even cause the chair to overturn, resulting in unexpected injuries.
- Before sitting in the massage chair, please ensure that the backrest is in an upright position. Adjust the recline angle according to personal preferences after sitting.
- Do not place hands or objects in the gap between the seat and the leg unit to prevent potential injuries.
- When adjusting the angle, make sure there are no obstacles or small animals behind or under the backrest and leg unit.

## Flat Button Functions Description



On/Off key

Press this key to enter the power on state. Press again to turn off the device.

## Tablet Automatic Program Description



**Smart Massage:** Five automatic programs targeting different body areas, including Shoulder & Neck Massage, Waist & Hip Massage, Spine Care, Joint Care, Leg Care, etc.



**Shoulder & Neck Massage:** Unique massage techniques targeting the shoulders and neck, effectively relieving shoulder and neck soreness and improving fatigue.



**Waist & Hip Massage:** Unique massage techniques targeting the waist and hips, effectively relieving waist and hip soreness and improving lower back fatigue.



**Spine Care:** Unique massage techniques targeting the spine, effectively relieving spinal soreness and improving spine fatigue.



**Joint Care:** Unique massage techniques targeting the joints, effectively relieving joint soreness and improving joint fatigue.



**Leg Care:** Unique massage techniques targeting the legs, effectively relieving leg soreness and improving leg fatigue.



**Health Care:** Five automatic programs simulating various scenarios from daily life, including Stress Relieving, Energy, Deep Massage, Sports Recovery, Brain Refresh, etc.



**Stress Relieving:** Gentle massage strength. Comforts the whole body, promotes blood circulation, relaxes the body and mind, effectively relieves various discomforts caused by long and continuous work, and eliminates overall fatigue.



**Energy:** Gentle and comfortable massage to relieve physical fatigue, relax the body and mind, and boost vitality.



**Deep Massage:** Combining kneading and acupressure techniques, as if with gentle hands, deeply massages to alleviate exhaustion and stress.



**Sport Recovery:** Relieves post-exercise muscle soreness, discomfort in the neck, shoulders, back, waist, and legs, and helps muscles recover after exercise.



**Brain Refresh:** Intense massage focused on the shoulders and neck, targeting gravitational pressure, and unblocking the body and mind.



**Relaxation:** Five combination modes targeting different body needs, including Comfort Massage, Quick Massage, Stretch Massage, Shiatsu Massage, and Airbag Massage.



**Comfort Massage:** Moderate massage strength, specially designed for female users, providing a massage program that shapes a graceful and light figure without burden.



**Quick Massage:** Quick and precise combination massage, saving time and relaxing the body.



**Stretch Massage:** Full-body stretching to cater to users who need to stretch their muscles, relieving fatigue and restoring body vitality and flexibility.



**Shiatsu Massage:** Utilizing kneading and acupressure massage techniques, as if gentle hands are providing a deep massage to soothe weariness and tension.



**Airbag Massage:** Gentle and sequential compression by airbags, progressively providing deep relaxation and decompression throughout the entire body.



**VIP:** Four sets of simulated automatic modes for different usage scenarios, including Good-night Sleep, Yoga Massage, Office Regimen, and TV Mode.



**Good-night Sleep:** Gentle massage with coordinated backrest elevation and rocking, alleviating fatigue and promoting a restful sleep, easing tension for a serene slumber. (In this mode, the control panel switches to sleep mode picture and turns on the background music.)



**Yoga Massage:** Incorporates stretching movements for the body and legs, suitable for users who need to stretch their entire body muscles, providing moderate pressure to effectively restore body vitality and flexibility. (Background music is automatically switched on in this mode)



**Office Regimen:** Delicate massage with gentle strokes covering the entire body, promoting blood circulation, and inducing relaxation.



**TV Mode:** Soft massage suitable for older users, effectively rejuvenating the body and improving blood circulation.



**Special:** Three sets of simulated automatic modes featuring different massage techniques from various countries, including Thai Massage, Chinese Massage, and Swedish Massage.



**Thai Massage:** Simulates the techniques used in Thai massage, with a stronger intensity, providing a relaxing experience for the entire body.



**Chinese Massage:** Applies moderate pressure and combines various Chinese Tui Na techniques, such as acupressure, kneading, tapping, and patting, to deeply relax the muscles of the back.



**Swedish Massage:** Gradually applies varying levels of pressure to the entire body, effectively alleviating muscle soreness and promoting the recovery from fatigue.

## **AI Voice Control**

- Supported Language: English
- To wake up the "Voice Module," users should speak "Hello Hello" into the microphone. When the massage chair is in the shutdown mode, saying any of the following commands within 10 seconds will directly activate the massage.
- Voice Wake-up Commands. Turn voice on or off in Setting.

### **NOTE:**

- ◆ **When using the voice control function, the speech speed should not be too fast, and the voice commands should be issued according to the voice control entries.**
- ◆ **After each successful use of the voice-activated entry, it is recommended to give out the voice command after 1-2 seconds.**

| Command                | Answer                    |
|------------------------|---------------------------|
| Hello Hello            | I am here                 |
| Power on               | OK, Power on              |
| Power off              | OK,Power off              |
| Shoulder & NeckMassage | OK,Shoulder & NeckMassage |
| Waist & HipMassage     | OK,Waist & HipMassage     |
| Spine Care             | OK,Spine Care             |
| Joint Care             | OK,Joint Care             |
| Leg Care               | OK,Leg Care               |
| Stress Relieving       | OK,Stress Relieving       |
| Energy                 | OK,Energy                 |
| Deep Massage           | OK,Deep Massage           |
| Sport Recovery         | OK,Sport Recovery         |
| Brain Refresh          | OK,Brain Refresh          |
| Comfort Massage        | OK, Comfort Massage       |
| Quick Massage          | OK, Quick Massage         |
| Stretch Massage        | OK,Stretch Massage        |
| Shiatsu Massage        | OK,Shiatsu Massage        |
| Airbag Massage         | OK,Airbag Massage         |
| Good-night Sleep       | OK, Good-night Sleep      |
| Yoga Massage           | OK,Yoga Massage           |
| Office Regimen         | OK,Office Regimen         |
| TV Mode                | OK,TV Mode                |
| Thai Massage           | OK,Thai Massage           |
| Chinese Massage        | OK, Chinese Massage       |
| Swedish Massage        | OK,Swedish Massage        |

## TROUBLESHOOTING

| Symptoms                                         | Possible Causes                                                                                                                                                                                                                                          | Possible Solutions                                                          |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| Mechanism stops moving after work                | After the massage, the mechanism will stop working immediately in order not to affect the user's health                                                                                                                                                  | No need to take any measures                                                |
| Noise is heard while in use                      | <ul style="list-style-type: none"> <li>* Kneading sound of mechanism</li> <li>* Mechanical parts rubbing against the cloth cover</li> <li>* Air compressor motor or other mechanical parts</li> <li>* Up&amp;down sounds of leg massage units</li> </ul> | Normal Sound, no need to take any measures                                  |
| Appliance does not start                         | The power cord is not secured into the socket                                                                                                                                                                                                            | Secure it into a well functioned electrical outlet                          |
|                                                  | Power switch is off                                                                                                                                                                                                                                      | Turn on the switch                                                          |
|                                                  | The fuse is blown                                                                                                                                                                                                                                        | Replace only with a fuse of same type and rating                            |
| Massage roller stops                             | Massage roller is experiencing too much pressure                                                                                                                                                                                                         | Reduce the pressure on massage roller or restart the chair                  |
| Backrest or footrest can not raise or recline    | Excessive load has been pressed on the backrest or legrest                                                                                                                                                                                               | Reduce the load and try again                                               |
| The power cord and power plug are abnormally hot | Abnormal problem. Turn off the power and unplug the plug immediately                                                                                                                                                                                     | Stop using the product immediately and contact after-sales service for help |

### Note:

1. If problem remains, please contact the dealer for maintenance.
2. Do not attempt to repair this product yourself; our company shall not be liable for the injury or damage caused by any servicing without authorization.
3. Thank you for your cooperation.

## PRODUCT PARAMETER

|                            |                                       |            |
|----------------------------|---------------------------------------|------------|
| <b>Product Name</b>        | Massage Chair                         |            |
| <b>Model No.</b>           | BH-8318                               |            |
| <b>Rated Voltage</b>       | 110-120VAC                            | 220-240VAC |
| <b>Rated Frequency</b>     | 60Hz                                  | 50HZ       |
| <b>Rated Power</b>         | 150W                                  |            |
| <b>Product Size</b>        | Upright Condition:<br>1605x750x1225mm |            |
| <b>Net Weight</b>          | 105.5kg                               |            |
| <b>Wire Length</b>         | 1500mm                                |            |
| <b>Maximum User Weight</b> | 350lbs                                |            |

\* Products such as specifications, appearance, and design are subject to modification without prior notice.

## USE WARNING

1. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children shall not play with the appliance.
4. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
5. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
6. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
7. Please use the product according to the intended use, warn of potential injury from misuse.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.



