



Upgrade · The Home Creator Way

UTILITY CARTS USER MANUAL

MODEL: SYTCSS10 / SYTCSS11

VEVOR Support Center



SYTCSS10



SYTCSS11

MODEL: SYTCSS10 / SYTCSS11



Photo for reference

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

PRODUCT PARAMETERS

Specifications of SYTCSS10		Specifications of SYTCSS11	
Load Capacity:	136kg	Load Capacity:	226kg
Upper Platform Size:	620*410*60mm	Upper Platform Size:	790*490*55 mm
Castor Size:	100mm	Castor Size:	100mm
Dimensions (L x W x H):	880*410*990 mm	Dimensions (L x W x H):	1060*490*980 mm

- 1.The product complies with relevant standards and regulations.
Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
- 2.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 3.This Hoist shall not be used by children. Keep the Hoist and its cord out of reach of children.
- 4.This appliance is intended to be used in household and similar applications such as: Warehousing & Logistics&Manufacturing & Factories&Office & Facility &Management Agriculture & Gardening&Residential & Moving Services Event Management
- 5.Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
- 6.Please use the product according to the intended use, warn of potential injury from misuse.

WARNING:

Please read this manual carefully before using the product. Failure to do so may result in serious injury.

ASSEMBLY PRECAUTIONS

1. Assemble needs to follow these instructions. Improper assembly can cause personal injury and/or property damage
2. Do not assemble when tired or under the influence of alcohol, drugs, or medication.
3. Weight capacity and other product capabilities only apply to a wholly and correctly assembled product.
4. Do not overload the cart. See specifications for load capacity (Distributed evenly).
5. Keep the assembly area clean and well-lit.
6. Keep bystanders out of the area during assembly.
7. The weight of the plate is heavy; pay attention to the installation to avoid hurting it, and if necessary, find someone to assist with the installation.

USE PRECAUTIONS



WARNING: TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:

1. This product is not a toy. Do not allow children to play with or approach this item.
2. Use as intended only. Do not sit or stand on the product.
3. Inspect before every use. Do not use it if parts are loose or damaged.
4. Use on flat, level, and hard surfaces only.
5. Do not exceed the listed weight capacity. Tighten all knobs securely before applying load. Be aware of dynamic loading! The sudden load movement may briefly create an excess load, causing product failure.
6. When the heavy load is moving for a long time, it is necessary to check whether the screw is loose to avoid the body shaking when moving.

Part list

KEY	Description	QTY	
1	Handle	2	
2	Top shelf	1	
3	Aluminium rod	8	
4	Middle shelf	1	
5	Bttom shelf	1	
6	Caster	2	
	Caster with break 2PCS	2	
7	ASSEMBLY CAP	1	


ASSEMBLY STEPS

Remarks:


Before assembly, please: 1. Read this instruction carefully. 2. Prepare A rubber hammer (Not included). 3. The three shelves are different. Note the corner fixings on each and match them to the assembly diagram. Ensure all shelves face the same way. Ensure all joints are flush - a rubber mallet may be required.

Step 1. Wedge 4PCS aluminium rod above the bottom shelf.

Step 2. Wedge middle shelf on an aluminium rod

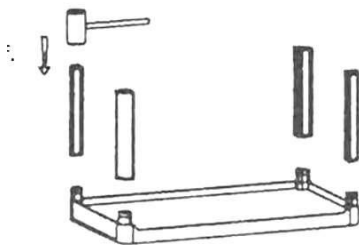


Step 1

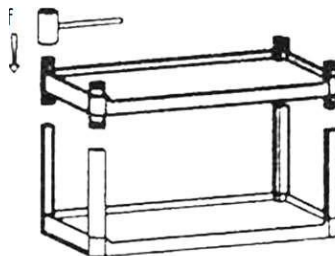


Step 2

Step 3. Wedge the other 4Pcs aluminium rod above the middle shelf.

Step 4. Wedge top shelf.

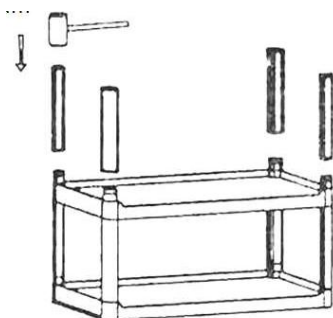


Step 3

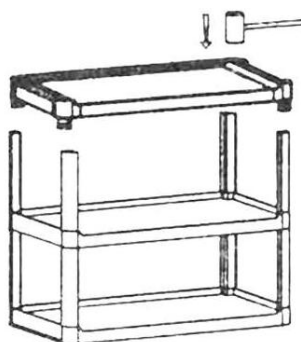

Step 4

Step 5. Wedge the 4pcs caster.

Step 6. Turn over the cart, then plug in the 2PCS handle.

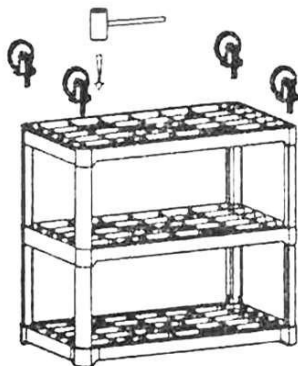

Step 5



Step 6

Step 7. Assembly completed.



ASSEMBLY NOTES

- Use a soft rubber mallet to assembly pressure-fit interlocking components. This may require significant force.
- Orient the TOP SHELF and BOTTOM SHELF so that the shorter-lipped edges are on the same side of the Cart.
- Place ASSEMBLY CAP on top of VERTICAL POSTS and SHELF comers before striking with a mallet to avoid damage.
- Alternate between posts when striking with a mallet to seat all components evenly. This will ensure product integrity and secure fit between parts.
- Snug HANDLES by alternating from side to side of each handle until fully seated in position.
- Position CASTERS with Brakes in corners of the Cart with the easiest access to the foot-activated Brakes.

Tools required: Cross-point screwdriver and rubber or wood mallet.

Use the mallet to tap down the parts to ensure they are seated properly before fastening them with screws.

