



TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

Repair Seats

MODEL:XF8W201

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually Saving Half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

Repair Seats

Model:XF8W201



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY PRECAUTIONS

WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Assembly precautions

- Assemble only according to these instructions. Improper assembly can create hazards.
- Keep children, pets, and bystanders out of the area during assembly. Distractions can cause you to lose control of tools, injuring yourself or others.
- Weight capacity and other product capabilities apply to properly and completely assembled product only. Do not use if incompletely or improperly assembled.

Use precautions

- This product is not a toy. Do not allow children to play with or near this item and store out of reach of children.
- Use the stool and accessories as intended and in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the stool for operations different from those intended could result in a hazardous situation.
- Inspect before every use; do not use if parts are loose or damaged.
- Do not exceed weight capacity of 300 lbs. (136kg).
- NOTE: Be aware of dynamic loading! Sudden shifts in the load may briefly create excess load, which may result in product failure.
- Store idle equipment. When not in use, this product must be stored in a dry location to inhibit rust.
- The warnings, cautions, and instructions discussed in this instruction manual can not cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product but must be supplied by the operator.


WARNING: Do not stand on Stool Pad. Serious injury can occur.

TECHNICAL PARAMETERS

Model	XF8W201
Rated Load (lbs)	300
Seat size(mm)	360*360
Product size (mm)	480*480*1030/1140

PART LIST

Part	Description	Qty	Part	Description	Qty
A	Backrest	1	J	Small Bolt	2
B	Seat	1	K	Allen head screw	4
C	Pneumatic Cylinder	1	L	40MM Philips screws	4
D	Center Hub	1	M	35MM Philips screws	4
E	Round Plate	1	N	M6 Nut	12
F	Leg	4	O	Foot	4
G	Backrest Tube	2	P	open - end wrench	1
H	Upper Outer Ring	1	Q	hex key	1
I	Lower Inner Ring / Footrest	1			

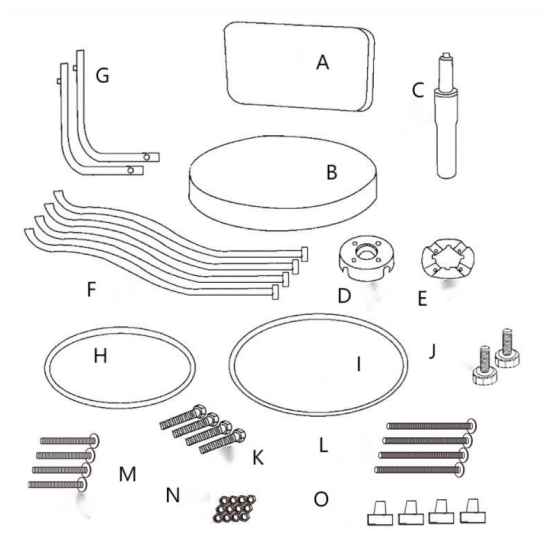

INSTRUCTION FOR USE

Step 1 Fix the foot (O) to the leg (F).

Step 2 Attach the legs (F) to the center hub (D) with bolts (K). Assemble the round plate (E) to the hub with nuts(N).


Step 3 Attach the upper outer ring (H) with bolts (M) and nuts (N).

Step 4 Attach the footrest ring (I) with bolts (L) and nuts (N).

Step 5 Slide the backrest tube (G) into the seat (B), fasten with bolts (J).

Step 6 Slide the backrest (A) into the tubes (G) until knobs lock in place.

Step 7 Slide the pneumatic cylinder (C) into the center hub (D) and seat (B).

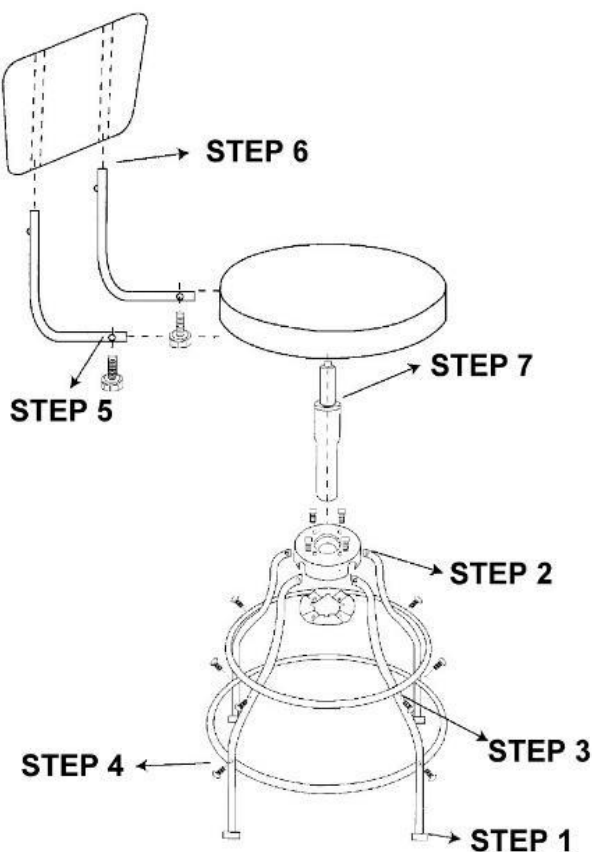

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support